

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions for vehicles with start/stop system	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	4
1.5 Checking vacuum system	4
2 Overview of fitting locations - injection system	6
3 Fuel system - exploded view	15
4 Filling and bleeding fuel system	18
5 Air cleaner	19
5.1 Exploded view - air cleaner	19
5.2 Removing and installing engine cover panel	20
5.3 Removing and installing air filter element	21
5.4 Removing air cleaner (bottom section)	22
6 Intake manifold	24
6.1 Intake manifold with attached components - exploded view	24
6.2 Removing and installing intake manifold	24
6.3 Removing and installing fuel rail	28
7 High-pressure pump	32
7.1 Removing and installing high-pressure pump	32
7.2 Performing first fuel filling after installing high-pressure pump	34
8 Injectors	36
8.1 Checking injectors	36
8.2 Performing adaption of correction values for injectors	36
8.3 Checking return flow rate of injectors with engine running	37
8.4 Checking return flow rate of injectors at starter cranking speed	39
8.5 Checking for injectors sticking open	41
8.6 Removing and installing injectors	43
9 Senders and sensors	50
9.1 Removing and installing air mass meter G70	50
9.2 Removing and installing intake manifold flap motor V157	51
9.3 Installing high-pressure pipes	53
9.4 Checking pressure retention valve in fuel return line	55
9.5 Checking fuel system for leaks	56
9.6 Checking fuel pressure (low pressure) system	57
9.7 Checking delivery rate of fuel pumps	58
9.8 Checking fuel pressure regulating valve N276	60
9.9 Removing and installing fuel pressure regulating valve N276	61
9.10 Removing and installing fuel pressure sender G247	63
10 Lambda probe	67
10.1 Exploded view - Lambda probe and exhaust gas temperature sensors	67
10.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	68
10.3 Removing and installing exhaust gas pressure sensor 1 G450	69
11 Engine control unit	71
11.1 Wiring and component check with test box V.A.G 1598/42	71
11.2 Renewing engine control unit J623	73
28 - Glow plug system	77
1	77
1.1 Removing and installing glow plugs	77

1.2	Removing and installing engine speed sender G28	78
1.3	Removing and installing Hall sender G40	79