

Contents

00	Technical data	1
1	Safety precautions	1
1.1	Safety precautions when working on the fuel system	1
1.2	Safety precautions when working on vehicles with start/stop system	2
1.3	Safety precautions when using testers and measuring instruments during a road test	2
2	Repair instructions	3
2.1	Rules for cleanliness	3
2.2	Test conditions	3
2.3	Contact corrosion	3
20	Fuel supply system	5
1	Fuel tank	5
1.1	Exploded view - fuel tank	5
1.2	Draining fuel tank	11
1.3	Removing and installing fuel tank	20
2	Fuel delivery unit/fuel gauge senders	40
2.1	Exploded view - fuel delivery unit/fuel gauge senders	40
2.2	Removing and installing fuel delivery unit/fuel gauge sender	42
2.3	Checking fuel gauge sender G	50
2.4	Removing and installing fuel gauge sender G	54
2.5	Checking fuel gauge sender 2 G169	57
2.6	Removing and installing fuel gauge sender 2 G169	59
3	Fuel filter	63
3.1	Exploded view - fuel filter	63
3.2	Removing and installing fuel filter	63
4	Activated charcoal filter system	66
4.1	Connection diagram - activated charcoal filter system	66
4.2	Exploded view - activated charcoal filter system	69
4.3	Removing and installing activated charcoal filter	71
4.4	Tank leak diagnostic system	72
4.5	Performing tank leak diagnosis	73
4.6	Removing and installing fuel system diagnostic pump	75
5	Fuel pump	76
5.1	Checking fuel system pressurisation pump G6	76
5.2	Checking fuel pump delivery rate	81
5.3	Checking fuel pressure and residual pressure (up to high-pressure pump)	95
5.4	Checking suction-jet pump	98
5.5	Removing and installing suction-jet pump	98
5.6	Checking fuel pump control unit J538	104
5.7	Removing and installing fuel pump control unit J538	105
5.8	Adapting fuel pump after renewing fuel delivery unit	109
6	Accelerator mechanism	111
6.1	Exploded view - accelerator pedal module	111
6.2	Removing and installing accelerator pedal module with accelerator position sender G79 / G185	112