

Contents

00	Technical data	1
1	Safety precautions	1
1.1	Safety precautions when working on the fuel system	1
1.2	Safety precautions when working on vehicles with start/stop system	2
1.3	Safety precautions when using testers and measuring instruments during a road test	2
2	Repair instructions	3
2.1	Rules for cleanliness	3
2.2	Test conditions	3
2.3	Contact corrosion	3
20	Fuel supply system	5
1	Fuel tank	5
1.1	Exploded view - fuel tank	5
1.2	Draining fuel tank	6
1.3	Removing and installing fuel tank	8
2	Fuel delivery unit/fuel gauge senders	14
2.1	Exploded view - fuel delivery unit/fuel gauge senders	14
2.2	Removing and installing fuel delivery unit/fuel gauge sender	15
2.3	Checking fuel gauge sender G	20
2.4	Removing and installing fuel gauge sender G	21
2.5	Checking fuel gauge sender 2 G169	22
2.6	Removing and installing fuel gauge sender 2 G169	24
3	Fuel filter	28
3.1	Exploded view - fuel filter	28
3.2	Removing and installing fuel filter	29
4	Fuel pump	30
4.1	Exploded view - supplementary fuel pump V393	30
4.2	Checking fuel system pressurisation pump G6	31
4.3	Checking suction-jet pump	33
4.4	Removing and installing suction-jet pump	34
4.5	Removing and installing supplementary fuel pump V393	40
5	Accelerator mechanism	42
5.1	Exploded view - accelerator pedal module	42
5.2	Removing and installing accelerator pedal module with accelerator position sender G79 / G185	42