001	- Basic equipment	1-32
	Basic equipment	1
	2. Battery, Starter, Battery isolation igniter	2
	3. Alternator, Suppression filter	3
	4. Fuse 1 on fuse holder C	4
	5. Terminal 50 voltage supply relay, Relay for power sockets	5
	6. Ignition/starter switch, Steering column electronics control unit	6
	7. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise	7
	control system switch, Horn plate, Steering column electronics control unit	•
	8. Steering column electronics control unit	8
	9. Onboard supply control unit, Terminal 15 voltage supply relay 2	9
	<ul><li>10. Onboard supply control unit</li><li>11. Light switch, Switch and instrument illumination regulator, Onboard supply control unit</li></ul>	10 11
	12. Light switch, Headlight range control regulator, Daytime running lights switch, Treble horn,	12
	Bass horn, Horn relay, Onboard supply control unit	12
	13. Operating unit in front of centre console, Onboard supply control unit	13
	14. Rain and light sensor, Headlight washer system relay, Wiper motor control unit, Onboard supply	14
	control unit, Washer pump relay, Washer pump	
	15. Onboard supply control unit, Left fog light bulb, Left headlight range control motor	15
	16. Onboard supply control unit, Right fog light bulb, Right headlight range control motor	16
	17. Onboard supply control unit, Left brake and tail light bulb, Right brake and tail light bulb	17
	18. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake	18
	light bulb, Right brake light bulb, Right reversing light bulb, Rear left side marker bulb, Rear	
	right side marker bulb, Rear fog light	
	19. Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number	19
	plate light	
	20. Window aerial suppression filter, Heated rear window relay, Onboard supply control unit, Heated	20
	rear window	
	21. Reversing light switch, Onboard supply control unit, Left washer jet heater element	21
	22. Brake light switch, Brake pedal switch, Clutch position sender, Onboard supply control unit	22
	23. Glove compartment light switch, Driver vanity mirror contact switch, Onboard supply control unit,	23
	Terminal 30 voltage supply relay 2, Front left footwell illumination bulb, Front right footwell	
	illumination bulb, Glove compartment light, Driver side illuminated vanity mirror	0.4
	24. Front interior light, Automatic anti-dazzle interior mirror	24
	25. Convenience system central control unit, Tank filler flap locking motor, Automatic anti-dazzle	25
	interior mirror	200
	26. Parking brake contact switch, Convenience system central control unit, Cigarette lighter, 12 V socket, Luggage compartment light	26
	27. Control unit in dash panel insert, Data bus diagnostic interface	27
	28. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	21 28
	29. Control unit in dash panel insert, Radio controlled clock receiver	29
	30. Brake fluid level warning contact, Coolant shortage indicator switch, Washer fluid warning	30
	contact, Ambient temperature sensor, Front left brake pad wear sender, Control unit in dash panel	30
	insert, Brake pad warning lamp	
	31. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel gauge sender 2, Oil level and oil	31
	temperature sender, Control unit in dash panel insert	•
	32. Steering moment sender, Power steering control unit	32
002	- 2.0l petrol engine , BPY,BWA,CDLA,CDLB,CDMA	33-54
	1. 2.0l petrol engine , BPY,BWA,CDLA,CDLB,CDMA	33
	2. Battery, Starter, Battery isolation igniter	34
	3. Alternator	35
	4. Terminal 50 voltage supply relay	36
	5. Engine component current supply relay	37
	6. Suppression filter, Main relay, Engine control unit	38
	7. Engine control unit	39
	8. Engine control unit, Ignition coil 1 with output stage	40
	9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	41
	10. Air mass meter, Accelerator position sender, Engine control unit	42
	11. Throttle valve module, Engine control unit	43
	12. Charge pressure sender, Radiator outlet coolant temperature sender, Intake manifold flap	44
	potentiometer, Fuel pressure sender for low-pressure, Engine control unit	
	13. Hall sender, Intake air temperature sender, Coolant temperature sender, Fuel pressure sender,	45
	Engine control unit	
	14. Engine speed sender, Knock sensor 1, Knock sensor 2, Engine control unit	46
	15. Engine control unit. Charge pressure control solenoid valve. Activated charcoal filter solenoid	47

	valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel pressure regulating	
	valve, Variable intake manifold changeover valve	40
	<ul><li>16. Lambda probe, Lambda probe after catalytic converter, Engine control unit</li><li>17. Brake light switch, Clutch position sender, Engine control unit</li></ul>	48 49
	18. Continued coolant circulation relay, Engine control unit, Fuel system diagnostic pump	50
	19. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan	51
	20. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump	52
	control unit	
	21. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender,	53
	Control unit in dash panel insert	<b>5</b> 4
003	22. Control unit for structure-borne sound, Actuator for structure-borne sound 3 - 3.2l petrol engine , BUB,CBRA	54 55-76
000	1. 3.2l petrol engine , BUB,CBRA	55-76 55
	S. Petrol engine , Bob, Obton     Battery, Starter, Battery isolation igniter	56
	3. Alternator	57
	4. Terminal 50 voltage supply relay	58
	5. Fuse carrier 2	59
	6. Suppression filter, Main relay, Engine control unit	60
	7. Engine control unit, Ignition coil 1 with output stage	61
	8. Engine control unit, Ignition coil 4 with output stage	62 63
	9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 5, Injector, cylinder 6	03
	10. Engine speed sender, Knock sensor 1, Knock sensor 2, Engine control unit	64
	11. Hall sender, Coolant temperature sender, Hall sender 2, Engine control unit	65
	12. Air mass meter, Radiator outlet coolant temperature sender, Sender 1 for secondary air pressure,	66
	Engine control unit	
	13. Accelerator position sender, Throttle valve module, Engine control unit	67
	14. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Heater element for	68
	crankcase breather	60
	<ul><li>15. Lambda probe 2, Lambda probe 2 after catalytic converter, Engine control unit</li><li>16. Continued coolant circulation relay, Engine control unit, Activated charcoal filter solenoid</li></ul>	69 70
	valve 1, Variable intake manifold changeover valve, Camshaft control valve 1, Exhaust camshaft	70
	control valve 1	
	17. Secondary air pump relay, Engine control unit, Secondary air pump motor, Fuel system diagnostic	71
	pump	
	18. Brake light switch, Clutch position sender, Engine control unit	72
	19. Radiator fan control unit, Engine control unit, Radiator fan	73
	<ul><li>20. Fuel pump relay, Electric fuel pump 2 relay, Engine control unit</li><li>21. Oil pressure switch, Coolant shortage indicator switch, Fuel gauge sender, Fuel system</li></ul>	74 75
	pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert	75
	22. Oil level and oil temperature sender, Control unit in dash panel insert	76
004	4 - Dual clutch gearbox 02E	77-81
	1. Dual clutch gearbox 02E	77
	Mechatronic unit for dual clutch gearbox	78
	Clutch temperature sender, Mechatronic unit for dual clutch gearbox	79
	4. Gearbox oil temperature sender, Data bus diagnostic interface, Mechatronic unit for dual clutch	80
	gearbox  5. Salactor layor, Tintrania switch, Salactor layor cancers control unit. Salactor layor lack	81
	<ol> <li>Selector lever, Tiptronic switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display</li> </ol>	01
005	5 - Airbag systems	82-87
	Airbag systems	82
	2. Airbag control unit, Data bus diagnostic interface	83
	3. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag	84
	igniter, Front passenger side airbag igniter 2, Driver side airbag igniter 2	0.5
	4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner	85
	igniter 1, Rear belt tensioner igniter on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	
	5. Driver side belt switch, Side airbag crash sensor on driver side, Front airbag crash sensor for	86
	driver side, Airbag control unit	00
	6. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front	87
	passenger side airbag deactivated warning lamp	
006	6 - Airbag systems (US equipment)	88-94
	Airbag systems (US equipment)	88
	<ol> <li>Airbag control unit</li> <li>Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag</li> </ol>	89 90
	igniter. Driver side airbag igniter 2	90

4. Airbag control unit, Rear belt tensioner igniter on driver side, Side airbag igniter on driver	91
side, Side airbag igniter on front passenger side  5. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side knee airbag	92
igniter, Front passenger side knee airbag igniter 6. Driver side belt switch, Side airbag crash sensor on driver side, Driver side belt force limiter,	93
Front passenger side belt force limiter, Driver side seat position sensor, Airbag control unit 7. Front passenger side belt switch, Pressure sensor for seat occupied recognition, Seat belt force	94
sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit 007 - Air conditioning system	95-102
1. Air conditioning system	95
2. Climatronic control unit	96
3. Fresh air blower control unit, Climatronic control unit, Fuse 8 on fuse holder B, Fresh air blower	97
<ol> <li>High-pressure sender, Climatronic control unit, Air conditioner compressor regulating valve</li> <li>Climatronic control unit, Centre flap control motor, Air flow flap control motor, Air</li> </ol>	98 99
recirculation flap control motor	99
6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor,	100
Right temperature flap control motor	
7. Sunlight penetration photosensor, Left footwell vent temperature sender, Evaporator output temperature sender, Front right chest vent temperature sensor, Climatronic control unit	101
8. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit	102
008 - Convenience system	103-122
1. Convenience system	103
2. Driver door control unit	104 105
Driver door control unit, Central locking SAFELOCK function warning lamp     Driver side central locking lock unit, Driver door control unit	105
5. Alarm system off switch, Driver door control unit	107
6. Operating unit for window regulator in driver door, Driver door control unit	108
7. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver	109
side window regulator motor	
8. Mirror adjustment switch, Driver door control unit	110
9. Driver side interior locking button for central locking system, Driver door control unit, Driver	111
side door interior handle illumination bulb, Driver side door warning lamp, Front left entry light 10. Driver door control unit, Driver side mirror adjustment motor	112
11. Front passenger door control unit	113
12. Front passenger side central locking lock unit, Front passenger door control unit	114
13. Front passenger side interior locking button for central locking system, Front passenger door	115
control unit, Front passenger side door interior handle illumination bulb, Front right entry light,	
Front passenger side door warning lamp	440
14. Window regulator switch in front passenger door, Front passenger door control unit	116 117
15. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	117
16. Onboard supply control unit	118
17. Light switch, Bonnet contact switch, Onboard supply control unit	119
18. Rear lid contact switch for anti-theft alarm, Glass breakage sensor for rear window, Convenience	120
system central control unit, Rear lid central locking motor, Tank filler flap locking motor	
19. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Aerial amplifier	121
20. Adjustable rear spoiler switch, Convenience system central control unit 009 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control	122 123-128
system (TCS) and electronic stabilisation program (ESP)	123-120
Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system	123
(TCS) and electronic stabilisation program (ESP)	
2. ABS control unit, Fuse 2 on fuse holder D	124
3. TCS and ESP button, Brake light switch, Brake pressure sender 1, ABS control unit	125
4. Front right speed sensor, Rear left speed sensor, ABS control unit	126
<ol> <li>ESP sensor unit, Brake servo vacuum sender, ABS control unit, ABS hydraulic unit</li> <li>ABS control unit, Tyre Pressure Monitoring System control unit 2</li> </ol>	127 128
010 - Tyre Pressure Monitoring System (7K6)	129-132
1. Tyre Pressure Monitoring System , (7K6)	129
2. Tyre Pressure Monitoring System control unit 2	130
3. ABS control unit, Tyre Pressure Monitoring System control unit 2, Tyre Pressure Loss Indicator	131
warning lamp	400
<ol> <li>Tyre Pressure Monitoring System button, Operating unit in front of centre console, Tyre Pressure Monitoring System control unit 2</li> </ol>	132
011 - Automatic adaptive suspension. adiustable dampers	133-138
	. 20 100

Automatic adaptive suspension, adjustable dampers	133
Electronically controlled damping control unit	134
<ol><li>Shock absorber damping adjustment button, Operating unit in front of centre console,</li></ol>	135
Electronically controlled damping control unit, Shock absorber damping adjustment warning lamp	
4. Front left vehicle level sender, Electronically controlled damping control unit, Front left shock	136
absorber damping adjustment valve	
5. Electronically controlled damping control unit, Front right shock absorber damping adjustment	137
valve	
6. Rear left vehicle level sender, Electronically controlled damping control unit, Rear left shock	138
absorber damping adjustment valve	100
012 - Garage door opener	139-141
Garage door opener  1. Garage door opener	139-141
2. Garage door operating unit, Garage door operation control unit	140
3. Garage door operating unit, Garage door opener button 1	141
013 - Rear parking aid (PDC)	142-144
Rear parking aid (PDC)	142
2. Parking aid control unit, Fuse 7 on fuse holder C	143
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear right parking aid sender,	144
Rear parking aid warning buzzer, Parking aid control unit	
014 - Heated seats	145-147
1. Heated seats	145
2. Heated driver seat regulator, Heated front passenger seat regulator, Climatronic control unit	146
3. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit,	147
Heated seat cushion for front left seat, Heated seat cushion for front right seat	
015 - Electric seat adjustment with no memory function	148-152
Electric seat adjustment with no memory function	148
2. Driver seat rake adjustment switch, Driver seat adjustment thermal fuse 1, Seat longitudinal	149
adjustment motor	450
3. Driver seat lumbar support adjustment switch, Driver seat height adjustment motor	150
Front passenger seat rake adjustment button, Seat longitudinal adjustment motor	151
5. Front passenger seat lumbar support adjustment switch, Front passenger seat height adjustment	152
motor	
016 - Adjustable driver and front passenger seats	153-158
Adjustable driver and front passenger seats	153
2. Driver seat adjustment thermal fuse 1, Driver seat height adjustment motor, Seat longitudinal	154
adjustment motor	
Driver seat backrest limit switch	155
4. Front passenger seat adjustment operating unit, Front passenger seat height adjustment motor,	156
Seat longitudinal adjustment motor	
Front passenger seat backrest limit switch, Front passenger seat adjustment operating unit	157
6. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment	158
switch	130
	159-161
017 - Electrically adjustable lumbar support	
Electrically adjustable lumbar support	159
Driver seat lumbar support adjustment switch	160
Front passenger seat lumbar support adjustment switch	161
018 - CAN bus network	162-170
1. CAN bus network	162
CAN bus network     Connection 1 (powertrain CAN bus, high), in main wiring harness	162 163
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> </ol>	163
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus,</li> </ol>	163 164
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> </ol>	163 164 165
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN</li> </ol>	163 164
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> </ol>	163 164 165 166
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN</li> </ol>	163 164 165
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> </ol>	163 164 165 166 167
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> </ol>	163 164 165 166 167
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> </ol>	163 164 165 166 167 168 169
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> </ol>	163 164 165 166 167 168 169 170
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> </ol>	163 164 165 166 167 168 169 170 171-173
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> </ol>	163 164 165 166 167 168 169 170 171-173 171
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> <li>All-wheel drive control unit, Haldex coupling pump</li> </ol>	163 164 165 166 167 168 169 170 171-173 171 172
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive</li> </ol>	163 164 165 166 167 168 169 170 171-173 171
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> </ol>	163 164 165 166 167 168 169 170 171-173 171 172 173
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control</li> </ol>	163 164 165 166 167 168 169 170 171-173 171 172
<ol> <li>Connection 1 (powertrain CAN bus, high), in main wiring harness</li> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness</li> <li>Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness</li> <li>Connection (high bus), in dash panel wiring harness</li> <li>Connection 1 (infotainment CAN bus, high), in main wiring harness</li> <li>Connection 1 (infotainment CAN bus, low), in main wiring harness</li> <li>Haldex coupling with all-wheel drive</li> <li>Haldex coupling with all-wheel drive</li> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> </ol>	163 164 165 166 167 168 169 170 171-173 171 172 173

<ol> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering</li> </ol>	175 176 177 178 179 180 181-188
light  1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light 2. Onboard supply control unit, Terminal 15 voltage supply relay 2 3. Light switch, Onboard supply control unit 4. Onboard supply control unit, Output module for left headlight, Front left headlight 5. Onboard supply control unit, Output module for left headlight, Output module for right headlight, Front left headlight, Front right headlight	181 182 183 184 185
<ul> <li>6. Onboard supply control unit, Output module for right headlight, Front right headlight</li> <li>7. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit</li> <li>8. Headlight range control unit, Data bus diagnostic interface</li> <li>022 - Multifunction steering wheel</li> <li>1. Multifunction steering wheel</li> <li>2. Steering column electronics control unit</li> <li>3. Operating unit in steering wheel, Horn plate, Steering column electronics control unit, Driver</li> </ul>	186 187 188 189-194 189 190
side airbag igniter, Driver side airbag igniter 2 4. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift	192
down, Steering column electronics control unit 5. Ignition/starter switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Steering angle sender, Steering column electronics control unit, Ignition key withdrawal lock solenoid	193
6. Control unit in dash panel insert, Data bus diagnostic interface  023 - Steering wheel with paddles  1. Steering wheel with paddles  2. Steering column electronics control unit  3. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Horn plate, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	194 195-197 195 196 197
<ul> <li>024 - Preparation for radio</li> <li>1. Preparation for radio</li> <li>2. Aerial amplifier</li> <li>3. Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front</li> </ul>	198-200 198 199 200
right bass loudspeaker  025 - Radio with Standard sound system  1. Radio with Standard sound system  2. Data bus diagnostic interface, Radio  3. Digital sound package control unit, Radio, Connection for external audio sources  4. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass	201-210 201 202 203 204
loudspeaker, Centre mid-range and treble loudspeaker 5. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Rear left mid-range and bass loudspeaker	205
<ol> <li>Digital sound package control unit, Radio, Rear right treble loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Radio, CD changer</li> </ol>	206 207
<ul><li>8. Radio</li><li>9. Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 2</li><li>10. Aerial amplifier, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2</li></ul>	208 209 210
<ul> <li>026 - BOSE sound system</li> <li>1. BOSE sound system</li> <li>2. Data bus diagnostic interface, Radio</li> <li>3. Digital sound package control unit, Radio, Connection for external audio sources</li> <li>4. Digital sound package control unit, Radio, Control mid range and trable loudeneador. Microphone</li> </ul>	211-221 211 212 213 214
<ol> <li>Digital sound package control unit, Radio, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass</li> </ol>	215
loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker 6. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Rear left mid-range and bass loudspeaker	216
7. Digital sound package control unit, Radio, Rear right treble loudspeaker, Middle loudspeaker, Rear right mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	217

8. Radio, CD changer	218
9. Radio, iPod holder	219
10. Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 2	220
11. Aerial amplifier, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2	221
027 - Preparation for mobile telephone	222-226
1. Preparation for mobile telephone	222
Telephone transmitter and receiver unit	223
Telephone transmitter and receiver unit, Aerial for Bluetooth, Microphone unit in front roof	224
module	22 1
Telephone transmitter and receiver unit, Mobile telephone, Telephone bracket	225
5. Radio, telephone and navigation system aerial, Aerial amplifier for mobile telephone, Telephone	226
bracket	220
028 - Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	227-229
Preparation for mobile telephone with no hands-free system (infotainment CAN bus)  1. Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	227-22 <del>9</del> 227
Preparation for mobile telephone with no hands-free system (infotairment CAN bus)     Ended a not fuse holder D, Positive connection 1 (15), in interior wiring harness, Positive	228
	220
connection 4 (30), in main wiring harness	220
3. Radio, telephone and navigation system aerial, Telephone aerial, Microphone unit in front roof	229
module, 18-pin connector	000 000
029 - Radio navigation system (RNS-Low)	230-239
Radio navigation system (RNS-Low)	230
2. Control unit with display for radio and navigation	231
3. Control unit with display for radio and navigation, Digital sound package control unit, Data bus	232
diagnostic interface	
4. Control unit with display for radio and navigation, Digital sound package control unit	233
5. Control unit with display for radio and navigation, Digital sound package control unit	234
Control unit with display for radio and navigation, CD changer	235
7. Control unit with display for radio and navigation, iPod holder	236
8. Control unit with display for radio and navigation, iPod holder, Connection for external audio	237
sources	
9. Control unit with display for radio and navigation, Aerial amplifier, Radio, telephone and	238
navigation system aerial, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2	
10. Control unit with display for radio and navigation, Aerial, Aerial amplifier, GPS aerial, Radio	239
aerial 2, Aerial amplifier 2	
030 - Communication	240-258
1. Communication	240
Communication     Navigation system with CD drive control unit	240 241
	240
2. Navigation system with CD drive control unit	240 241
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus</li> </ol>	240 241
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> </ol>	240 241 242
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left</li> </ol>	240 241 242
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass</li> </ol>	240 241 242
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> </ol>	240 241 242 243
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left</li> </ol>	240 241 242 243
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear</li> </ol>	240 241 242 243
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> </ol>	240 241 242 243
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> </ol>	240 241 242 243 244
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left</li> </ol>	240 241 242 243 244
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right</li> </ol>	240 241 242 243 244
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear</li> </ol>	240 241 242 243 244 245 246
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front left bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> </ol>	240 241 242 243 244 245 246 247
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front</li> </ol>	240 241 242 243 244 245 246 247
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> </ol>	240 241 242 243 244 245 246 247 248
<ol> <li>Navigation system with CD drive control unit</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, CD changer</li> <li>Navigation system with CD drive control unit, iPod holder</li> </ol>	240 241 242 243 244 245 246 247 248 249 250
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, CD changer</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> </ol>	240 241 242 243 244 245 246 247 248 249 250 251 252
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, iPod holder</li> </ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253
<ol> <li>Navigation system with CD drive control unit,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Front left treble loudspeaker,</li> <li>Front left bass loudspeaker,</li> <li>Front right treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Rear left treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Front left treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Front left treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Front left bass loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Front left bass loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Rear left treble loudspeaker,</li> <li>Rear left treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Digital sound package control unit,</li> <li>Rear left treble loudspeaker,</li> <li>Navigation system with CD drive control unit,</li> <li>Po changer</li> <li>Navigation system with CD drive control unit,</li> <li>Po changer</li> <li>Navigation system with CD drive control unit,</li> <li>Po changer</li> <li>Navigation system w</li></ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253 254
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front left bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Front right treble loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, CD changer</li> <li>Navigation system with CD drive control unit, iPod holder</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, Aerial amplifier, TV tuner, Aerial amplifier 2,</li> </ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left treble loudspeaker, Front left treble loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Front left mid-range loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, ED changer</li> <li>Navigation system with CD drive control unit, Fod holder</li> <li>Navigation system with CD drive control unit, Fod holder</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, Aerial amplifier, TV tuner, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2</li> </ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255
<ol> <li>Navigation system with CD drive control unit,</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Front right bass loudspeaker, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker, CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, Fod holder</li> <li>Navigation system with CD drive control unit, IPod holder</li> <li>Navigation system with CD drive control unit, IPod holder</li> <li>Navigation system with CD drive control unit, IV tuner</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, Aerial amplifier, TV tuner, Aer</li></ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253 254
<ol> <li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front left treble loudspeaker, Front left treble loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Front left mid-range loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker</li> <li>Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front roof module</li> <li>Navigation system with CD drive control unit, ED changer</li> <li>Navigation system with CD drive control unit, Fod holder</li> <li>Navigation system with CD drive control unit, Fod holder</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, TV tuner</li> <li>Navigation system with CD drive control unit, Aerial amplifier, TV tuner, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2</li> </ol>	240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255

amplifier, TV tuner, Radio aerial 2, Aerial amplifier 2 19. Navigation system with CD drive control unit, GPS aerial, TV aerial 2, TV aerial 3, TV tuner, 258 Satellite aerial 031 - Navigation system, Japan only 259-269 1. Navigation system, Japan only 259 2. Navigation system with CD drive control unit 260 3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus 261 diagnostic interface 4. Navigation system with CD drive control unit, Digital sound package control unit, Front left 262 treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker. Centre mid-range and treble loudspeaker 5. Navigation system with CD drive control unit, Digital sound package control unit, Rear left 263 treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker 6. Navigation system with CD drive control unit, Aerial amplifier, Aerial amplifier 2, Rear window 264 aerial 1. Rear window aerial 2 7. Navigation system with CD drive control unit, Radio, telephone and navigation system aerial, 265 Aerial amplifier 4, Rear window aerial 3 8. Navigation system with CD drive control unit, Aerial, Aerial amplifier, TV aerial 2, Radio aerial 266 2, Aerial amplifier 2 9. Navigation system with CD drive control unit, Telephone microphone, GPS aerial, TV aerial 3, 267 Microphone unit in front roof module 10. Navigation system with CD drive control unit, TV card reader 268 11. Navigation system with CD drive control unit, Traffic information control unit, Traffic data 269 aerial 032 - Communication USA 270-285 1. Communication USA 270 2. Navigation system with CD drive control unit, Connection for external audio sources 271 3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus 272 diagnostic interface 4. Navigation system with CD drive control unit, Digital sound package control unit, Front left 273 treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker 5. Navigation system with CD drive control unit, Digital sound package control unit, Rear left 274 treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker 6. Navigation system with CD drive control unit, Digital sound package control unit 275 7. Navigation system with CD drive control unit, Digital sound package control unit, Front left 276 treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker 8. Navigation system with CD drive control unit. Digital sound package control unit. Front left bass 277 loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module 9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left 278 treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker 10. Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front 279 roof module 11. Navigation system with CD drive control unit, CD changer, Connection for external audio sources 280 12. Navigation system with CD drive control unit, CD changer, Satellite radio 281 13. Navigation system with CD drive control unit, iPod holder 282 14. Navigation system with CD drive control unit, Satellite radio, iPod holder 283 15. Navigation system with CD drive control unit, Aerial amplifier, Radio, telephone and navigation 284 system aerial, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2 16. Navigation system with CD drive control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial 285 2. Aerial amplifier 2. Satellite aerial 033 - Communication USA 286-301 1. Communication USA 286 2. Navigation system with CD drive control unit, Connection for external audio sources 287 3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus 288 diagnostic interface 4. Navigation system with CD drive control unit, Digital sound package control unit, Front left 289 treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker 5. Navigation system with CD drive control unit, Digital sound package control unit, Rear left 290

treble loudspeaker. Rear right treble loudspeaker. Rear left mid-range and bass loudspeaker. Rear

right mid range and has laudeneaker	
right mid-range and bass loudspeaker 6. Navigation system with CD drive control unit, Digital sound package control unit	291
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left	292
treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right	292
mid-range loudspeaker	
8. Navigation system with CD drive control unit, Digital sound package control unit, Front left base	s 293
loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble	200
loudspeaker, Microphone unit in front roof module	
9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left	294
treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Re	
right mid-range and bass loudspeaker	
10. Navigation system with CD drive control unit, Telephone microphone, Microphone unit in fron	t 295
roof module	
11. Navigation system with CD drive control unit, CD changer, Connection for external audio soul	
12. Navigation system with CD drive control unit, CD changer, Satellite radio	297
13. Navigation system with CD drive control unit, iPod holder	298
14. Navigation system with CD drive control unit, Satellite radio, iPod holder	299
15. Navigation system with CD drive control unit, Aerial amplifier, Radio, telephone and navigatio	n 300
system aerial, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2	
16. Navigation system with CD drive control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial	301
2, Aerial amplifier 2, Satellite aerial	000 040
034 - Navigation system, Japan only	302-312
Navigation system, Japan only     Navigation system with CD drive control unit	302
Navigation system with CD drive control unit     Navigation system with CD drive control unit. Digital cound package control unit. Data but	303 304
<ol><li>Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface</li></ol>	304
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left	305
treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass	303
loudspeaker, Centre mid-range and treble loudspeaker	
5. Navigation system with CD drive control unit, Digital sound package control unit, Rear left	306
treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Re	
right mid-range and bass loudspeaker	
6. Navigation system with CD drive control unit, Aerial amplifier, Aerial amplifier 2, Rear window	307
aerial 1, Rear window aerial 2	
7. Navigation system with CD drive control unit, Radio, telephone and navigation system aerial,	308
Aerial amplifier 4, Rear window aerial 3	
8. Navigation system with CD drive control unit, Aerial, Aerial amplifier, TV aerial 2, Radio aerial	309
2, Aerial amplifier 2	0.40
9. Navigation system with CD drive control unit, Telephone microphone, GPS aerial, TV aerial 3,	310
Microphone unit in front roof module	044
<ol> <li>Navigation system with CD drive control unit, TV card reader</li> <li>Navigation system with CD drive control unit, Traffic information control unit, Traffic data</li> </ol>	311 312
aerial	312
035 - Power operated convertible roof, electric windbreak, heated rear window	313-320
Power operated convertible roof, electric windbreak, heated rear window	313
Convertible roof actuation control unit	314
3. Convertible roof actuation button, Right latch switch for convertible roof, Front latch switch	315
for convertible roof, Convertible roof actuation control unit, Convertible roof actuation hydraulic	
pump	
4. Convertible roof latch open switch, Convertible roof latch closed switch, Convertible roof	316
actuation control unit, Convertible roof lock motor	
5. Convertible roof stowed switch, Convertible roof front switch, Convertible roof actuation control	I 317
unit, Heated rear window	
6. Convertible roof actuation control unit, Right convertible roof flap motor, Left convertible roof	318
flap motor	0.10
7. Cabriolet windbreak control unit	319
8. Cabriolet windbreak switch, Cabriolet windbreak motor	320
036 - Tyre Pressure Monitoring System (7K8)	321-323
Tyre Pressure Monitoring System (7K8)     Tyre Pressure Monitoring System control unit. Tyre Pressure Loss Indicator warning Jamp	321 322
<ol> <li>Tyre Pressure Monitoring System control unit, Tyre Pressure Loss Indicator warning lamp</li> <li>Tyre Pressure Monitoring System button, Operating unit in front of centre console, Front left</li> </ol>	323
tyre pressure sensor, Rear left tyre pressure sensor, Tyre Pressure Monitoring System control un	
037 - Interface for special functions	324-326
Interface for special functions	324
2. Fuse 2 on fuse holder D, 12-pin connector	325
3. 12-pin connector	326

038 - Radio system, generation II+	327-333
1. Radio system, generation II+	327
National System, generation in a contract of the contract	328
3. Radio	329
<ol> <li>Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker,</li> </ol>	330
Front right bass loudspeaker	
5. Radio, CD changer	331
6. Radio	332
7. Aerial amplifier, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2	333
039 - Gas discharge headlights with automatic headlight range control	334-341
<ol> <li>Gas discharge headlights with automatic headlight range control</li> </ol>	334
2. Onboard supply control unit, Terminal 15 voltage supply relay 2	335
3. Light switch, Onboard supply control unit	336
4. Onboard supply control unit, Output module for left headlight, Left LED module for daytime	337
running light and side light	
<ol><li>Onboard supply control unit, Right headlight range control motor</li></ol>	338
6. Onboard supply control unit, Output module for right headlight, Right LED module for daytime	339
running light and side light	
	240
7. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	340
Headlight range control unit, Data bus diagnostic interface	341
040 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering	342-349
light	
Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	342
	343
2. Onboard supply control unit, Terminal 15 voltage supply relay 2	
3. Light switch, Onboard supply control unit	344
<ol> <li>Onboard supply control unit, Output module for left headlight, Left LED module for daytime</li> </ol>	345
running light and side light, Front left headlight	
5. Onboard supply control unit, Output module for left headlight, Output module for right headlight,	346
Front left headlight, Front right headlight	0.10
	0.47
6. Onboard supply control unit, Output module for right headlight, Right LED module for daytime	347
running light and side light, Front right headlight	
7. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	348
8. Headlight range control unit, Data bus diagnostic interface	349
041 - Rear parking aid (PDC)	350-352
1. Rear parking aid (PDC)	350
2. Parking aid control unit, Fuse 7 on fuse holder C	351
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear right parking aid sender,	352
Rear parking aid warning buzzer, Parking aid control unit	
042 - 2.0l diesel engine , CBBB,CFGB	353-374
1. 2.0I diesel engine , CBBB,CFGB	353
2. Battery, Starter, Battery isolation igniter	354
3. Alternator	355
4. Terminal 50 voltage supply relay	356
5. Relay for supplementary fuel pump, Supplementary fuel pump	357
6. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug	358
fuse	000
	050
7. Suppression filter, Terminal 30 voltage supply relay, Engine control unit	359
8. Engine control unit	360
<ol><li>Air mass meter, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector,</li></ol>	361
cylinder 3, Injector, cylinder 4	
10. Throttle valve potentiometer, Accelerator position sender, Throttle valve module, Engine control	362
unit	002
	000
11. Engine speed sender, Exhaust gas recirculation potentiometer, Position sender for charge	363
pressure positioner, Engine control unit	
12. Hall sender, Coolant temperature sender, Fuel temperature sender, Fuel pressure sender, Engine	364
control unit	
13. Variable intake manifold position sender, Engine control unit, Charge pressure control solenoid	365
valve, Exhaust gas recirculation cooler changeover valve, Pump for exhaust gas recirculation cooler	000
	000
14. Charge pressure sender, Intake air temperature sender, Exhaust gas pressure sensor 1, Pressure	366
differential sender, Engine control unit	
15. Lambda probe, Engine control unit, Heater element for crankcase breather, Fuel pressure	367
regulating valve, Fuel metering valve	
16. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas	368
	300
temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	000
17. Brake light switch, Clutch position sender, Engine control unit	369
18. Low heat output relav. High heat output relav. Engine control unit. Auxiliarv air heater element	370

19. Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine control unit, Radiator fan	371
20. Fuel gauge sender, High-pressure sender, Fuel gauge sender 2, Control unit in dash panel insert 21. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender,	372 373
Control unit in dash panel insert	
22. Control unit for structure-borne sound, Actuator for structure-borne sound	374
043 - 1.8l petrol engine , CDAA	375-396
1. 1.8l petrol engine , CDAA	375 376
Battery, Starter, Battery isolation igniter     Alternator	376 377
4. Terminal 50 voltage supply relay	378
Engine component current supply relay	379
6. Suppression filter, Main relay, Engine control unit	380
7. Engine control unit	381
8. Engine control unit, Ignition coil 1 with output stage	382
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector,	383
cylinder 4	004
10. Accelerator position sender, Engine control unit	384 385
<ul><li>11. Throttle valve module, Engine control unit</li><li>12. Intake air temperature sender, Coolant temperature sender, Air mass meter, Radiator outlet</li></ul>	386
coolant temperature sender, Intake air temperature sender 2, Engine control unit	300
13. Charge pressure sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control	387
unit	001
14. Hall sender, Knock sensor 1, Engine control unit, Fuel system diagnostic pump	388
15. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid	389
valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve,	
Valve for oil pressure control	
16. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Fuel pressure	390
regulating valve	004
17. Brake light switch, Clutch position sender, Engine control unit	391
<ol> <li>Oil pressure switch for reduced oil pressure, Continued coolant circulation relay, Engine control unit</li> </ol>	392
19. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan	393
20. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump	394
control unit	
21. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender,	395
Control unit in dash panel insert	
22. Control unit for structure-borne sound, Actuator for structure-borne sound	396
044 - Radio with Standard sound system	397-406
Radio with Standard sound system	397
2. Data bus diagnostic interface, Radio	398
3. Digital sound package control unit, Radio, Connection for external audio sources	399
<ol> <li>Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Centre mid-range and treble loudspeaker</li> </ol>	400
5. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble	401
loudspeaker, Front right bass loudspeaker, Rear left mid-range and bass loudspeaker	401
6. Digital sound package control unit, Radio, Rear right treble loudspeaker, Rear right mid-range	402
and bass loudspeaker	
7. Radio, CD changer	403
8. Radio	404
9. Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 2	405
10. Aerial amplifier, Aerial amplifier 2, Rear window aerial 1, Rear window aerial 2	406
045 - Communication	407-425
Communication     Navigation system with CD drive control unit	407 408
Navigation system with CD drive control unit, Digital sound package control unit, Data bus	409
diagnostic interface	403
Navigation system with CD drive control unit, Digital sound package control unit, Front left	410
treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass	3
loudspeaker, Centre mid-range and treble loudspeaker	
5. Navigation system with CD drive control unit, Digital sound package control unit, Rear left	411
treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear	
right mid-range and bass loudspeaker	
6. Navigation system with CD drive control unit, Digital sound package control unit	412
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left	413
treble loudspeaker. Front right treble loudspeaker. Front left mid-range loudspeaker. Front right	

mid-range loudspeaker 8. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass 414 loudspeaker, Front right bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module 9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left 415 treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker 10. Navigation system with CD drive control unit, Telephone microphone, Microphone unit in front 416 roof module 11. Navigation system with CD drive control unit, CD changer 417 12. Navigation system with CD drive control unit, iPod holder 418 13. Navigation system with CD drive control unit, iPod holder, Connection for external audio sources 419 14. Navigation system with CD drive control unit, TV tuner 420 15. Navigation system with CD drive control unit, TV tuner 421 16. Navigation system with CD drive control unit, Aerial amplifier, TV tuner, Aerial amplifier 2, 422 Rear window aerial 1, Rear window aerial 2 17. Navigation system with CD drive control unit, Radio, telephone and navigation system aerial, TV 423 tuner, Aerial amplifier 2, Aerial amplifier 4, Rear window aerial 3 18. Navigation system with CD drive control unit, Aerial selection control unit, Aerial, Aerial 424 amplifier, TV tuner, Radio aerial 2, Aerial amplifier 2 19. Navigation system with CD drive control unit, GPS aerial, TV aerial 2, TV aerial 3, TV tuner, 425 Satellite aerial 046 - 2.5l petrol engine, CEPA,CEPB,CRRA 426-449 1. 2.5l petrol engine, CEPA, CEPB, CRRA 426 2. Battery, Starter, Battery monitor control unit, Battery isolation igniter 427 428 3. Alternator 4. Terminal 50 voltage supply relay 429 5. Control relay 430 6. Suppression filter, Fuel pump relay, Main relay, Engine control unit 431 7. Engine control unit 432 8. Engine control unit, Ignition coil 1 with output stage 433 9. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine control unit 434 10. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, 435 cylinder 4, Injector, cylinder 5 11. Accelerator position sender, Throttle valve module, Engine control unit 436 12. Engine control unit 437 13. Hall sender, Coolant temperature sender, Hall sender 3, Engine control unit 438 14. Engine control unit, Activated charcoal filter solenoid valve 1 439 15. Engine control unit, Charge pressure control solenoid valve, Turbocharger air recirculation 440 valve, Fuel metering valve, Exhaust flap 1 valve 16. Additional coolant pump relay, Engine control unit, Engine component current supply relay, 441 Solenoid for coolant circuit 17. Exhaust gas temperature sender 1, Engine control unit, Camshaft control valve 1, Intake manifold 442 flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control 443 18. Engine control unit 19. Brake light switch, Clutch position sender, Engine control unit 444 20. Lambda probe, Lambda probe after catalytic converter, Engine control unit 445 21. Sport program button, Engine control unit, Sports program warning lamp 446 22. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan 447 23. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump 448 control unit 24. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, 449 Control unit in dash panel insert 047 - Basic equipment 450-483 1. Basic equipment 450 2. Battery, Starter, Battery isolation igniter 451 3. Alternator, Suppression filter 452 4. Fuse 1 on fuse holder C, Positive connection 1 (15), in interior wiring harness 453 5. Terminal 50 voltage supply relay, Relay for power sockets, Positive connection 1 (15), in 454 interior wiring harness 6. Ignition/starter switch, Steering column electronics control unit 455 7. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise 456 control system switch, Horn plate, Steering column electronics control unit 8. Steering column electronics control unit 457 9. Onboard supply control unit, Terminal 15 voltage supply relay 2 458 10. Onboard supply control unit 459

<ul><li>11. Light switch, Switch and instrument illumination regulator, Onboard supply control unit</li><li>12. Light switch, Headlight range control regulator, Daytime running lights switch, Onboard supply control unit</li></ul>	460 461
13. Operating unit in front of centre console, Onboard supply control unit	462
14. Operating unit in front of centre console, Onboard supply control unit	463
15. Onboard supply control unit, Left fog light bulb, Left headlight range control motor	464
16. Onboard supply control unit, Right fog light bulb, Right headlight range control motor	465
17. Onboard supply control unit, Night log light bulb, Night headlight range control motor	466
18. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake	467
light bulb, Right reversing light bulb, Rear right side marker bulb, Rear fog light	407
19. Headlight washer system relay, Onboard supply control unit	468
20. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Washer pump	469
	470
21. Window aerial suppression filter, Heated rear window relay, Onboard supply control unit, Heated	470
rear window, Left washer jet heater element	471
22. Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number	471
plate light	472
23. Brake light switch, Reversing light switch, Brake pedal switch, Clutch position sender, Onboard	412
supply control unit	470
24. Treble horn, Bass horn, Horn relay, Onboard supply control unit, Tank filler flap locking motor	473
25. Parking brake contact switch, Onboard supply control unit, Cigarette lighter, 12 V socket,	474
Luggage compartment light	475
26. Glove compartment light switch, Driver vanity mirror contact switch, Onboard supply control unit,	475
Front left footwell illumination bulb, Front right footwell illumination bulb, Glove compartment	
light, Driver side illuminated vanity mirror	
27. Front interior light, Automatic anti-dazzle interior mirror	476
28. Automatic anti-dazzle interior mirror	477
29. Control unit in dash panel insert, Data bus diagnostic interface	478
30. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	479
31. Control unit in dash panel insert, Radio controlled clock receiver	480
32. Brake fluid level warning contact, Coolant shortage indicator switch, Washer fluid warning	481
contact, Ambient temperature sensor, Front left brake pad wear sender, Control unit in dash panel	
insert, Brake pad warning lamp	
33. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel gauge sender 2, Oil level and oil	482
temperature sender, Control unit in dash panel insert	
34. Steering moment sender, Power steering control unit	483
048 - Convenience system	484-502
Convenience system	484
Driver door control unit	485
3. Driver door control unit	486
Driver door control unit, Central locking SAFELOCK function warning lamp	487
5. Driver side central locking lock unit, Driver door control unit	488
6. Alarm system off switch, Driver door control unit	489
7. Rear lid remote release button, Fuel tank flap release button, Operating unit for window	490
regulator in driver door, Driver door control unit, Driver side window regulator motor	
8. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver	491
door control unit, Driver side door interior handle illumination bulb, Driver side door warning lamp,	
Front left entry light	
9. Driver door control unit, Driver side mirror adjustment motor	492
10. Front passenger door control unit	493
11. Front passenger side central locking lock unit, Front passenger door control unit	494
12. Window regulator switch in front passenger door, Front passenger side interior locking button	495
for central locking system, Front passenger door control unit, Front passenger side door interior	
handle illumination bulb, Front right entry light, Front passenger side door warning lamp	
13. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger	496
side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	
14. Onboard supply control unit	497
15. Bonnet contact switch, Onboard supply control unit	498
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft	499
alarm system aerial	
17. Adjustable rear spoiler switch, Onboard supply control unit	500
18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central	501
	JU 1
locking motor. Tank filler flap locking motor	301
locking motor, Tank filler flap locking motor 19. Light switch. Onboard supply control unit	
19. Light switch, Onboard supply control unit	502
<ul><li>19. Light switch, Onboard supply control unit</li><li>049 - Air conditioning system</li></ul>	502 503-510
19. Light switch, Onboard supply control unit	502

3. Fresh air blower control unit, Climatronic control unit, Fuse 8 on fuse holder B, Fresh air	505
blower	000
4. High-pressure sender, Climatronic control unit, Air conditioner compressor regulating valve	506
<ol><li>Climatronic control unit, Centre flap control motor, Air flow flap control motor, Air recirculation flap control motor</li></ol>	507
6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor,	508
Right temperature flap control motor	
7. Sunlight penetration photosensor, Left footwell vent temperature sender, Evaporator output	509
temperature sender, Front right chest vent temperature sensor, Climatronic control unit 8. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit	510
050 - CAN bus network	511-518
CAN bus network	511
2. Connection 1 (powertrain CAN bus, high), in main wiring harness	512 513
<ol> <li>Connection 1 (powertrain CAN bus, low), in main wiring harness</li> <li>Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus,</li> </ol>	513 514
low), in main wiring harness	• • • • • • • • • • • • • • • • • • • •
5. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN	515
bus, low), in main wiring harness 6. Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN	516
bus, low), in main wiring harness	310
7. Connection 1 (infotainment CAN bus, high), in main wiring harness	517
8. Connection 1 (infotainment CAN bus, low), in main wiring harness	518
051 - Power operated convertible roof, electric windbreak, heated rear window	519-526 519
Power operated convertible roof, electric windbreak, heated rear window     Convertible roof actuation control unit	520
3. Convertible roof actuation button, Right latch switch for convertible roof, Front latch switch	521
for convertible roof, Convertible roof actuation control unit, Convertible roof actuation hydraulic	
pump  A Convertible reaf latch onen switch. Convertible reaf latch along dewitch. Convertible reaf	522
<ol> <li>Convertible roof latch open switch, Convertible roof latch closed switch, Convertible roof actuation control unit, Convertible roof lock motor</li> </ol>	322
5. Convertible roof stowed switch, Convertible roof front switch, Heated rear window relay,	523
Convertible roof actuation control unit, Heated rear window	
<ol><li>Convertible roof actuation control unit, Right convertible roof flap motor, Left convertible roof flap motor</li></ol>	524
7. Cabriolet windbreak control unit	525
8. Cabriolet windbreak switch, Cabriolet windbreak motor	526
052 - Rear parking aid (PDC)	527-529
Rear parking aid (PDC)     Parking aid control unit Fues 7 on fues helder C	527
<ol> <li>Parking aid control unit, Fuse 7 on fuse holder C</li> <li>Rear left parking aid sender, Rear centre left parking aid sender, Rear right parking aid sender,</li> </ol>	528 529
Rear parking aid warning buzzer, Parking aid control unit	020
053 - Haldex coupling with all-wheel drive	530-532
A I I a laboration in the constitution of the control of the contr	
Haldex coupling with all-wheel drive	530
2. All-wheel drive control unit, Haldex coupling pump	531
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive</li> </ol>	
2. All-wheel drive control unit, Haldex coupling pump	531
2. All-wheel drive control unit, Haldex coupling pump 3. Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve  054 - Gas discharge headlights with automatic headlight range control, (8Q3)  1. Gas discharge headlights with automatic headlight range control, (8Q3)	531 532 533-539 533
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> </ol>	531 532 533-539 533 534
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> </ol>	531 532 533-539 533 534 535
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> </ol>	531 532 533-539 533 534 535 536
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> </ol>	531 532 533-539 533 534 535
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> </ol>	531 532 533-539 533 534 535 536 537 538 539
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering</li> </ol>	531 532 533-539 533 534 535 536 537 538
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering</li> </ol>	531 532 533-539 533 534 535 536 537 538 539
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Output module for left headlight, Front left headlight</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540 541 542 543
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Output module for left headlight, Front left headlight</li> <li>Onboard supply control unit, Output module for left headlight, Front right headlight, Front left headlight</li> <li>Onboard supply control unit, Output module for right headlight, Front right headlight</li> <li>Onboard supply control unit, Output module for right headlight, Front right headlight</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540 541 542 543 544
<ol> <li>All-wheel drive control unit, Haldex coupling pump</li> <li>Brake light switch, Brake pedal switch, Oil pressure and oil temperature sender, All-wheel drive control unit, Coupling opening control valve</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Gas discharge headlights with automatic headlight range control, (8Q3)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Front left headlight</li> <li>Onboard supply control unit, Front right headlight</li> <li>Rear left vehicle level sender, Headlight range control unit</li> <li>Headlight range control unit, Data bus diagnostic interface</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light, (8Q5)</li> <li>Onboard supply control unit, Terminal 15 voltage supply relay 2</li> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Output module for left headlight, Front left headlight, Front left headlight, Front left headlight, Front right headlight</li> </ol>	531 532 533-539 533 534 535 536 537 538 539 540-547 540 541 542 543 544

OES Con discharge headlights with automatic headlight range control (902)	E40 EEE
056 - Gas discharge headlights with automatic headlight range control , (8Q3)	548-555 548
Gas discharge headlights with automatic headlight range control , (8Q3)      Onboard supply control unit. Terminal 15 veltors supply relay 2.	548 549
Onboard supply control unit, Terminal 15 voltage supply relay 2     Light switch, Onboard supply control unit	549 550
<ol> <li>Light switch, Onboard supply control unit</li> <li>Onboard supply control unit, Output module for left headlight, Left LED module for daytime</li> </ol>	550 551
	551
running light and side light 5. Onboard supply control unit, Right headlight range control motor	552
6. Onboard supply control unit, Right headiight range control motor 6. Onboard supply control unit, Output module for right headlight, Right LED module for daytime	553
running light and side light	555
7. Rear left vehicle level sender, Headlight range control unit	554
Real left verifice level serider, rheadilight range control unit     8. Headlight range control unit, Data bus diagnostic interface	555
057 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering	556-563
light, (8Q5)	330-303
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light ,	556
(8Q5)	550
2. Onboard supply control unit, Terminal 15 voltage supply relay 2	557
3. Light switch, Onboard supply control unit	558
4. Onboard supply control unit, Output module for left headlight, Left LED module for daytime	559
running light and side light, Front left headlight	339
5. Onboard supply control unit, Output module for left headlight, Output module for right headlight,	560
Front left headlight, Front right headlight	300
6. Onboard supply control unit, Output module for right headlight, Right LED module for daytime	561
running light and side light, Front right headlight	501
7. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	562
	563
Headlight range control unit, Data bus diagnostic interface     Preparation for mobile telephone (Bluetooth)	
	564-566
Preparation for mobile telephone (Bluetooth)     Telephone transmitter and receiver unit	564
2. Telephone transmitter and receiver unit	565 566
3. Telephone transmitter and receiver unit, Aerial for Bluetooth, Microphone unit in front roof	566
module	EG7 E71
059 - 7-speed dual clutch gearbox 0BH (S tronic)	567-571
7-speed dual clutch gearbox 0BH (S tronic)     Machatrania unit for dual clutch gearbox	567 568
2. Mechatronic unit for dual clutch gearbox	569
Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1     Mechatronic unit for dual clutch gearbox	509 570
Mechatronic unit for dual clutch gearbox     Selector lever sensors control unit, Selector lever lock solenoid	570 571
· · · · · · · · · · · · · · · · · · ·	571 572-574
060 - Energy recovery	572-574 572
Energy recovery     Rettery Starter Pattery manitor control unit Pattery including ignitor	
Battery, Starter, Battery monitor control unit, Battery isolation igniter     Alternator	573 574
061 - 2.0l petrol engine , CESA,CETA	574 575-597
	575-597 575
1. 2.0l petrol engine, CESA,CETA	575 576
Battery, Starter, Battery monitor control unit, Battery isolation igniter     Alternator	570 577
4. Terminal 50 voltage supply relay	577 578
5. Engine component current supply relay	578 579
· · · · · · · · · · · · · · · · · · ·	580
Suppression filter, Main relay, Engine control unit     Engine control unit	581
8. Engine control unit, Ignition coil 1 with output stage	582
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector,	583
	303
cylinder 4 10. Accelerator position sender, Throttle valve module, Engine control unit	584
11. Engine control unit	585
12. Engine control unit	586
13. Engine control unit, Fuel pressure regulating valve, Fuel system diagnostic pump	587
14. Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender,	588
Radiator outlet coolant temperature sender, Engine control unit	589
15. Hall sender, Knock sensor 1, Fuel pressure sender, Intake manifold flap potentiometer, Engine	509
control unit	500
16. Engine speed sender, Charge pressure sender, Engine control unit	590 501
17. Lambda probe, Lambda probe after catalytic converter, Engine control unit	591 502
18. Brake light switch, Clutch position sender, Engine control unit	592 503
19. Oil pressure switch for reduced oil pressure, Continued coolant circulation relay, Engine	593
control unit	504
20. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan 21. Fuel gauge sender. Fuel system pressurisation pump. Control unit in dash panel insert. Fuel pump	594 595
Zi. i dei dadde sender. Fuel system pressunsation bumb. Control unit in dash banel insert. Fuel bumb	อชอ

control unit 22. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, 596 Control unit in dash panel insert 23. Control unit for structure-borne sound, Actuator for structure-borne sound 597 062 - 2.0l petrol engine, CCTA,CCZA 598-618 1. 2.0l petrol engine, CCTA, CCZA 598 2. Battery, Starter, Battery isolation igniter 599 3. Alternator 600 4. Terminal 50 voltage supply relay 601 5. Engine component current supply relay 602 6. Suppression filter, Main relay, Engine control unit 603 7. Engine control unit 604 8. Engine control unit, Ignition coil 1 with output stage 605 9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, 606 cylinder 4 10. Accelerator position sender, Engine control unit 607 11. Throttle valve module, Engine control unit 608 12. Intake air temperature sender, Coolant temperature sender, Air mass meter, Radiator outlet 609 coolant temperature sender, Intake air temperature sender 2, Engine control unit 13. Charge pressure sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control 610 unit 14. Hall sender, Knock sensor 1, Engine control unit, Fuel system diagnostic pump 611 15. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid 612 valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 16. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Fuel pressure 613 regulating valve 17. Brake light switch, Clutch position sender, Engine control unit 614 18. Oil pressure switch for reduced oil pressure, Continued coolant circulation relay, Engine 615 control unit 19. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan 616 20. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump 617 21. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, 618 Control unit in dash panel insert 063 - Basic equipment, right-hand drive 619-650 1. Basic equipment, right-hand drive 619 2. Battery, Starter, Battery isolation igniter 620 3. Alternator, Suppression filter 621 4. Fuse 1 on fuse holder C, Positive connection 1 (15), in interior wiring harness 622 5. Terminal 50 voltage supply relay, Relay for power sockets, Positive connection 1 (15), in 623 interior wiring harness 624 6. Ignition/starter switch, Steering column electronics control unit 7. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise 625 control system switch, Horn plate, Steering column electronics control unit 8. Steering column electronics control unit 626 9. Onboard supply control unit, Terminal 15 voltage supply relay 2 627 10. Onboard supply control unit 628 11. Light switch, Onboard supply control unit 629 12. Light switch, Switch and instrument illumination regulator, Headlight range control regulator, 630 Onboard supply control unit 13. Operating unit in front of centre console, Onboard supply control unit 631 14. Operating unit in front of centre console, Onboard supply control unit 632 15. Onboard supply control unit, Left fog light bulb, Left headlight range control motor 633 16. Onboard supply control unit, Right fog light bulb, Right headlight range control motor 634 17. Onboard supply control unit, Left brake and tail light bulb, Right brake and tail light bulb 635 18. Rain and light sensor, Headlight washer system relay, Wiper motor control unit, Onboard supply 636 control unit, Washer pump 19. Heated rear window relay, Onboard supply control unit, Heated rear window, Left washer jet 637 20. Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number 638 plate light

21. Brake light switch, Reversing light switch, Brake pedal switch, Clutch position sender, Onboard

22. Treble horn, Bass horn, Horn relay, Onboard supply control unit, Tank filler flap locking motor

23. Parking brake contact switch. Onboard supply control unit. Cigarette lighter. Luggage

supply control unit

639

640

641

compartment light 24. Glove compartment light switch, Driver vanity mirror contact switch, Onboard supply control unit,	642
Front left footwell illumination bulb, Front right footwell illumination bulb, Glove compartment	042
light, Driver side illuminated vanity mirror	
25. Front interior light, Automatic anti-dazzle interior mirror	643
26. Automatic anti-dazzle interior mirror	644
27. Control unit in dash panel insert, Data bus diagnostic interface	645
28. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	646
29. Control unit in dash panel insert, Radio controlled clock receiver	647
30. Brake fluid level warning contact, Coolant shortage indicator switch, Washer fluid warning	648
contact, Ambient temperature sensor, Front left brake pad wear sender, Control unit in dash panel	
insert, Brake pad warning lamp	640
31. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel gauge sender 2, Oil level and oil temperature sender, Control unit in dash panel insert, Fuel pump control unit	649
32. Steering moment sender, Power steering control unit	650
064 - Convenience system, right-hand drive	651-669
Convenience system, right-hand drive	651
2. Driver door control unit	652
3. Driver door control unit	653
4. Driver door control unit, Central locking SAFELOCK function warning lamp	654
5. Driver side central locking lock unit, Driver door control unit	655
Alarm system off switch, Driver door control unit	656
7. Rear lid remote release button, Fuel tank flap release button, Operating unit for window	657
regulator in driver door, Driver door control unit, Driver side window regulator motor	050
8. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver	658
door control unit, Driver side door interior handle illumination bulb, Driver side door warning lamp,	
Front right entry light 9. Driver door control unit, Driver side mirror adjustment motor	659
10. Front passenger door control unit	660
11. Front passenger side central locking lock unit, Front passenger door control unit	661
12. Window regulator switch in front passenger door, Front passenger door control unit, Front	662
passenger side door interior handle illumination bulb, Front left entry light, Front passenger side	
door warning lamp	
13. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger	663
side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	
14. Onboard supply control unit	
	664
15. Bonnet contact switch, Onboard supply control unit	665
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft	
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial	665 666
<ul><li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li><li>17. Adjustable rear spoiler switch, Onboard supply control unit</li></ul>	665 666 667
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central</li> </ul>	665 666
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> </ul>	665 666 667
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central</li> </ul>	665 666 667 668
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> </ul>	665 666 667 668 669
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> </ul>	665 666 667 668 669 670-675 670
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> </ul>	665 666 667 668 669 670-675 670 671 672
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> </ul>	665 666 667 668 669 670-675 670 671 672 673
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> </ul>	665 666 667 668 669 670-675 670 671 672
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> <li>1. Fuses</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> <li>1. Fuses</li> <li>1.1 Overview of fuses</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> <li>1. Fuses</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender</li> <li>1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> <li>1. Fuses</li> <li>1.1 Overview of fuses</li> <li>1.2 Fuses (SA) on fuse holder A</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676 677-678
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial 17. Adjustable rear spoiler switch, Onboard supply control unit 18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor 19. Light switch, Onboard supply control unit 073 - 7-speed dual clutch gearbox 0AM (S tronic) 1. 7-speed dual clutch gearbox 0AM (S tronic) 2. Mechatronic unit for dual clutch gearbox 3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1 4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox 5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor 6. Selector lever sensors control unit, Selector lever lock solenoid 801 - Fitting locations: Fuses - 3 1. Fuses 1.1 Overview of fuses 1.2 Fuses (SA) on fuse holder A 1.2.1 Position of fuses on fuse holder A 1.3 Fuses (SB) on fuse holder B 1.3.1 Position of fuses on fuse carrier ST1, black	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 676 677-678 678 679-683 680
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>1073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 - Fitting locations: Fuses - 3</li> <li>1. Fuses</li> <li>1.1 Overview of fuses</li> <li>1.2 Fuses (SA) on fuse holder A</li> <li>1.2.1 Position of fuses on fuse holder A</li> <li>1.3 Fuses (SB) on fuse holder B</li> <li>1.3.1 Position of fuses on fuse carrier ST1, black</li> <li>1.3.2 Position of fuses on fuse carrier ST2, brown</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 676-698 677-678 678 679-683 680 681-683
<ul> <li>16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial</li> <li>17. Adjustable rear spoiler switch, Onboard supply control unit</li> <li>18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor</li> <li>19. Light switch, Onboard supply control unit</li> <li>073 - 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>1. 7-speed dual clutch gearbox 0AM (S tronic)</li> <li>2. Mechatronic unit for dual clutch gearbox</li> <li>3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1</li> <li>4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox</li> <li>5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor</li> <li>6. Selector lever sensors control unit, Selector lever lock solenoid</li> <li>801 Fitting locations: Fuses - 3</li> <li>1. Fuses</li> <li>1.1 Overview of fuses</li> <li>1.2 Fuses (SA) on fuse holder A</li> <li>1.3 Fuses (SB) on fuses on fuse carrier ST1, black</li> <li>1.3.1 Position of fuses on fuse carrier ST2, brown</li> <li>1.4 Fuses (SC) on fuse holder C</li> </ul>	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 677-678 678 679-683 680 681-683 684-688
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial 17. Adjustable rear spoiler switch, Onboard supply control unit 18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor 19. Light switch, Onboard supply control unit 073 - 7-speed dual clutch gearbox 0AM (S tronic) 1. 7-speed dual clutch gearbox 0AM (S tronic) 2. Mechatronic unit for dual clutch gearbox 3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1 4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox 5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor 6. Selector lever sensors control unit, Selector lever lock solenoid 801 Fitting locations: Fuses - 3 1. Fuses 1.1 Overview of fuses 1.2 Fuses (SA) on fuse holder A 1.3.1 Position of fuses on fuse holder A 1.3.1 Position of fuses on fuse carrier ST1, black 1.3.2 Position of fuses on fuse carrier ST2, brown 1.4 Fuses (SC) on fuse holder C 1.5 Fuses (SF) on fuse holder F	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 676 677-678 678 679-683 680 681-683 684-688 689-691
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial 17. Adjustable rear spoiler switch, Onboard supply control unit 18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor 19. Light switch, Onboard supply control unit 073 - 7-speed dual clutch gearbox 0AM (S tronic) 1. 7-speed dual clutch gearbox 0AM (S tronic) 2. Mechatronic unit for dual clutch gearbox 3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1 4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox 5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor 6. Selector lever sensors control unit, Selector lever lock solenoid 801 Fitting locations: Fuses - 3 1. Fuses 1.1 Overview of fuses 1.2 Fuses (SA) on fuse holder A 1.3.1 Position of fuses on fuse carrier ST1, black 1.3.2 Position of fuses on fuse carrier ST2, brown 1.4 Fuses (SC) on fuse holder C 1.5 Fuses (SF) on fuse holder F 1.5.1 Fuse assignment on fuse holder F	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 676 677-678 678 679-683 680 681-683 684-688 689-691 690-691
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial  17. Adjustable rear spoiler switch, Onboard supply control unit  18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor  19. Light switch, Onboard supply control unit  073 - 7-speed dual clutch gearbox 0AM (S tronic)  1. 7-speed dual clutch gearbox 0AM (S tronic)  2. Mechatronic unit for dual clutch gearbox  3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1  4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox  5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender  1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor  6. Selector lever sensors control unit, Selector lever lock solenoid  801 Fitting locations: Fuses - 3  1. Fuses  1.1 Overview of fuses  1.2 Fuses (SA) on fuse holder A  1.2.1 Position of fuses on fuse holder A  1.3 Fuses (SB) on fuse holder B  1.3.1 Position of fuses on fuse carrier ST1, black  1.3.2 Position of fuses on fuse carrier ST2, brown  1.4 Fuses (SC) on fuse holder C  1.5 Fuses (SF) on fuse holder C  1.5 Fuses (SF) on fuse holder F  1.5.1 Fuse assignment on fuse holder F  1.6 Fuses (SD) on main fuse carrier	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676 677-678 678 679-683 680 681-683 684-688 689-691 690-691
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial 17. Adjustable rear spoiler switch, Onboard supply control unit 18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor 19. Light switch, Onboard supply control unit 073 - 7-speed dual clutch gearbox 0AM (S tronic) 1. 7-speed dual clutch gearbox 0AM (S tronic) 2. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1 4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1 4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor 5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor 6. Selector lever sensors control unit, Selector lever lock solenoid 801 Fitting locations: Fuses - 3 1. Fuses 1.1 Overview of fuses 1.2 Fuses (SA) on fuse holder A 1.3.1 Position of fuses on fuse holder A 1.3.1 Position of fuses on fuse carrier ST1, black 1.3.2 Position of fuses on fuse carrier ST2, brown 1.4 Fuses (SC) on fuse holder C 1.5 Fuses (SF) on fuse holder C 1.5 Fuses (SF) on fuse holder F 1.5.1 Fuse assignment on fuse holder F 1.6 Fuses (SD) on main fuse carrier 1.7 Fuses on relay carrier behind dash panel	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676-698 677-678 678 679-683 680 681-683 684-688 689-691 690-691 692-693 694-697
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial  17. Adjustable rear spoiler switch, Onboard supply control unit  18. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor, Tank filler flap locking motor  19. Light switch, Onboard supply control unit  073 - 7-speed dual clutch gearbox 0AM (S tronic)  1. 7-speed dual clutch gearbox 0AM (S tronic)  2. Mechatronic unit for dual clutch gearbox  3. Mechatronic unit for dual clutch gearbox, Valve 1 in sub-gearbox 1  4. Gear selector movement sensor 1, Clutch travel sender 1, Mechatronic unit for dual clutch gearbox  5. Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender  1, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor  6. Selector lever sensors control unit, Selector lever lock solenoid  801 Fitting locations: Fuses - 3  1. Fuses  1.1 Overview of fuses  1.2 Fuses (SA) on fuse holder A  1.2.1 Position of fuses on fuse holder A  1.3 Fuses (SB) on fuse holder B  1.3.1 Position of fuses on fuse carrier ST1, black  1.3.2 Position of fuses on fuse carrier ST2, brown  1.4 Fuses (SC) on fuse holder C  1.5 Fuses (SF) on fuse holder C  1.5 Fuses (SF) on fuse holder F  1.5.1 Fuse assignment on fuse holder F  1.6 Fuses (SD) on main fuse carrier	665 666 667 668 669 670-675 670 671 672 673 674 675 676-698 676-698 676 677-678 678 679-683 680 681-683 684-688 689-691 690-691

Coupling stations and connections	699-706
1.1 Overview of coupling stations and connectors	699
1.2 Coupling station under left front seat	700
1.3 Coupling station under right front seat	700
1.4 Coupling station right rear lid, in rear right roof frame	700
1.5 Coupling station on left of rear lid, Roadster	701
1.6 Coupling station on left of rear lid, behind side panel, Coup	701
1.7 Coupling station left in engine compartment	702
1.8 Coupling station on right of dash panel, glove compartment	703
1.9 Coupling station in left side panel, Roadster	704
1.10 Diagnostic connection	705-706
803 Fitting locations: Earth points - 3	707-712
1. Earth points	707-712
1.1 Overview of earth points	707-712
804Fitting locations : control units - 3	713-770
1. Control units	713-770
1.1 Overview of control units	713-715
1.2 ABS control unit -J104-	716-717
1.3 Engine control unit -J623-	718-720
1.4 Control unit for parking aid -J446-	721-722
1.5 Convenience system central control unit -J393-, up to May 2009	723-724
1.6 Driver door control unit -J386-	725-726
1.7 Front passenger door control unit -J387-	727-728
1.8 Convertible roof actuation control unit -J256-, Roadster	729-730
1.9 Digital sound package control unit -J525-	731
1.10 Electronically controlled damping control unit -J250-	731
1.11 Steering column electronics control unit -J527-	732-733
1.12 onboard supply control unit -J519-, up to May 2009	734-735
· · · ·	734-733
1.13 onboard supply control unit -J519-, from June 2009	738-739
1.14 Control unit in dash panel insert -J285- 1.15 Data bus diagnostic interface -J533-	740-741
1.16 Headlight range control, control unit -J431-	740-741
1.17 Airbag control unit -J234-	744-745
1.18 Fuel pump control unit -J538-	744-743
1.19 Tyre pressure monitor control unit 2 -J793-	740-747
1.20 Climatronic control unit -J255-	750-751
1.21 Wiper motor control unit -J400-	750-751 752
1.22 Radiator fan control unit -J293-	752 753
1.23 Power steering control unit -J500-	754
1.24 Radio controlled clock receiver -J489-	75 <del>4</del> 755
1.25 Battery monitor control unit -J367-	755 755
1.26 Tyre pressure monitor control unit -J502-, USA	755-756
1.27 Left gas discharge bulb control unit -J343-/right gas discharge light control unit -J344-	755-758
1.28 Anti-theft alarm sensor -G578-	757-756 759
	760-761
1.29 Front interior light -W1- 1.30 Overview of convertible roof components	760-761
•	
1.30.1 Convertible roof actuation switch -E137-	763
1.30.2 Cabrio windbreak switch -E278-	763 764
1.30.3 Convertible roof actuation hydraulic pump -V118-	764 764
1.30.4 Cabrio windbreak motor -V186-	764 765
1.30.5 Convertible roof lock motor -V223- 1.30.6 Front latch switch for convertible roof -F172-	765 765
	765 766
1.30.7 Right latch switch for convertible roof -F170-	766
1.30.8 Convertible roof latch closed switch -F295-, left	766 767
1.30.9 Convertible roof latch closed switch -F295-, right	
1.30.10 Convertible roof stowed switch -F171- 1.30.11 Convertible roof front switch -F202-	767 768
1.30.12 Right convertible top cover motor -V381-/right sender for convertible roof cover -G597-	768 760
1.30.13 Left convertible top cover motor -V383-/left sender for convertible roof cover -G596-	769 760 770
1.30.14 Convertible roof latch open switch -F294-	769-770
805 Fitting locations: Relays - 1	771-781 771 791
1. Relays	771-781 771
1.1 Overview of relay carriers 1.2 Relay carrier behind dash panel on left, left-hand drive	771 772
1.2 Relay carrier behind dash panel on right, right-hand drive	773-774
1.4 Relay carrier in electronics box. engine compartment	775-77 <del>4</del> 775-777
1. I Nota Volition in Glock office box. Chaine combattificht	110-111

1.5 Relay positions on onboard supply control unit -J519-, up to May 2009 1.6 Relay carrier on onboard supply control unit -J519-, from June 2009	778 779-781
806Fitting locations: Routing in the vehicle - 3	782-788
1. Routing in the vehicle	782-788
1.1 Routing rear lid/roof	782
1.2 Routing door	783
1.3 Routing dash panel wiring harness	784-785
1.4 Routing in the interior	786-787
1.5 Plenum chamber - engine compartment wiring harness routing	788