

## Contents

<b>01 - Self-diagnosis .....</b>	<b>1</b>
<b>1 Radio system self-diagnosis .....</b>	<b>1</b>
1.1 General .....	1
1.2 Safety precautions .....	1
1.3 Starting self-diagnosis .....	2
1.4 Interrogating control unit version .....	3
1.5 Interrogating fault memory .....	4
1.6 Fault table .....	5
1.7 Erasing fault memory .....	9
1.8 End of output .....	9
1.9 Final control diagnosis .....	9
1.10 Encoding control unit .....	11
1.11 Reading measured value block .....	13
1.12 Adaption .....	18
<b>2 Self-diagnosis of pre-fitted components for mobile phone installation .....</b>	<b>24</b>
2.1 General .....	24
2.2 Safety precautions .....	24
2.3 Starting self-diagnosis .....	24
2.4 Interrogating fault memory .....	26
2.5 Fault table .....	27
2.6 Erasing fault memory .....	29
2.7 End of output .....	30
2.8 Final control diagnosis .....	30
2.9 Encoding control unit .....	32
2.10 Reading measured value block .....	35
2.11 Adaption .....	38
<b>3 Self-diagnosis of navigation system III .....</b>	<b>49</b>
3.1 General .....	49
3.2 Safety precautions .....	50
3.3 Starting self-diagnosis .....	50
3.4 Interrogating control unit version .....	51
3.5 Interrogating fault memory .....	52
3.6 Fault table .....	53
3.7 Erasing fault memory .....	54
3.8 End of output .....	55
3.9 Final control diagnosis .....	55
3.10 Reading measured value block .....	56
3.11 Function status register (production diagnosis) .....	60
3.12 Adaption .....	61
<b>4 Self-diagnosis of navigation system Nav IV (BNS 4.0) .....</b>	<b>67</b>
4.1 General .....	67
4.2 Safety precautions .....	67
4.3 Starting self-diagnosis .....	68
4.4 Interrogating control unit version .....	69
4.5 Interrogating fault memory .....	69
4.6 Fault table .....	70
4.7 Erasing fault memory .....	72
4.8 End of output .....	73
4.9 Final control diagnosis .....	73
4.10 Reading measured value block .....	74
4.11 Function status register (production diagnosis) .....	78
4.12 Adaption .....	78

<b>5</b>	<b>Connecting up vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions .....</b>	<b>86</b>
5.1	Test conditions .....	86
5.2	Procedure .....	86