

Contents

68	- Interior equipment	1
1	Storage compartments/trim panels and covers	1
1.1	Removing and installing glove box	1
1.2	Removing and installing glove box trim	2
1.3	Removing and installing glove box lock	3
1.4	Removing and installing glove box locking mechanism	3
1.5	Removing damping mechanism for glove box lid	4
1.6	Removing right dash panel end trim	4
1.7	Removing driver's storage compartment	4
1.8	Removing left dash panel end trim	6
1.9	Removing centre console trim frame	6
1.10	Removing centre console grab handles	7
1.11	Removing and installing mobile phone cradle	8
1.12	Removing and installing mounting plate for mobile phone cradle	9
1.13	Removing and installing cup holder	9
1.14	Removing and installing cover panel at rear centre console	9
1.15	Removing and installing rear centre console	10
1.16	Removing rear centre console storage compartment	11
1.17	Removing lid for rear centre console storage compartment	12
1.18	Removing rear centre console rear storage compartment	12
1.19	Removing handbrake trim	12
1.20	Removing handbrake lever button	12
1.21	Removing gearshift cover	13
1.22	Removing gearshift cover console	13
1.23	Removing and installing footwell vent trim and footwell vent	13
1.24	Removing and installing centre console masking profile	15
1.25	Removing and installing front centre console	16
1.26	Removing radio cover panel	17
1.27	Removing and installing front ashtray	17
1.28	Removing and installing front ashtray light	18
1.29	Removing and installing cigarette lighter	18
2	Interior mirror	20
2.1	Removing and installing interior mirror with fixed base	20
2.2	Removing interior mirror (automatic anti-glare mirror, interior mirror with compass)	20
2.3	Checking operation of automatic anti-glare interior mirror	21
2.4	Calibrating interior mirror with compass (USA only)	21
2.5	Bonding in retainer plate for interior mirror	26
69	- Passenger protection	28
1	Seat belt safety regulations	28
1.1	Safety regulations for handling pyrotechnic belt tensioners	28
1.2	Disposal of pyrotechnic belt tensioners	29
2	Coupé seat belts	30
2.1	Seat belt anchorage points (exploded view)	30
2.2	Removing and installing three-point seat belt with belt tensioner	31
2.3	Removing B-pillar brace	31
2.4	Outer floor panel anchorage point	32
2.5	Buckle anchorage point - standard seat	33
2.6	Buckle anchorage point - bucket seat	33
2.7	Belt guide fitting anchorage point	33
2.8	Removing and installing rear three-point seat belt	33
2.9	Removing webbing cover panel and webbing guide	35
2.10	Centre floor panel anchorage points	36



3	Roadster seat belts	37
3.1	Seat belt anchorage points (exploded view)	37
3.2	Removing and installing three-point seat belt with belt tensioner	38
3.3	Outer floor panel anchorage point	39
3.4	Belt guide fitting anchorage point	40
3.5	Belt guide fitting bracket	40
4	Checking seat belts	41
4.1	Checking webbing	41
4.2	Checking inertia reel (locking action)	42
4.3	Visual inspection of buckle	42
4.4	Functional test of buckle	42
4.5	Checking guide fittings and latch plate	43
4.6	Checking attachment components and anchorage points	43
4.7	Checking child seat restraint function for additional child seats (not for driver's seat belt)	43
5	Airbag safety regulations	45
5.1	General safety regulations for handling airbag system	45
5.2	Additional safety precautions for side airbag	46
5.3	Additional safety regulations for head airbag	46
5.4	Replacing airbag units following an accident	47
5.5	Checking attachment components following an accident	49
5.6	Accident not involving airbag triggering	49
5.7	Disposal of pyrotechnic airbag units	49
6	Servicing airbag	50
6.1	Exploded view of fitting locations	50
6.2	Removing and installing airbag control unit (J 234)	50
7	Servicing driver's airbag	52
7.1	Removing and installing driver's airbag unit	52
7.2	Removing and installing steering wheel	53
7.3	Removing and installing coil connector with slip ring	54
8	Servicing front passenger's airbag	56
8.1	Removing and installing front passenger's airbag	56
8.2	Removing and installing key switch for front passenger's airbag	57
9	Servicing side airbag	58
9.1	Removing and installing side airbag	58
9.2	Unplugging connector for side airbag	60
9.3	Disconnecting side airbag cable from seat pan	60
9.4	Cable routing at fitting	62
9.5	Position of fasteners at backrest frame	63
9.6	Fitting conduit on side airbag cable	64
10	Servicing airbag crash sensors	65
10.1	Removing and installing lateral acceleration sensor	65
11	Rollover bar	66
11.1	Removing and installing rollover bar	66
11.2	Removing and installing rollover bar cross member	67
11.3	Removing rollover bar flange	69
12	Isofix	71
12.1	Removing and installing front Isofix holder (front passenger's seat)	71
12.2	Service installation of front Isofix holder (front passenger's seat)	71
12.3	Removing and installing rear Isofix holder	71
70 - Trim, insulation		72
1	Front door trim	72
1.1	Exploded view of fitting locations	72

1.2	Removing and installing front door trim	73
1.3	Removing door handle and switch trim	74
1.4	Removing and installing driver's window lifter switches	75
1.5	Removing and installing front passenger's window lifter switch	75
1.6	Removing mirror adjustment switch	76
1.7	Removing and installing sound absorber for front door trim	76
1.8	Exploded view of door trim cable routing	77
1.9	Removing and installing cable for anti-theft alarm indicator	77
1.10	Removing and installing treble loudspeaker	78
1.11	Removing bass loudspeaker	78
1.12	Removing loudspeaker trim	79
1.13	Removing interior door handle	79
1.14	Removing and installing hinged pocket unit	79
2	Dash panel	81
2.1	Exploded view of fitting locations	81
2.2	Removing dash panel	81
2.3	Dash panel operations	86
2.4	Removing switch module	88
2.5	Removing "side window" defroster vent	88
3	Removing and installing central tube	89
3.1	Exploded view of fitting locations	89
3.2	Removing and installing dash panel central tube	89
3.3	Removing and installing central tube retainer (Coupé)	94
3.4	Removing and installing central tube retainer (Roadster)	94
4	Coupé roof trim	95
4.1	Removing and installing moulded headliner and sun visors	95
4.2	Removing and installing sun visors (Coupé)	96
5	Coupé trim panels	98
5.1	Removing and installing upper A-pillar trim	98
5.2	Removing and installing lower A-pillar trim	98
5.3	Removing A-pillar sound absorber	99
5.4	Removing and installing foot rest and foot rest bracket	99
5.5	Removing sill mouldings	100
5.6	Removing and installing upper C-pillar trim	100
5.7	Roof frame trim	101
5.8	Removing and installing rear cross panel trim	102
5.9	Removing and installing rear side trim	103
5.10	Removing storage compartment and cover at rear side trim	104
5.11	Removing and installing shaft for rear side trim cover	104
5.12	Luggage compartment side trim	105
5.13	Removing luggage compartment floor lining	108
5.14	Removing and installing tailgate trim	108
5.15	Separating tailgate trim panels	110
5.16	Removing and installing floor covering	111
6	Roadster trim panels	114
6.1	Removing and installing upper A-pillar trim	114
6.2	Removing and installing sun visor	115
6.3	Removing and installing roof frame trim	116
6.4	Removing sill mouldings	117
6.5	Removing and installing back panel centre trim	117
6.6	Removing and installing cover at back panel centre trim	118
6.7	Removing and installing centre loudspeaker	118
6.8	Back panel side trim	119
6.9	Back panel cover	120
6.10	Removing and installing loudspeaker assembly mount on vehicles with no CD changer	121

6.11	Removing and installing loudspeaker assembly mount on vehicles with CD changer	123
6.12	Removing and installing centre storage compartment	124
6.13	Removing and installing left storage compartment	124
6.14	Removing and installing right storage compartment	125
6.15	Front convertible top compartment trim	127
6.16	Convertible top compartment trim	128
6.17	Convertible top compartment trim support	129
6.18	Removing and installing wind deflector	129
6.19	Moving wind deflector panel by hand	130
6.20	Removing and installing wind deflector motor	130
6.21	Removing and installing wind deflector toothed belt	131
6.22	Removing and installing wind deflector threaded rod	131
6.23	Removing and installing wind deflector panel	132
6.24	Removing and installing rear wind deflector cover	133
6.25	Removing and installing wind deflector trim	134
6.26	Luggage compartment side trim	136
6.27	Luggage compartment side trim	137
6.28	Removing luggage compartment floor lining	138
6.29	Removing and installing rear cross panel trim	139
6.30	Removing and installing boot lid lock cover panel	140
6.31	Removing and installing floor covering	140
72	- Seat frames	142
1	Front seats	142
1.1	Removing front seat runner cover	142
1.2	Removing and installing seat	142
1.3	Unplugging connector for side airbag	144
1.4	Removing and installing front seat backrest	146
1.5	Removing spring cover	147
1.6	Removing and installing seat cushion	148
1.7	Removing height adjustment handle	149
1.8	Removing seat frame	149
1.9	Removing tubular mount	150
1.10	Removing front left/right adapter	151
1.11	Removing seat side trim	151
1.12	Removing handwheel and release handle	153
1.13	Removing fitting trim panels	153
1.14	Removing height adjustment unit	153
1.15	Removing Bowden cable	154
1.16	Removing connector holder and connector holder mount	155
1.17	Removing runner	156
1.18	Removing operating rod	157
1.19	Adjusting operating rod	157
1.20	Removing gas-filled strut	158
1.21	Removing side cover	158
1.22	Removing backrest cover panel	159
1.23	Removing and installing head restraints (Roadster)	160
2	Front bucket seat	161
2.1	Removing and installing seat	161
2.2	Side airbag terminating resistor	162
2.3	Removing and installing front seat pan	163
3	Rear seats	165
3.1	Removing and installing seat bench	165
3.2	Removing and installing rear seat backrest	167
3.3	Removing latch trim	168
3.4	Removing reinforcing element from latch trim	169

3.5	Removing rear seat latch	169
3.6	Removing release handle with moulding	169
3.7	Removing rear seat inner hinge	171
3.8	Removing rear seat outer hinge	171
74	Seat - padding, covers	172
1	Front seat covers and padding	172
1.1	Removing and installing cover and padding for seat cushion	172
1.2	Detaching seat cover from padding	173
1.3	Removing and installing backrest cover and padding	174
1.4	Detaching backrest cover from padding	175
1.5	Removing and installing seat heating element (bonded)	176
1.6	Voltage values at seat heating potentiometer	176
1.7	Removing and installing backrest heating element (bonded)	176
1.8	Removing and installing head restraint cover and padding	177
2	Front bucket seat covers and padding	178
2.1	Removing and installing cover and padding for seat pan	178
3	Rear seat covers and padding	181
3.1	Removing and installing cover and padding for seat bench	181
3.2	Removing and installing split backrest cover and padding	182
3.3	Removing webbing trim	183