

## Contents

<b>50</b>	<b>Body - front</b> .....	<b>1</b>
1	<b>Body - front</b> .....	1
1.1	Removing and installing lock carrier with attachments .....	1
1.2	Wing panel (front) - overview .....	2
1.3	Noise insulation for vehicles with 4-cyl. engine - overview .....	3
1.4	Removing and installing noise insulation for vehicles with 4-cyl. engine .....	4
1.5	Removing and installing noise insulation for vehicles with 6-cyl. engine .....	5
1.6	Body reinforcements (rear) for vehicles with 6-cyl. engine .....	7
<b>55</b>	<b>Bonnet, rear lid</b> .....	<b>8</b>
1	<b>Bonnet</b> .....	<b>8</b>
1.1	Contact corrosion .....	8
1.2	Removing and installing bonnet, adjusting bonnet .....	8
1.3	Removing and installing gas-filled strut .....	10
1.4	Removing and installing bonnet lining .....	11
1.5	Removing and installing bottom section of bonnet lock .....	11
1.6	Removing and installing Bowden cable for bonnet lock .....	11
2	<b>Rear lid - Coupé</b> .....	<b>13</b>
2.1	Removing and installing rear lid, adjusting rear lid .....	13
2.2	Removing and installing gas-filled strut .....	15
2.3	Removing and installing rear lid hinge .....	15
2.4	Removing and installing seal for rear lid .....	16
2.5	Removing and installing Bowden cable for rear lid lock .....	16
3	<b>Rear lid - Roadster</b> .....	<b>18</b>
3.1	Removing and installing rear lid, adjusting rear lid .....	18
3.2	Removing and installing gas-filled strut .....	20
3.3	Removing and installing rear lid hinge .....	21
3.4	Removing and installing seal for rear lid .....	21
3.5	Removing and installing Bowden cable for rear lid lock .....	21
4	<b>Tank flap</b> .....	<b>23</b>
4.1	Removing and installing tank flap .....	23
<b>57</b>	<b>Front doors, door components, central locking</b> .....	<b>24</b>
1	<b>Front door</b> .....	<b>24</b>
1.1	Removing and installing front door and door subframe .....	24
1.2	Adapting and erasing force-resistance characteristic for window lifter motor .....	27
1.3	Adjusting door subframe - overview .....	28
1.4	Adjusting door subframe .....	30
1.5	Removing and installing door window .....	33
1.6	Removing and installing window lifter .....	35
1.7	Adjusting door .....	36
1.8	Door handle and door lock - exploded view .....	36
1.9	Removing and installing lock cylinder housing .....	38
1.10	Removing and installing door handle .....	38
1.11	Removing and installing door lock .....	38
1.12	Removing and installing side impact bar .....	41
1.13	Removing and installing door seal .....	42
2	<b>Servicing central locking system</b> .....	<b>44</b>
2.1	Removing and installing actuators .....	44
2.2	Removing and installing actuator for fuel tank flap .....	45
<b>61</b>	<b>Convertible soft top, hardtop, canopy</b> .....	<b>46</b>

<b>1</b>	<b>Repairing convertible soft top</b>	<b>46</b>
1.1	Safety precautions	46
1.2	Soft top - overview	46
1.3	Removing and installing soft top	47
1.4	Adjusting soft top	49
1.5	Removing and installing trim for soft top storage box	51
1.6	Removing and installing tensioner and retainer for seal	53
1.7	Removing and installing soft top lock, adjusting soft top lock	53
1.8	Renewing soft top cover - overview	54
1.9	Removing soft top cover	56
1.10	Installing soft top cover	63
1.11	Installing seal for windscreen frame	68
<b>2</b>	<b>Repairing hydraulic system for soft top</b>	<b>70</b>
2.1	Rules for cleanliness	70
2.2	Filling and bleeding the hydraulic system	70
2.3	Hydraulic system - overview	71
2.4	Removing and installing hydraulic pump	73
2.5	Removing and installing hydraulic cylinder	75
<b>3</b>	<b>Repairing hard top</b>	<b>76</b>
3.1	Safety precautions	76
3.2	Hardtop - overview	76
3.3	Removing and installing hard top	77
3.4	Adjusting hard top	80
3.5	Removing and installing moulded headliner	82
<b>63</b>	<b>- Bumpers</b>	<b>85</b>
<b>1</b>	<b>Front bumper</b>	<b>85</b>
1.1	Bumper cover - exploded view	85
1.2	Removing and installing bumper cover	86
1.3	Removing and installing radiator grille	88
1.4	Removing and installing air cowl (centre)	89
1.5	Removing and installing air cowl (outer)	90
1.6	Removing and installing trim (side) on vehicles with 6-cyl. engine or S-line package	90
1.7	Carrier and impact damper - overview	90
<b>2</b>	<b>Rear bumper</b>	<b>92</b>
2.1	Removing and installing rear bumper - overview	92
2.2	Removing and installing guide	94
<b>64</b>	<b>- Glazing</b>	<b>95</b>
<b>1</b>	<b>Flush-bonded windows</b>	<b>95</b>
1.1	Removing and installing flush-bonded windows - general comments	95
<b>2</b>	<b>Removing and installing windscreen</b>	<b>99</b>
2.1	Windscreen - overview	99
2.2	Removing and installing windscreen surround	99
2.3	Removing windscreen	100
2.4	Preparations before installing a new windscreen	103
2.5	Installing windscreen	104
<b>3</b>	<b>Removing and installing side window</b>	<b>105</b>
3.1	Side window - overview	105
3.2	Removing undamaged side window	105
3.3	Removing damaged side window	106
3.4	Preparations before installing a new side window	106
3.5	Installing side window	107
<b>4</b>	<b>Removing and installing rear window</b>	<b>108</b>
4.1	Rear window - overview	108

4.2	Removing an undamaged rear window	108
4.3	Removing damaged rear window	110
4.4	Preparations before installing rear window	111
4.5	Installing rear window	112
<b>5</b>	<b>Removing and installing rear window on hard top</b>	<b>115</b>
5.1	Removing an undamaged rear window	115
5.2	Removing damaged rear window	116
5.3	Preparations before installing rear window	117
5.4	Installing rear window	118
<b>66</b>	<b>- Exterior equipment</b>	<b>120</b>
<b>1</b>	<b>Roof mouldings</b>	<b>120</b>
1.1	Removing and installing roof joint moulding	120
1.2	Converting attachment points for roof carrier	121
1.3	Removing and installing roof trim moulding	122
<b>2</b>	<b>Rear-view mirror</b>	<b>124</b>
2.1	Rear-view mirrors - overview	124
2.2	Removing and installing mirror glass	124
2.3	Removing and installing housing for exterior mirror	125
2.4	Removing and installing electric mirror adjustment unit	126
2.5	Removing and installing mirror base - overview	126
2.6	Detaching cover from mirror base	127
<b>3</b>	<b>Sill panel trim (outer)</b>	<b>128</b>
3.1	Removing and installing sill panel trim (outer)	128
<b>4</b>	<b>Wheel housing liners</b>	<b>129</b>
4.1	Removing and installing wheel housing liner (front)	129
4.2	Removing and installing wheel housing liner (rear)	130
<b>5</b>	<b>Side member trim</b>	<b>131</b>
5.1	Removing and installing side member trim	131
<b>6</b>	<b>Spoiler for rear lid</b>	<b>132</b>
6.1	Removing and installing spoiler for rear lid	132
6.2	Removing spoiler	133
6.3	Installing spoiler (rear lid has holes for locating pins)	134
6.4	Installing spoiler (rear lid without holes for locating pins)	138
6.5	Correcting panel gap at spoiler for rear lid	141
<b>7</b>	<b>Spoiler for rear lid on vehicles with 6-cyl. engine or S-line package</b>	<b>143</b>
7.1	Spoiler for rear lid - overview	143
7.2	Removing and installing spoiler for rear lid	144
7.3	Removing spoiler	144
7.4	Installing spoiler	146
7.5	Correcting panel gap at spoiler for rear lid	149
<b>8</b>	<b>Trim cover panels</b>	<b>152</b>
8.1	Removing and installing trim cover panel for soft top storage box	152