

Contents

00 - Materials	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	5
3.4 Routing and attachment of pipes, hoses and wiring	6
3.5 Contact corrosion	6
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	7
4 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	9
5 Processing body structure adhesive D 180 004 M2	11
5.1 Preparing bonding surfaces	12
6 Tools	26
6.1 Using edge milling unit -VAS 882 005-	30
50 - Body - front	62
1 Safety precautions	62
2 Engine console (right-side) - Renewal	63
2.1 Procedure	63
3 Intermediate piece	65
3.1 Procedure	65
4 Upper wheel housing longitudinal member - Renewal	67
4.1 Procedure	67
5 Front wheel housing - Renewal	69
5.1 Procedure	69
6 Front wheel housing - Partial renewal	71
6.1 Procedure	71
7 Front longitudinal member - Renewal	73
7.1 Procedure	73
8 Front longitudinal member - Partial renewal	75
8.1 Procedure	75
9 Impact damper mounting with towing eye	77
9.1 Procedure	77
51 - Body - centre	79
1 Safety precautions	79
2 Roof - Renewal	80
2.1 Procedure	80
3 Roof side member - Renewal	82
3.1 Procedure	82
4 Cross panel - Renewal	85



4.1	Procedure	85
5	Outer roof frame - Renewal (Roadster)	87
5.1	Procedure	87
6	Front roof cross member - Renewal	89
6.1	Procedure	89
7	Rear roof frame - Renewal	92
7.1	Procedure	92
8	Side frame - Renewal	94
8.1	Procedure	94
9	A-pillar - Renewal	96
9.1	Procedure	96
10	A-pillar - Renewal (Roadster)	99
10.1	Procedure	99
11	Reinforcement tube and inner A-pillar - Renewal (Roadster)	101
11.1	Procedure	101
12	Outer side member - Renewal	103
12.1	Procedure	103
13	Outer side member - Renewal (Roadster)	106
13.1	Procedure	106
14	Seat cross member - Renewal	109
14.1	Procedure	109
15	Floor panel - Renewal	111
15.1	Procedure	111
16	Side member reinforcement - Renewal	113
16.1	Procedure	113
53 - Body - rear		115
1	Safety precautions	115
2	Rear upper cross panel - Renewal	116
2.1	Procedure	116
3	Inner cross panel - Renewal	118
3.1	Procedure	118
4	Tail light mounting - Renewal	120
4.1	Procedure	120
5	Rain channel - Renewal	123
5.1	Procedure	123
6	Side frame connecting plate	125
6.1	Procedure	125
7	Luggage compartment floor - Partial renewal	127
7.1	Procedure	127
8	Luggage compartment floor - Renewal	129
8.1	Procedure	129
9	Rear longitudinal member - Partial renewal	131
9.1	Procedure	131
10	Side panel - Renewal	133
10.1	Procedure	133
11	Side panel - Renewal (Roadster)	135
11.1	Procedure	135
12	Rear wheel housing - Renewal	138
12.1	Procedure	138