

Contents

01	Self-diagnosis	1
1	Connecting fault reader V.A.G 1551	1
1.1	Connecting fault reader V.A.G 1551	1
2	Self-diagnosis of airbag system BTU (basic triggering unit) with side airbag	2
2.1	Self-diagnosis of airbag system BTU (basic triggering unit) with side airbag	2
2.2	General notes	2
2.3	Initiating self-diagnosis of airbag system	3
2.4	Interrogating fault memory	4
2.5	Fault table for BTU airbag system	5
2.6	Interrogating airbag control unit version	11
2.7	Final control diagnosis up to CW 18.99.	12
2.8	Final control diagnosis as of week 18.99.	13
2.9	Encoding airbag control unit	14
2.10	Reading measured value block	16
2.11	Summary of measured value blocks	16
2.12	Adaption: Disabling and activating passenger airbag unit	17
3	Self-diagnosis of central locking system	20
3.1	Self-diagnosis of central locking system	20
3.2	General notes	20
3.3	System description of anti-theft alarm with Thatcham ATW function (2nd generation)	20
3.4	Initiating self-diagnosis of the central locking system	20
3.5	Interrogating fault memory	22
3.6	Fault table for the central locking	22
3.7	Interrogating control unit version of central locking control unit	29
3.8	Final control diagnosis	30
3.9	Encoding central locking control unit	33
3.10	Encoding table for TT Roadster with manual convertible top and TT Coupe up to CW 18.00	35
3.11	Encoding table for TT Roadster with semi-automatic convertible top up to CW 18.00	35
3.12	Encoding table for TT Roadster with manual convertible top and TT Coupe as of CW 18.00	35
3.13	Encoding table for TT Roadster with semi-automatic convertible top as of CW 18.00	36
3.14	Encoding table for TT Roadster with manual convertible top and TT Coupe as of CW 27.01 (with introduction of software version D06)	36
3.15	Encoding table for TT Roadster with semi-automatic convertible top as of CW 27.01 (with introduction of software version D06)	37
3.16	Encoding table for vehicles in Great Britain	37
3.17	Encoding table for vehicles in Japan	38
3.18	Reading measured value block	40
3.19	Measured value block overview	42
3.20	Adaption of remote keys	46
3.21	Adaption	48
4	Self-diagnosis of interior monitor	50
4.1	Self-diagnosis of interior monitor	50
4.2	General notes	50
4.3	Function in Audi TT Coupe	50
4.4	Function on Audi TT Roadster	51
4.5	Initiating self-diagnosis of the interior monitor	52
4.6	Interrogating fault memory	53
4.7	Fault table for interior monitor	54
4.8	Interrogating control unit version	55
4.9	Final control diagnosis	56
4.10	Functional test of interior monitor	56
4.11	Encoding control unit (Audi TT Coupe)	56



4.12	Encoding control unit (Audi TT Roadster)	58
4.13	Reading measured value block	58
4.14	Measured value block overview	59
4.15	Adaption	59
4.16	Erase fault memory	61
4.17	End of output	62