

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating gear ratios "i"	5
3.1 Calculating gear ratios "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
4.2 Contact corrosion	5
30 - Clutch	8
1 Servicing clutch control	8
1.1 Servicing clutch control	8
1.2 Assembly overview - Pedal cluster	9
1.3 Removing and installing over-centre spring (left-hand drive vehicles)	12
1.4 Removing and installing clutch pedal	14
1.5 Assembly overview - Hydraulic system	16
1.6 Removing and installing master cylinder	19
1.7 Bleeding clutch system	24
2 Servicing clutch release mechanism	27
2.1 Servicing clutch release mechanism	27
2.2 Removing and installing slave cylinder/ release bearing	28
3 Servicing clutch	28
3.1 Servicing clutch	28
34 - Controls, Housing	33
1 Servicing gear selector mechanism	33
1.1 Servicing gear selector mechanism	33
1.2 Installation position of gear selector mechanism	33
1.3 Removing and installing gear stick knob and gaiter	35
1.4 Servicing gear stick	36
1.5 Removing and installing gear selector mechanism	39
1.6 Assembly overview - removing and installing selector cables	44
1.7 Adjusting gear selector mechanism	49
2 Removing and installing gearbox	53
2.1 Removing and installing gearbox	53
2.2 Removing	55
2.3 Transporting the gearbox	65
2.4 Installing	67
3 Checking gear oil	73
3.1 Checking gear oil	73
4 Dismantling and assembling gearbox	74
4.1 Dismantling and assembling gearbox	74
4.2 Overview	74
4.3 Assembly overview	76
4.4 Removing and installing gearbox housing and selector mechanism	77
4.5 Removing and installing input shaft, output shafts (pinion shafts), differential and selector rods	80
4.6 Assembly sequence	85
5 Servicing gearbox housing	91



5.1	Servicing gearbox housing	91
6	 Servicing clutch housing	101
6.1	Servicing clutch housing	101
7	 Dismantling and assembling gearbox selector mechanism	108
7.1	Dismantling and assembling gearbox selector mechanism	108
8	 Dismantling and assembling selector forks	112
8.1	Dismantling and assembling selector forks	112
35 - Gears, Shafts		115
1	 Dismantling and assembling input shaft	115
1.1	Dismantling and assembling input shaft	115
2	 Adjusting input shaft	126
2.1	Adjusting input shaft	126
3	 Dismantling and assembling output shaft, 1st-4th gear	131
3.1	Dismantling and assembling output shaft, 1st-4th gear	131
4	 Adjusting output shaft for 1st-4th gears	152
4.1	Adjusting output shaft for 1st-4th gears	152
5	 Dismantling and assembling output shaft for 5th, 6th and reverse gear	157
5.1	Dismantling and assembling output shaft for 5th, 6th and reverse gear	157
6	 Adjusting output shaft for 5th, 6th and reverse gear	175
6.1	Adjusting output shaft for 5th, 6th and reverse gear	175
39 - Final drive, Differential		180
1	 Renewing left flange shaft oil seal	180
1.1	Renewing left flange shaft oil seal	180
1.2	Renewing oil seal for right flange shaft	182
2	 Dismantling and assembling differential	184
2.1	Dismantling and assembling differential	184
3	 Adjustment overview	197
3.1	Adjustment overview	197
4	 Adjusting differential	198
4.1	Adjusting differential	198