

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
<b>2 Notes on the automatic 6-speed gearbox 09G</b> .....	<b>2</b>
<b>3 Code letters, gearbox allocation, ratios, equipment</b> .....	<b>3</b>
<b>4 Capacities in planetary gearbox and final drive</b> .....	<b>4</b>
<b>5 Safety precautions</b> .....	<b>5</b>
<b>6 Notes on tow-starting and towing</b> .....	<b>7</b>
<b>7 Repair instructions</b> .....	<b>8</b>
7.1 Contact corrosion! .....	8
7.2 General repair instructions .....	8
<b>8 Rules for cleanliness when working on the automatic gearbox</b> .....	<b>11</b>
<b>32 - Torque converter</b> .....	<b>12</b>
<b>1 Exploded view - torque converter</b> .....	<b>12</b>
1.1 Identification of torque converter .....	13
1.2 Renewing oil seal for torque converter .....	13
1.3 Draining torque converter .....	14
1.4 Checking torque converter .....	15
1.5 Installing torque converter .....	15
<b>37 - Controls, housing</b> .....	<b>17</b>
<b>1 Electrical/electronic components and fitting locations</b> .....	<b>17</b>
1.1 Removing and installing automatic gearbox control unit J217 .....	23
<b>2 Exploded view - shift unit</b> .....	<b>24</b>
2.1 Checking selector mechanism and ignition key removal lock .....	25
2.2 Removing and installing selector lever handle .....	27
2.3 Removing and installing shift unit .....	27
<b>3 Exploded view - selector mechanism</b> .....	<b>31</b>
3.1 Removing and installing printed circuit with tiptronic switch F189 .....	32
3.2 Removing and installing sliding cover for selector lever .....	34
3.3 Removing and installing selector lever lock solenoid N110 .....	35
3.4 Removing and installing selector lever cable .....	36
3.5 Checking and adjusting selector lever cable .....	39
3.6 Removing and installing locking cable .....	40
3.7 Adjusting locking cable .....	42
<b>4 Removing and installing gearbox</b> .....	<b>44</b>
<b>5 Transporting the automatic gearbox</b> .....	<b>57</b>
<b>6 Securing gearbox to engine and gearbox support</b> .....	<b>58</b>
<b>7 Exploded view - subframe</b> .....	<b>60</b>
7.1 Removing and installing gearbox mounting .....	61
7.2 Removing and installing pendulum support .....	63
<b>8 Overview - ATF in gearbox</b> .....	<b>65</b>
8.1 Checking and correcting ATF level .....	65
8.2 Filling up with ATF - vehicles with ATF filler hole .....	69
8.3 Filling up with ATF - vehicles without ATF filler hole .....	71
8.4 Draining ATF .....	73
8.5 Filling up with ATF following repair work - vehicles with ATF filler hole .....	75
8.6 Filling up with ATF following repair work - vehicles without ATF filler hole .....	78
<b>9 Exploded view - ATF cooler</b> .....	<b>80</b>
9.1 Removing and installing ATF cooler .....	80



<b>38 - Gears, control</b>	<b>82</b>
<b>1 Exploded view - ATF oil pan, ATF strainer, valve body and internal wiring harnesses</b>	<b>82</b>
1.1 Removing and installing ATF oil pan	86
1.2 Removing and installing ATF strainer	88
1.3 Removing and installing valve body	88
1.4 Removing and installing wiring harness with 14-pin connector	94
1.5 Removing and installing wiring harness with 8-pin connector and gearbox oil temperature sender G93	95
1.6 Removing and installing gearbox input speed sender G182	96
1.7 Removing and installing gearbox output speed sender G195	97
<b>2 Overview - multi-function switch F125</b>	<b>98</b>
2.1 Removing and installing multi-function switch F125	99
2.2 Adjusting multi-function switch F125	100
2.3 Renewing oil seal for selector shaft	102
<b>39 - Final drive - front differential</b>	<b>104</b>
<b>1 Flange shaft oil seals</b>	<b>104</b>
1.1 Renewing flange shaft oil seal (left-side)	104
1.2 Renewing flange shaft oil seal (right-side)	106