

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code letters, gearbox allocation, ratios, equipment	2
2.1 Calculating ratio „i“	3
3 Capacities	4
4 Safety precautions	5
4.1 When working on the vehicle	5
4.2 When using test equipment while road-testing the vehicle	6
5 Notes on the direct shift gearbox 02E	7
5.1 General notes	7
5.2 Safety functions of gearbox control unit	8
6 Notes on tow-starting and towing	9
7 Repair instructions	10
7.1 Contact corrosion!	10
7.2 General notes	10
8 Rules for cleanliness when working on the gearbox	12
30 - Clutch	13
1 Servicing multiple clutch	13
1.1 Multiple clutch - exploded view (replacement parts)	13
1.2 Removing and installing multiple clutch	14
34 - Controls, housing	25
1	25
2 Servicing selector mechanism	28
2.1 Checking selector mechanism	28
2.2 Checking selector lever cable	29
2.3 Adjusting selector lever cable - vehicles with vehicle ID No. to 8N 41013847	30
2.4 Adjusting selector lever cable - vehicles with vehicle ID No. from 8N 41013848	31
2.5 Checking adjustment of selector lever cable	32
2.6 Checking function of ignition key removal lock	33
2.7 Dismantling and assembling selector mechanism	34
2.8 Removing and installing selector lever handle	37
2.9 Removing and installing selector mechanism cover	37
2.10 Removing and installing selector mechanism	38
2.11 Removing and installing tiptronic switch F189	40
2.12 Removing and installing selector lever lock solenoid N110	40
2.13 Removing and installing selector lever cable	41
2.14 Removing and installing locking cable	48
2.15 Adjusting locking cable	50
2.16 Checking connectors on selector mechanism	51
3 Removing and installing gearbox	52
3.1 Removing gearbox	52
3.2 Installing gearbox	60
3.3 Removing and installing gearbox mounting	65
3.4 Removing and installing pendulum support	69
3.5 Transporting the direct shift gearbox	69
3.6 Securing gearbox to assembly stand	70
4 Gear oil in direct shift gearbox	73
4.1 Overview - gear oil in direct shift gearbox	73
4.2 Checking and topping up gear oil level	74



4.3	Changing gear oil or filling up after performing repairs	81
4.4	Removing and installing gear oil cooler	85
4.5	Removing and installing gear oil filter	87
5	Removing and installing bevel box	91
6	Checking and topping up gear oil in bevel box	96
6.1	Draining oil in bevel box and filling up after repairs	97
35 - Gears, shafts		99
1	Oil pan, mechatronic unit and gear oil pump	99
1.1	Exploded view - oil pan, mechatronic unit and gear oil pump	99
1.2	Removing and installing oil pan	102
1.3	Removing and installing mechatronic unit for dual clutch gearbox J743	105
1.4	Removing and installing gearbox input speed sender G182 / oil temperature sender for multi-plate clutch G509	112
1.5	Removing and installing gear oil pump	113
39 - Final drive - front differential		116
1	Flange shaft and oil seals on gearbox - exploded view	116
1.1	Removing and installing flange shaft (left-side)	116
1.2	Renewing flange shaft oil seal (left-side)	117
1.3	Renewing oil seal between bevel box and gearbox (on gearbox)	118
1.4	Renewing selector shaft oil seal	120
2	Flange shafts and oil seals on bevel box - exploded view	123
2.1	Removing and installing flange shaft (right-side)	124
2.2	Renewing flange shaft oil seal (right-side) at bevel box (outer)	125
2.3	Renewing needle bearings (polygon bearings) for flange shaft (right-side)	126
2.4	Renewing oil seal between gearbox and bevel box (on bevel box)	128
2.5	Renewing oil seal for bevel box output flange	129
3	Propshaft	135
4	Rear final drive	136