

Contents

24 - Mixture preparation - injection	1
1 Servicing Motronic injection system	1
1.1 Safety precautions	1
1.2 Rules for cleanliness	2
1.3 Technical data	2
1.4 Overview - fitting locations	2
1.5 Dismantling and assembling air cleaner	8
1.6 Intake manifold - exploded view of components	10
1.7 Removing and installing intake manifold	10
1.8 Wiring and component check on engine control unit with test box V.A.G 1598/31	22
1.9 Removing and installing engine control unit	23
1.10 Checking system pressure, fuel pressure regulator and residual pressure	26
1.11 Dismantling and assembling fuel rail with injectors	29
1.12 Removing and installing injectors	30
1.13 Checking injection quantity and spray pattern of injectors; checking for leaks	31
1.14 Removing and installing Lambda probes (before catalytic converter)	34
1.15 Removing and installing Lambda probes (after catalytic converter)	36
28 - Ignition system	38
1 Checking ignition system	38
1.1 General notes on ignition system	38
1.2 Safety precautions	38
1.3 Technical data	38
1.4 Removing and installing parts of the ignition system	38
1.5 Removing and installing ignition coils	40
1.6 Removing and installing spark plugs	41