

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	3
1.2 Separating engine from manual gearbox	23
1.3 Separating engine from automatic gearbox 09A	24
1.4 Securing engine to assembly stand	26
1.5 Installing engine	28
2 Adjusting assembly mountings	36
2.1 Checking adjustment	36
2.2 Adjusting assembly mountings	36
13 - Crankshaft group	40
1 Servicing work on pulley end	40
1.1 Poly V-belt drive - exploded view of components	40
1.2 Removing and installing poly V-belt	41
1.3 Removing and installing vibration damper	43
1.4 Removing and installing bracket for ancillaries	44
1.5 Toothed belt - exploded view of components	49
1.6 Removing and installing toothed belt	52
1.7 Removing toothed belt from camshaft sprocket	57
1.8 Positioning crankshaft at "TDC" with engine installed	58
1.9 Positioning crankshaft at "TDC" with engine removed	61
2 Removing and installing sealing flanges and dual-mass flywheel/drive plate	63
2.1 Sealing flanges and dual-mass flywheel/drive plate - exploded view of components	63
2.2 Renewing crankshaft oil seal (pulley end)	65
2.3 Removing and installing sealing flange (front)	67
2.4 Removing and installing dual-mass flywheel	69
2.5 Removing and installing drive plate	70
3 Removing and installing crankshaft	73
3.1 Crankshaft - exploded view of components	73
3.2 Crankshaft dimensions	75
3.3 Removing and installing drive chain sprocket	75
4 Dismantling and assembling pistons and conrods	78
4.1 Different versions of conrods	78
4.2 Pistons and conrods - exploded view of components	78
4.3 Piston and cylinder dimensions	82
4.4 Measuring radial clearance of conrods	82
15 - Cylinder head, valve gear	84
1 Removing and installing cylinder head	84
1.1 Cylinder head - exploded view of components	84
1.2 Removing and installing cylinder head cover	86
1.3 Removing and installing cylinder head	89
1.4 Removing and installing intake manifold	94
1.5 Checking compression	98
2 Servicing valve gear	102
2.1 Valve gear - exploded view of components	102



2.2	Checking axial clearance of camshafts	105
2.3	Renewing exhaust camshaft oil seal	106
2.4	Renewing inlet camshaft oil seal	108
2.5	Removing and installing camshafts and hydraulic chain tensioner/camshaft adjuster	110
2.6	Checking hydraulic bucket tappets	116
2.7	Renewing valve stem oil seals	117
2.8	Valve dimensions	121
2.9	Checking valve guides	121
2.10	Machining valve seats	122
3	Checking variable valve timing - not on engine codes AJQ, APP, ATC	125
3.1	Checking function of variable valve timing	125
3.2	Checking inlet camshaft control valve 1 N205	126
17	Lubrication	131
1	Removing and installing parts of lubrication system	131
1.1	Lubrication system - exploded view of components	131
1.2	Removing and installing sump	132
1.3	Removing and installing oil pump	136
1.4	Oil filter and oil cooler - exploded view of components	136
1.5	Checking oil pressure and oil pressure switch F1	138
1.6	Engine oil	140
1.7	Checking oil level	141
19	Cooling	142
1	Removing and installing parts of cooling system	142
1.1	Diagram of coolant hose connections	142
1.2	Draining and filling cooling system	144
1.3	Removing and installing coolant pump	149
1.4	Removing and installing thermostat	150
1.5	Checking thermostat	152
1.6	Removing and installing coolant pipe	152
1.7	Radiator and radiator fan - exploded view of components	155
1.8	Removing and installing radiator	156
1.9	Checking cooling system for leaks	160
21	Turbocharging/supercharging	163
1	Charge air system with turbocharger	163
1.1	Safety precautions	163
1.2	Test requirements for checking turbocharging system	163
1.3	Diagram of connections for charge pressure control system and vacuum system	164
1.4	Effects of leaks in charge air system	168
1.5	Checking turbocharger and charge pressure regulating valve	169
1.6	Checking mechanical air recirculation valve	174
1.7	Checking air recirculation valve for turbocharger N249	175
1.8	Checking solenoid valve for charge pressure control N75	179
1.9	Checking charge pressure sender G31	184
2	Servicing charge air system with turbocharger	189
2.1	Rules for cleanliness	189
2.2	Turbocharger - exploded view of components	189
2.3	Removing and installing turbocharger	191
2.4	Charge air cooler - exploded view of components	199
2.5	Removing and installing charge air cooler	200
26	Exhaust system	202
1	Removing and installing parts of exhaust system - vehicles with front-wheel drive	202
1.1	Exhaust system - exploded view of components	202

1.2	Separating centre and rear silencers	205
1.3	Removing and installing front exhaust pipe with catalytic converter	206
1.4	Removing and installing exhaust manifold	207
1.5	Stress-free alignment of exhaust system	210
1.6	Checking exhaust system for leaks	212
2	Removing and installing parts of exhaust system - vehicles with four-wheel drive	213
2.1	Exhaust system - exploded view of components	213
2.2	Separating centre and rear silencers	215
2.3	Removing and installing front exhaust pipe with catalytic converter	216
2.4	Removing and installing exhaust manifold	219
2.5	Stress-free alignment of exhaust system	222
2.6	Checking exhaust system for leaks	224
3	Secondary air system - not applicable to engine code AJQ	225
3.1	Principle and function	225
3.2	Checking secondary air inlet valve N112	227
3.3	Checking secondary air pump relay J299 and secondary air pump motor V101	233
3.4	Checking combination valve for secondary air system for proper operation and leakage	238
3.5	Removing and installing combination valve for secondary air system	240
3.6	Removing and installing secondary air pump	241