

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	3
1.2 Separating engine and manual gearbox	22
1.3 Separating engine and dual clutch gearbox	23
1.4 Securing engine to assembly stand	25
1.5 Installing engine	27
2 Adjusting engine mountings	33
2.1 Checking adjustment	33
2.2 Adjusting engine mountings	34
13 - Crankshaft group	38
1 Servicing work on pulley end	38
1.1 Exploded view - poly V-belt	38
1.2 Removing and installing poly V-belt	40
1.3 Removing and installing bracket for ancillaries	41
1.4 Removing and installing vibration damper	46
1.5 Renewing crankshaft oil seal (vibration damper end)	48
1.6 Removing and installing sealing flange (front)	51
2 Servicing work on timing chain end	55
2.1 Exploded view - covers for timing chain, dual-mass flywheel	55
2.2 Removing and installing dual-mass flywheel	56
2.3 Extracting and driving in needle bearing for crankshaft	57
2.4 Renewing crankshaft oil seal (timing chain end)	58
2.5 Removing and installing oil seals in upper cover for camshaft timing chains	60
3 Camshaft drive	62
3.1 Exploded view - timing chains	62
3.2 Removing timing chain from camshafts	64
3.3 Removing and installing camshaft timing chain and drive chain for valve gear	74
4 Removing and installing crankshaft	85
4.1 Exploded view - crankshaft	85
4.2 Crankshaft dimensions	87
5 Dismantling and assembling pistons and conrods	88
5.1 Exploded view - pistons and conrods	88
5.2 Piston and cylinder dimensions	91
15 - Cylinder head, valve gear	92
1 Removing and installing cylinder head	92
1.1 Exploded view - cylinder head	92
1.2 Removing and installing cylinder head cover	93
1.3 Removing and installing cylinder head	104
1.4 Checking compression	107
2 Servicing valve gear	110
2.1 Exploded view - valve gear	110
2.2 Removing and installing camshafts	113
2.3 Checking axial clearance of camshafts	117
2.4 Renewing valve stem oil seals	117

2.5	Valve dimensions	122
2.6	Checking valve guides	122
2.7	Machining valve seats	123
17	- Lubrication	126
1	Removing and installing parts of lubrication system	126
1.1	Exploded view - lubrication system	126
1.2	Removing and installing sump	128
1.3	Exploded view - oil filter bracket	131
1.4	Removing and installing oil filter bracket	133
1.5	Exploded view - oil pump	137
1.6	Checking oil pressure and oil pressure switch	139
1.7	Engine oil	145
1.8	Checking oil level	145
19	- Cooling	146
1	Removing and installing parts of cooling system	146
1.1	Connection diagram - coolant hoses	146
1.2	Draining and filling cooling system	148
1.3	Removing and installing coolant pump	152
1.4	Exploded view - thermostat housing	158
1.5	Removing and installing thermostat housing	159
1.6	Removing, installing and checking thermostat	165
1.7	Removing and installing coolant pipe	166
1.8	Removing and installing continued coolant circulation pump V51	167
1.9	Exploded view - radiator and radiator fans	169
1.10	Removing and installing radiator	170
1.11	Checking cooling system for leaks	176
1.12	Removing and installing electrical radiator fan V7 and radiator fan 2 V177	178
26	- Exhaust system	184
1	Removing and installing parts of exhaust system	184
1.1	Exploded view - exhaust system	184
1.2	Separating centre and rear silencers	186
1.3	Removing and installing exhaust manifold	187
1.4	Removing and installing front exhaust pipe	198
1.5	Stress-free alignment of exhaust system	203
1.6	Checking exhaust system for leaks	205
2	Servicing secondary air system	206
2.1	Principle and function	206
2.2	Exploded view - secondary air system	206
2.3	Checking combination valve for secondary air system for correct operation and leakage	208
2.4	Removing and installing combination valve for secondary air system	209
2.5	Removing and installing secondary air pump	210
3	Servicing exhaust flap	214
3.1	Checking exhaust flap	214
3.2	Checking vacuum unit for exhaust flap	215