

Contents

20 - Fuel supply system	1
1 General repair instructions	1
1.1 Safety precautions	1
1.2 Rules for cleanliness	2
1.3 Test conditions	2
1.4 Contact corrosion!	2
2 Tank flap - all versions	4
2.1 Tank flap - exploded view	4
2.2 Removing and installing tank flap unit	4
3 Fuel tank - rest-of-world vehicles (front-wheel drive)	6
3.1 Fuel tank with attached components - exploded view	6
3.2 Draining fuel tank	8
3.3 Removing and installing fuel tank with attached components	10
4 Fuel tank - USA vehicles (front-wheel drive)	15
4.1 Fuel tank with attached components and fuel filler neck - exploded view	15
4.2 Draining fuel tank	19
4.3 Removing and installing fuel tank with attached components	21
5 Fuel delivery unit and fuel gauge sender - all vehicles with front-wheel drive	26
5.1 Fuel delivery unit and fuel gauge sender - exploded view	26
5.2 Fuel system pressurisation pump G6 - electrical test	27
5.3 Checking fuel pump delivery rate	29
5.4 Removing and installing fuel delivery unit	31
5.5 Checking fuel gauge sender G	34
5.6 Removing and installing fuel gauge sender G	37
6 Fuel tank - rest-of-world vehicles (four-wheel drive)	38
6.1 Fuel tank with attached components - exploded view	38
6.2 Draining fuel tank	40
6.3 Removing and installing fuel tank with attached components	43
7 Fuel tank - USA vehicles (four-wheel drive)	47
7.1 Fuel tank with attached components and fuel filler neck - exploded view	47
7.2 Draining fuel tank	51
7.3 Removing and installing fuel tank with attached components	53
8 Fuel delivery unit and fuel gauge sender - all vehicles with four-wheel drive	58
8.1 Fuel delivery unit and fuel gauge sender - exploded view	58
8.2 Fuel system pressurisation pump G6 - electrical test	60
8.3 Checking fuel pump delivery rate	62
8.4 Removing and installing fuel delivery unit	64
8.5 Checking fuel gauge sender	68
8.6 Removing and installing fuel gauge sender G	70
8.7 Removing and installing fuel gauge sender 2 G169	71
8.8 Suction-jet pump	71
8.9 Removing and installing suction-jet pump	72
9 Activated charcoal filter system - rest-of-world vehicles	74
9.1 Activated charcoal filter system - exploded view	74
10 Activated charcoal filter system and tank leak diagnostic system - USA vehicles	75
10.1 Activated charcoal filter system and tank leak diagnostic system - exploded view	75
10.2 Checking activated charcoal filter solenoid valve 2 N115	76
10.3 Removing and installing activated charcoal filter	80
10.4 Activated charcoal filter solenoid valve 1 N80 and vacuum reservoir - exploded view	82
10.5 Routing of pipes/hoses for activated charcoal filter system and tank leak diagnostic system	84



10.6	Tank leak diagnostic system	85
10.7	Automatic tank leak diagnosis	85
10.8	Performing tank leak diagnosis	85
10.9	Checking fuel tank system and tank breather system for leaks	89
10.10	Fuel system diagnostic pump V144 - exploded view	91
10.11	Checking fuel system diagnostic pump V144	93
10.12	Removing and installing fuel system diagnostic pump V144	97
11	Accelerator mechanism - all vehicles	98
11.1	Accelerator pedal with accelerator pedal module - exploded view	98
11.2	Removing and installing accelerator pedal module	99
11.3	Adapting kick-down function - vehicles with automatic gearbox or dual clutch gearbox ..	99
11.4	Accelerator mechanism on right-hand drive vehicles without accelerator pedal module - exploded view	101
11.5	Adjusting accelerator position sender G79 - right-hand drive vehicles without accelerator pedal module	102