

001 - Basic equipment, from model year 1999	1-27
1. Basic equipment, from model year 1999	1
2. Earth connections	2
3. X contact relief relay, ignition/starter switch	3
4. Main fuse box/battery, horn	4
5. Dash panel insert, immobilizer	5
6. Dash panel insert, oil pressure switch, coolant shortage indicator switch, fuel pump	6
7. Dash panel insert, speedometer sender	7
8. Dash panel insert, handbrake warning switch, brake fluid level warning contact, ambient temperature sensor	8
9. Dash panel insert, diagnosis connection	9
10. Dash panel insert, coolant temperature gauge	10
11. Dash panel insert, turn signal warning lamps, basic wiring for radio	11
12. Turn signal switch, headlight dipper/flasher switch, parking light switch, front turn signals, side turn signals	12
13. Lighting switch, front and rear fog light switch	13
14. Hazard warning light switch	14
15. Fog light relay, headlight, left, fuses	15
16. Headlights, right, fuses	16
17. Headlight range control adjuster, headlight range control motors	17
18. Automatic intermittent wash/wipe relay, intermittent wiper switch, windscreen washer pump	18
19. Automatic intermittent wash/wipe relay, windscreen wiper motor, glove box light, number plate light, fuses	19
20. Tail lights, brake lights, reversing light, rear fog light	20
21. Heated washer jets, fuses	21
22. Heated rear window, fuses	22
23. Cigarette lighter, fuses	23
24. Diagnosis connection, fuses	24
25. Fuses, radiator fan, continued circulation of coolant pump	25
26. Fresh air blower	26
27. Interior light, reading lights, illuminated make-up mirrors	27
002 - 1.8 litre fuel injection engine, 155 kW, Motronic, 4-cylinder, engine code AJQ, from model year 1999	28-37
1. 1.8 litre fuel injection engine, 155 kW, Motronic, 4-cylinder, engine code AJQ, from model year 1999	28
2. Battery, starter, alternator, ignition/starter switch, main fuse box/battery	29
3. Motronic control unit, fuel pump relay, injectors, brake light switch, clutch pedal switch	30
4. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator pedal position senders	31
5. Motronic control unit, lambda probe, air mass meter, activated charcoal filter system solenoid valve, charge pressure control solenoid valve, turbocharger divert air valve	32
6. Motronic control unit, engine speed sender, intake manifold pressure sender, Hall sender, knock sensor 1	33
7. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature sender, throttle valve control unit	34
8. Motronic control unit, ignition coils	35
9. Fuses, speedometer sender, fuel gauge sender, fuel pump	36
10. Dash panel insert, oil pressure switch, ambient temperature sensor	37
003 - Electrically adjustable and heated exterior mirrors	38-40
1. Electrically adjustable and heated exterior mirrors	38
2. Electrically adjustable and heated exterior mirrors, driver's side	39
3. Electrically adjustable and heated exterior mirrors, front passenger's side	40
004 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	41-50
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	41-42
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	43
3. Central locking control unit, lock cylinder switch driver's door	44
4. Central locking control unit, lock cylinder switch front passenger's door	45
5. Central locking control unit, remote control switches for boot lid/tailgate and tank filler flap	46
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment light	47
7. Central locking control unit, door warning lamp, left, door warning lamp, right	48
8. Central locking control unit, interior light, reading lights, illuminated make-up mirrors	49
9. Central locking control unit	50
005 - Electric window lifters (with roll back)	51-55

1. Electric window lifters (with roll back)	51-52
2. Electric window lifters, front left, fuse for window lifters	53
3. Electric window lifters, front right	54
4. Electric window lifters, front	55
006 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	56-59
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	56
2. ABS with EDL control unit, fuses, speed sensors	57
3. ABS with EDL control unit, traction control system switch	58
4. ABS with EDL control unit, brake light switch, hydraulic pump for quattro four-wheel drive	59
007 - Airbags	60-63
1. Airbags	60
2. Airbag control unit	61
3. Airbag, side airbags and belt tensioners for driver and front passenger	62
4. Crash sensors, airbag disabling key switch, front passenger's side	63
008 - Heated seats	64-66
1. Heated seats	64
2. Heated seat, driver's seat	65
3. Heated seat, front passenger's seat	66
009 - Headlights with gas discharge lamps and automatic headlight range control, from model year 1999	67-74
1. Headlights with gas discharge lamps and automatic headlight range control, from model year 1999	67
2. Ignition/starter switch, X contact relief relay	68
3. Lighting switch	69
4. Steering column switch	70
5. Fuses, left gas discharge lamp, left gas discharge lamp control unit	71
6. Fuses, right gas discharge lamp, right gas discharge lamp control unit	72
7. Headlight range control, control unit, vehicle level senders	73
8. Headlight range control motors, fog light relay	74
010 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	75-80
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	75-76
2. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	77
3. Ignition/starter switch, X contact relief relay	78
4. Headlights, left	79
5. Headlights, right	80
011 - Headlight washer system	81-83
1. Headlight washer system	81-82
2. Headlight washer system	83
012 - Central locking with radio-operated remote control and interior lights switch-off delay without anti-theft alarm system (Coupé models)	84-91
1. Central locking with radio-operated remote control and interior lights switch-off delay without anti-theft alarm system (Coupé models)	84-85
2. Central locking control unit, fuses	86
3. Central locking control unit, lock cylinder switch driver's door	87
4. Central locking control unit, lock cylinder switch front passenger's door	88
5. Central locking control unit, remote control switches for boot lid/tailgate and tank filler flap, luggage compartment lights	89
6. Central locking control unit, interior locking switch, door warning lamp, left, door warning lamp, right	90
7. Central locking control unit, reading lights, illuminated make-up mirrors	91
013 - Driver information system	92-97
1. Driver information system	92-93
2. Bulb monitoring device, dipped beam headlights	94
3. Bulb monitoring device, tail lights, brake lights	95
4. On-board computer with auto-check system, function selection switch, reset button	96
5. Dash panel insert, windscreen washer fluid warning contact, ambient temperature sensor	97
014 - Provision for radio	98-100
1. Provision for radio	98
2. Provision for radio	99
3. Provision for radio	100
015 - Radio stereo system: Chorus, Concert	101-104
1. Radio stereo system: Chorus, Concert	101
2. Radio stereo system: Chorus, Concert	102
3. Radio stereo system: Chorus, Concert	103
4. Radio stereo system: Chorus, Concert	104

016 - Radio Bose system Concert with and without CD changer	105-110
1. Radio Bose system Concert with and without CD changer	105
2. Radio Bose system Concert with and without CD changer	106
3. Radio Bose system Concert with and without CD changer	107
4. Radio Bose system Concert with and without CD changer	108
5. Radio Bose system Concert with and without CD changer	109
6. Radio Bose system Concert with and without CD changer	110
017 - Mobile phone	111-113
1. Mobile phone	111
2. Mobile phone	112
3. Mobile phone	113
018 - Air conditioner with automatic control	114-123
1. Air conditioner with automatic control	114-115
2. Control and display unit for air conditioner, coolant temperature warning switch, air conditioner pressure switch, high pressure sender	116
3. Control and display unit for air conditioner, combi-processor in dash panel insert	117
4. Control and display unit for air conditioner, control motors for temperature flap, central flap and air flow flap	118
5. Control and display unit for air conditioner, footwell/defroster flap control motor, ambient temperature sensor and fresh air intake duct temperature sensor, sunlight penetration photosensor	119
6. Control and display unit for air conditioner, fresh air blower control unit, fresh air blower	120
7. Radiator fan control unit, fuses	121
8. Radiator fan control unit and thermo-switches, radiator fan	122
9. Radiator fan control unit, air conditioning system magnetic coupling, continued circulation of coolant pump	123
019 - 1.8 litre fuel injection engine, 165 kW, Motronic, 4-cylinder, engine code APX, from model year 1999	124-134
1. 1.8 litre fuel injection engine, 165 kW, Motronic, 4-cylinder, engine code APX, from model year 1999	124
2. Battery, starter, alternator, ignition/starter switch, main fuse box/battery	125
3. Motronic control unit, fuel pump relay, injectors, brake light switch, clutch pedal switch	126
4. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator pedal position senders	127
5. Motronic control unit, secondary air pump, lambda probe, air mass meter, activated charcoal filter system solenoid valve	128
6. Motronic control unit, four-wheel drive control unit, charge pressure control solenoid valve, turbocharger divert air valve	129
7. Motronic control unit, engine speed sender, intake manifold pressure sender, Hall sender, knock sensor 1	130
8. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature sender, throttle valve control unit	131
9. Motronic control unit, ignition coils	132
10. Fuses, speedometer sender, fuel gauge sender, fuel pump	133
11. Dash panel insert, handbrake warning switch, oil pressure switch, ambient temperature sensor	134
020 - Haldex coupling (02D) for quattro four-wheel drive, from model year 1999	135-137
1. Haldex coupling (02D) for quattro four-wheel drive, from model year 1999	135
2. Haldex coupling (02D) for quattro four-wheel drive	136
3. Haldex coupling (02D) for quattro four-wheel drive	137
021 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), from model year 1999	138-149
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), from model year 1999	138
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	139
3. Central locking control unit, lock cylinder switch driver's door	140
4. Central locking control unit, lock cylinder switch front passenger's door	141
5. Central locking control unit, remote control switches for boot lid/tailgate and tank filler flap	142
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment light	143
7. Central locking control unit, door warning lamp, left, door warning lamp, right	144
8. Central locking control unit, interior light, reading lights, illuminated make-up mirrors	145
9. Central locking control unit	146
10. Convertible top, heated rear window	147
11. Convertible top	148
12. Wind deflector	149
022 - Radio-Bose system Concert with and without CD changer (Roadster)	150-155
1. Radio-Bose system Concert with and without CD changer (Roadster)	150

2. Radio Bose system Concert with and without CD changer	151
3. Radio Bose system Concert with and without CD changer	152
4. Radio Bose system Concert with and without CD changer	153
5. Radio Bose system Concert with and without CD changer	154
6. Radio Bose system Concert with and without CD changer	155
023 - Radio stereo system: Chorus, Concert (Roadster)	156-159
1. Radio stereo system: Chorus, Concert (Roadster)	156
2. Radio stereo system: Chorus, Concert	157
3. Radio stereo system: Chorus, Concert	158
4. Radio stereo system: Chorus, Concert	159
024 - Basic equipment, From model year 2000	160-187
1. Basic equipment, From model year 2000	160
2. Basic equipment, From model year 2000	161
3. Earth connections	162
4. X contact relief relay, ignition/starter switch	163
5. Main fuse box/battery, horn	164
6. Dash panel insert, immobilizer	165
7. Dash panel insert, oil pressure switch, coolant shortage indicator switch, fuel pump	166
8. Dash panel insert, speedometer sender	167
9. Dash panel insert, handbrake warning switch, brake fluid level warning contact, ambient temperature sensor	168
10. Dash panel insert, diagnosis connection	169
11. Dash panel insert, coolant temperature gauge	170
12. Dash panel insert, turn signal warning lamps, basic wiring for radio	171
13. Turn signal switch, headlight dipper/flasher switch, parking light switch, front turn signals, side turn signals	172
14. Lighting switch, front and rear fog light switch	173
15. Hazard warning light switch	174
16. Fog light relay, left headlight, fuses	175
17. Right headlight, fuses	176
18. Headlight range control adjuster, headlight range control motors	177
19. Automatic intermittent wash/wipe relay, wiper switch, windscreen washer pump	178
20. Automatic intermittent wash/wipe relay, windscreen wiper motor, glove box light, number plate light, fuses	179
21. Tail lights, brake lights, reversing light, rear fog light	180
22. Heated washer jets, fuses	181
23. Heated rear window, fuses	182
24. Cigarette lighter, fuses	183
25. Diagnosis connection, fuses	184
26. Fuses, radiator fan, continued coolant circulation pump	185
27. Fresh air blower	186
28. Interior light, reading lamps, illuminated vanity mirrors	187
025 - 1.8 litre fuel injection engine, 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AJQ from model year 2000	188-199
1. 1.8 litre fuel injection engine, 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AJQ from model year 2000	188
2. Battery, starter, alternator, main fuse box/battery	189
3. Motronic control unit, fuel pump relay, injectors, brake light switch, clutch pedal switch	190
4. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator pedal position senders	191
5. Motronic control unit, secondary air pump, lambda probe, air mass meter, activated charcoal filter system solenoid valve	192
6. Motronic control unit, four-wheel drive control unit, charge pressure control solenoid valve, turbocharger divert air valve	193
7. Motronic control unit, engine speed sender, intake manifold pressure sender, Hall sender, knock sensor 1	194
8. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature sender, throttle valve control unit	195
9. Motronic control unit, ignition coils	196
10. Motronic control unit, Motronic current supply relay, oil level/oil temperature sender	197
11. Fuses, speedometer sender, fuel gauge sender, fuel pump	198
12. Dash panel insert, handbrake warning switch, oil pressure switch, ambient temperature sensor	199
026 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS), and electronic stability program (ESP)	200-206
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS). and electronic stability program (ESP)	200-201

2. Control unit for anti-lock brake system with electronic differential lock, lateral acceleration sender, yaw rate sender	202
3. Control unit for anti-lock brake system with electronic differential lock, speed sensors, valves for anti-lock brake system	203
4. Control unit for anti-lock brake system with electronic differential lock, steering angle sender, brake pressure senders	204
5. Control unit for anti-lock brake system with electronic differential lock, brake light suppression relay, brake light switch, longitudinal acceleration sender	205
6. Control unit for anti-lock brake system with electronic differential lock, TCS/ESP button	206
027 - Navigation system	207-211
1. Navigation system	207
2. Navigation system with CD drive control unit, navigation aerial, fuses	208
3. Navigation system with CD drive control unit, mobile phone operating electronics control unit, front loudspeakers, centre	209
4. Combi-processor in dash panel insert, function selection switch II in centre console	210
5. Radio, amplifcator	211
028 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	212-219
1. Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	212-213
2. Central locking control unit, fuses	214
3. Central locking control unit, lock cylinder switch driver's door	215
4. Central locking control unit, lock cylinder switch front passenger's door	216
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap, luggage compartment lights	217
6. Central locking control unit, interior locking switch, left door warning lamp, right door warning lamp	218
7. Central locking control unit, reading lights, illuminated make-up mirrors	219
029 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	220-229
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	220-221
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	222
3. Central locking control unit, lock cylinder switch driver's door	223
4. Central locking control unit, lock cylinder switch front passenger's door	224
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	225
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	226
7. Central locking control unit, left door warning lamp, right door warning lamp	227
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	228
9. Central locking control unit	229
030 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), From model year 2000	230-241
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), From model year 2000	230
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	231
3. Central locking control unit, lock cylinder switch driver's door	232
4. Central locking control unit, lock cylinder switch front passenger's door	233
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	234
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	235
7. Central locking control unit, left door warning lamp, right door warning lamp	236
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	237
9. Central locking control unit	238
10. Convertible top, heated rear window	239
11. Convertible top	240
12. Windbreak	241
031 - Radio Bose system Concert with and without CD changer (Coupé)	242-247
1. Radio Bose system Concert with and without CD changer (Coupé)	242
2. Radio Bose system Concert with and without CD changer	243
3. Radio Bose sound system Concert with and without CD changer	244
4. Radio Bose sound system Concert with and without CD changer	245
5. Radio Bose system Concert with and without CD changer	246
6. Radio Bose system Concert with and without CD changer	247
032 - Radio stereo system: Chorus, Concert with and without CD changer (Roadster)	248-251
1. Radio stereo system: Chorus. Concert with and without CD changer (Roadster)	248

2. Radio stereo system: Chorus, Concert	249
3. Radio stereo system: Chorus, Concert	250
4. Radio stereo system: Chorus, Concert	251
033 - Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	252-255
1. Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	252
2. Radio stereo system: Chorus, Concert	253
3. Radio stereo system: Chorus, Concert	254
4. Radio stereo system: Chorus, Concert	255
034 - Radio Bose system Concert with and without CD changer (Roadster)	256-261
1. Radio Bose system Concert with and without CD changer (Roadster)	256
2. Radio Bose system Concert with and without CD changer	257
3. Radio Bose system Concert with and without CD changer	258
4. Radio Bose system Concert with and without CD changer	259
5. Radio Bose system Concert with and without CD changer	260
6. Radio Bose system Concert with and without CD changer	261
035 - Driver information system	262-267
1. Driver information system	262-263
2. Bulb monitoring device, dipped beam bulb	264
3. Bulb monitoring device, tail lights, brake lights	265
4. On-board computer with auto-check system, function selection switch, reset button	266
5. Dash panel insert, windscreen washer fluid warning contact, ambient temperature sensor	267
036 - Airbags	268-271
1. Airbags	268
2. Airbag control unit	269
3. Airbag, side airbags and belt tensioners for driver and front passenger	270
4. Crash sensors, airbag disabling key switch, front passenger's side	271
037 - Electric window lifters (with roll back)	272-276
1. Electric window lifters (with roll back)	272-273
2. Electric window lifters, front left, fuse for window lifters	274
3. Electric window lifters, front right	275
4. Electric window lifters, front	276
038 - Electrically adjustable and heated exterior mirrors	277-279
1. Electrically adjustable and heated exterior mirrors	277
2. Electrically adjustable and heated exterior mirrors, driver's side	278
3. Electrically adjustable and heated exterior mirrors, front passenger's side	279
039 - Heated seats	280-282
1. Heated seats	280
2. Heated seat, driver's seat	281
3. Heated seat, front passenger's seat	282
040 - Mobile phone	283-285
1. Mobile phone	283
2. Mobile phone	284
3. Mobile phone	285
041 - Haldex coupling (02D) for quattro four-wheel drive	286-289
1. Haldex coupling (02D) for quattro four-wheel drive	286-287
2. Haldex coupling (02D) for quattro four-wheel drive	288
3. Haldex coupling (02D) for quattro four-wheel drive	289
042 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	290-293
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	290
2. ABS with EDL control unit, fuses, speed sensors	291
3. ABS with EDL control unit, traction control system switch	292
4. ABS with EDL control unit, brake light switch, hydraulic pump for quattro four-wheel drive	293
043 - Daytime driving lights with front and rear fog lights (Norway/Sweden), From model year 2000	294-298
1. Daytime driving lights with front and rear fog lights (Norway/Sweden), From model year 2000	294
2. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	295
3. Ignition/starter switch, X contact relief relay	296
4. Headlight, left	297
5. Headlights, right	298
044 - Headlight washer system	299-301
1. Headlight washer system	299-300
2. Headlight washer system	301
045 - Air conditioner with automatic control	302-311
1. Air conditioner with automatic control	302-303
2. Control and display unit for air conditioner. coolant temperature warning switch. air conditioner	304

pressure switch, high pressure sender	
3. Control and display unit for air conditioner, combi-processor in dash panel insert	305
4. Control and display unit for air conditioner, control motors for temperature flap, central flap and air flow flap	306
5. Control and display unit for air conditioner, footwell/defroster flap control motor, ambient temperature sensor and fresh air intake duct temperature sensor, sunlight penetration photosensor	307
6. Control and display unit for air conditioner, fresh air blower control unit, fresh air blower	308
7. Radiator fan control unit, fuses	309
8. Radiator fan control unit and thermo-switches, radiator fan	310
9. Radiator fan control unit, air conditioning system magnetic coupling, continued circulation of coolant pump	311
046 - Headlights with gas discharge lamps and automatic headlight range control, From model year 2000	312-319
1. Headlights with gas discharge lamps and automatic headlight range control, From model year 2000	312
2. Ignition/starter switch, X contact relief relay	313
3. Lighting switch	314
4. Steering column switch	315
5. Fuses, left gas discharge lamp, left gas discharge lamp control unit	316
6. Fuses, right gas discharge lamp, right gas discharge lamp control unit	317
7. Control unit for headlight range control, vehicle level senders	318
8. Headlight range control motors, fog light relay	319
047 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS), and electronic stability program (ESP) (conversion)	320-327
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS), and electronic stability program (ESP) (conversion)	320-321
2. Control unit for anti-lock brake system with electronic differential lock, lateral acceleration sender, yaw rate sender	322
3. Control unit for anti-lock brake system with electronic differential lock, speed sensor, valves for anti-lock brake system	323
4. Control unit for anti-lock brake system with electronic differential lock, steering angle sender, brake pressure sender	324
5. Control unit for anti-lock brake system with electronic differential lock, brake light suppression relay, brake light switch, longitudinal acceleration sender	325
6. Control unit for anti-lock brake system with electronic differential lock, TCS/ESP button	326
7. Charge pressure control solenoid valve	327
048 - 1.8 litre fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM, From model year 2001	328-340
1. 1.8 litre fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM, From model year 2001	328
2. 1.8 litre fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM, From model year 2001	329
3. Battery, starter, alternator, main fuse box/battery	330
4. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	331
5. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator pedal position senders	332
6. Motronic control unit, secondary air pump, lambda probe, air mass meter, activated charcoal filter system solenoid valve	333
7. Motronic control unit, four-wheel drive control unit, charge pressure control solenoid valve, turbocharger divert air valve	334
8. Motronic control unit, engine speed sender, intake manifold pressure sender, Hall sender, knock sensor 1	335
9. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature senders, throttle valve control unit	336
10. Motronic control unit, ignition coils	337
11. Motronic control unit, Motronic current supply relay, oil level thermo sender, injectors	338
12. Fuses, speedometer sender, fuel gauge sender, fuel pump	339
13. Dash panel insert, handbrake warning switch, oil pressure switch, ambient temperature sensor	340
049 - CAN data bus wires	341-343
1. CAN data bus wires	341
2. CAN data bus wires, connection high-bus	342
3. CAN data bus wires, connection low-bus	343
050 - Basic equipment, From model year 2002	344-371
1. Basic equipment, From model year 2002	344
2. Basic equipment, From model year 2002	345
3. Earth connections	346
4. X contact relief relav. ignition/starter switch	347

5. Main fuse box/battery, horn	348
6. Dash panel insert, immobilizer	349
7. Dash panel insert, oil pressure switch, fuel pump, fuel gauge senders	350
8. Dash panel insert, speedometer sender, coolant shortage indicator switch	351
9. Dash panel insert, handbrake warning switch, brake fluid level warning contact, ambient temperature sensor	352
10. Dash panel insert, diagnosis connection	353
11. Dash panel insert, coolant temperature gauge	354
12. Dash panel insert, turn signal warning lamps, basic wiring for radio	355
13. Turn signal switch, headlight dipper/flasher switch, parking light switch, front turn signals, side turn signals	356
14. Lighting switch, front and rear fog light switch	357
15. Hazard warning light switch	358
16. Fog light relay, left headlight, fuses	359
17. Right headlight, fuses	360
18. Headlight range control adjuster, headlight range control motors	361
19. Automatic intermittent wash/wipe relay, wiper switch, windscreen washer pump	362
20. Automatic intermittent wash/wipe relay, windscreen wiper motor, glove box light, number plate light, fuses	363
21. Tail lights, brake lights, reversing light, rear fog light	364
22. Heated washer jets, fuses	365
23. Heated rear window, fuses	366
24. Cigarette lighter, fuses	367
25. Diagnosis connection, fuses	368
26. Fuses, radiator fan, continued coolant circulation pump	369
27. Fresh air blower	370
28. Interior light, reading lamps, illuminated vanity mirrors	371
051 - 1.8 litre fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM / AUQ, ARY / BAM	372-385
1. 1.8 litre fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM / AUQ, ARY / BAM	372-374
2. Battery, starter, alternator, main fuse box/battery	375
3. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	376
4. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator pedal position senders	377
5. Motronic control unit, secondary air pump, lambda probe, air mass meter, activated charcoal filter system solenoid valve	378
6. Motronic control unit, four-wheel drive control unit, charge pressure control solenoid valve, turbocharger divert air valve	379
7. Motronic control unit, engine speed sender, charge air pressure sender, Hall sender, knock sensor 1	380
8. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature senders, throttle valve module	381
9. Motronic control unit, ignition coils	382
10. Motronic control unit, Motronic current supply relay, oil level thermo sender, injectors	383
11. Fuses, speedometer sender, fuel gauge sender, fuel pump	384
12. Dash panel insert, handbrake warning switch, oil pressure switch, ambient temperature sensor	385
052 - Anti-lock brake system MK20 (ABS) with electronic stability program (ESP)	386-392
1. Anti-lock brake system MK20 (ABS) with electronic stability program (ESP)	386-387
2. Control unit for anti-lock brake system with electronic differential lock, lateral acceleration sender, yaw rate sender	388
3. Control unit for anti-lock brake system with electronic differential lock, speed sensors, valves for anti-lock brake system, ABS hydraulic pump	389
4. Control unit for anti-lock brake system with electronic differential lock, steering angle sender, brake pressure senders	390
5. Control unit for anti-lock brake system with electronic differential lock, brake light suppression relay, brake light switch, longitudinal acceleration sender	391
6. Control unit for anti-lock brake system with electronic differential lock, TCS/ESP button	392
053 - Navigation system	393-396
1. Navigation system	393
2. Navigation system with CD drive control unit, navigation aerial, fuses	394
3. Navigation system with CD drive control unit, telephone operating electronics control unit, front centre loudspeaker, radio	395
4. Control unit with display in dash panel insert, function selection switch II in centre console	396
054 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	397-404

1. Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	397-398
2. Central locking control unit, fuses	399
3. Central locking control unit, lock cylinder switch - driver's door	400
4. Central locking control unit, lock cylinder switch - front passenger's door	401
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap, luggage compartment lights	402
6. Central locking control unit, interior locking switch, left door warning lamp, right door warning lamp	403
7. Central locking control unit, reading lamps, illuminated vanity mirrors	404
055 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	405-414
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	405-406
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	407
3. Central locking control unit, lock cylinder switch - driver's door	408
4. Central locking control unit, lock cylinder switch - front passenger's door	409
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	410
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	411
7. Central locking control unit, left door warning lamp, right door warning lamp	412
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	413
9. Central locking control unit	414
056 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), From model year 2002	415-426
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster), From model year 2002	415
2. Central locking control unit, fuses, interior monitor sender/receiver module 1	416
3. Central locking control unit, lock cylinder switch - driver's door	417
4. Central locking control unit, lock cylinder switch - front passenger's door	418
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	419
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	420
7. Central locking control unit, left door warning lamp, right door warning lamp	421
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	422
9. Central locking control unit	423
10. Convertible top, heated rear window	424
11. Convertible top	425
12. Windbreak	426
057 - Provision for radio	427-429
1. Provision for radio	427
2. Provision for radio	428
3. Provision for radio	429
058 - Radio Bose sound system Concert with and without CD changer (Coupé models)	430-435
1. Radio Bose sound system Concert with and without CD changer (Coupé models)	430
2. Radio Bose sound system Concert with and without CD changer	431
3. Radio Bose sound system Concert with and without CD changer	432
4. Radio Bose sound system Concert with and without CD changer	433
5. Radio Bose sound system Concert with and without CD changer	434
6. Radio Bose sound system Concert with and without CD changer	435
059 - Radio stereo system: Chorus, Concert with and without CD changer (Roadster)	436-439
1. Radio stereo system: Chorus, Concert with and without CD changer (Roadster)	436
2. Radio stereo system: Chorus, Concert	437
3. Radio stereo system: Chorus, Concert	438
4. Radio stereo system: Chorus, Concert	439
060 - Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	440-443
1. Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	440
2. Radio stereo system: Chorus, Concert	441
3. Radio stereo system: Chorus, Concert	442
4. Radio stereo system: Chorus, Concert	443
061 - Radio Bose sound system Concert with and without CD changer (Roadster)	444-449
1. Radio Bose sound system Concert with and without CD changer (Roadster)	444
2. Radio Bose sound system Concert with and without CD changer	445
3. Radio Bose sound system Concert with and without CD changer	446
4. Radio Bose sound system Concert with and without CD changer	447
5. Radio Bose sound system Concert with and without CD changer	448

6. Radio Bose sound system Concert with and without CD changer	449
062 - Driver information system	450-455
1. Driver information system	450-451
2. Bulb monitoring device, dipped beam headlights	452
3. Bulb monitoring device, tail lights, brake lights	453
4. On-board computer with auto-check system, function selection switch, reset button	454
5. Dash panel insert, windscreen washer fluid warning contact, ambient temperature sensor	455
063 - Mobile phone	456-458
1. Mobile phone	456
2. Mobile phone	457
3. Mobile phone	458
064 - Haldex coupling (02D) for quattro four-wheel drive	459-461
1. Haldex coupling (02D) for quattro four-wheel drive	459
2. Haldex coupling (02D) for quattro four-wheel drive	460
3. Haldex coupling (02D) for quattro four-wheel drive	461
065 - Daytime driving lights with front and rear fog lights (Norway/Sweden), from model year 2002	462-466
1. Daytime driving lights with front and rear fog lights (Norway/Sweden), from model year 2002	462
2. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	463
3. Ignition/starter switch, X contact relief relay	464
4. Headlight, left	465
5. Headlight, right	466
066 - Air conditioner with automatic control	467-476
1. Air conditioner with automatic control	467-468
2. Control and display unit for air conditioner, high pressure sender	469
3. Control and display unit for air conditioner, control unit with display in dash panel insert	470
4. Control and display unit for air conditioner, control motors for temperature flap, central flap and air flow flap	471
5. Control and display unit for air conditioner, footwell/defroster flap control motor, ambient temperature sensor and fresh air intake duct temperature sensor, sunlight penetration photo sensor	472
6. Control and display unit for air conditioner, fresh air blower control unit, fresh air blower	473
7. Radiator fan control unit, fuses	474
8. Radiator fan control unit and thermo-switches, radiator fan	475
9. Radiator fan control unit, air conditioning system magnetic coupling, continued coolant circulation pump	476
067 - Headlights with gas discharge lamps and automatic headlight range control, from model year 2002	477-484
1. Headlights with gas discharge lamps and automatic headlight range control, from model year 2002	477
2. Ignition/starter switch, X contact relief relay	478
3. Lighting switch	479
4. Steering column switch	480
5. Fuses, left gas discharge lamp, left gas discharge lamp control unit	481
6. Fuses, right gas discharge lamp, right gas discharge lamp control unit	482
7. Control unit for headlight range control, vehicle level senders	483
8. Headlight range control motors, fog light relay	484
068 - CAN bus wires	485-487
1. CAN bus wires	485
2. CAN bus wires, high bus connection, low bus connection	486
3. CAN bus wires (convenience features, display)	487
069 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Roadster), From model year 2000	488-499
1. Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Roadster), From model year 2000	488
2. Central locking control unit, fuses	489
3. Central locking control unit, lock cylinder switch - driver's door	490
4. Central locking control unit, lock cylinder switch - front passenger's door	491
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	492
6. Central locking control unit, interior locking switch, luggage compartment lights	493
7. Central locking control unit, left door warning lamp, right door warning lamp	494
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	495
9. Central locking control unit	496
10. Convertible top, heated rear window	497
11. Convertible top	498
12. Windbreak	499
070 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Roadster), From model year 2002	500-511
1. Central locking with radio-operated remote control and interior lights switch-off delay - without	500

anti-theft alarm system (Roadster), From model year 2002	
2. Central locking control unit, fuses	501
3. Central locking control unit, lock cylinder switch - driver's door	502
4. Central locking control unit, lock cylinder switch - front passenger's door	503
5. Central locking control unit, remote release switches for tailgate/boot lid and tank filler flap	504
6. Central locking control unit, interior locking switch, luggage compartment lights	505
7. Central locking control unit, left door warning lamp, right door warning lamp	506
8. Central locking control unit, interior light, reading lamps, illuminated vanity mirrors	507
9. Central locking control unit	508
10. Convertible top, heated rear window	509
11. Convertible top	510
12. Windbreak	511
071 - Garage door opener	512-513
1. Garage door opener	512
2. Garage door opener	513
072 - Anti-lock brake system MK60 (ABS) with electronic stability program (ESP)	514-519
1. Anti-lock brake system MK60 (ABS) with electronic stability program (ESP)	514
2. Control unit for anti-lock brake system with electronic differential lock, lateral acceleration sender, yaw rate sender	515
3. Control unit for anti-lock brake system with electronic differential lock, speed sensors, valves for anti-lock brake system, ABS hydraulic pump	516
4. Control unit for anti-lock brake system with electronic differential lock, steering angle sender, brake pressure senders	517
5. Control unit for anti-lock brake system with electronic differential lock, brake light switch	518
6. Control unit for anti-lock brake system with electronic differential lock, TCS/ESP button	519
073 - Airbags	520-523
1. Airbags	520
2. Airbag control unit	521
3. Airbags, side airbags and belt tensioners for driver and front passenger	522
4. Crash sensors, airbag disabling key switch on front passenger's side	523
074 - Basic equipment	524-553
1. Basic equipment	524-527
2. Earth connections	528
3. X contact relief relay, ignition/starter switch, starter inhibitor relay	529
4. Main fuse box/battery, horn	530
5. Dash panel insert, immobilizer, brake pad/lining wear indicator, left	531
6. Dash panel insert, oil pressure switch, fuel pump, fuel gauge senders	532
7. Dash panel insert, speedometer sender, coolant shortage indicator switch	533
8. Dash panel insert, handbrake warning switch, brake fluid level warning contact, ambient temperature sensor	534
9. Dash panel insert, diagnosis connection	535
10. Dash panel insert, coolant temperature gauge	536
11. Dash panel insert, turn signal warning lamps, basic wiring for radio	537
12. Turn signal switch, headlight dipper/flasher switch, parking light switch, front turn signals, side turn signals	538
13. Light switch, front and rear fog light switch	539
14. Hazard warning light switch	540
15. Fog light relay, left headlight, fuses, bulb monitoring device	541
16. Right headlight, fuses, bulb monitoring device	542
17. Headlight range control regulator, headlight range control motors	543
18. Automatic intermittent wash/wipe relay, wiper switch, washer pump	544
19. Automatic intermittent wash/wipe relay, windscreen wiper motor, glove box light, number plate light, fuses	545
20. Tail lights, brake lights, reversing light, rear fog light	546
21. Heated washer jets, fuses	547
22. Heated rear window, fuses	548
23. Cigarette lighter, fuses	549
24. Diagnosis connection, fuses	550
25. Fuses, radiator fan, continued coolant circulation pump	551
26. Fresh air blower	552
27. Interior light, reading lights, illuminated vanity mirrors	553
075 - 1.8 l - Fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM / AUQ, ARY / BAM	554-569
1. 1.8 l - Fuel injection engine, 110 kW / 132 kW / 165 kW, Motronic, 4-cylinder, engine codes AUM / AUQ, ARY / BAM	554-557
2. Batterv. starter. alternator. main fuse box/batterv. starter motor relav	558

3. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	559
4. Motronic control unit, power assisted steering pressure switch, cruise control system, accelerator position sender	560
5. Motronic control unit, secondary air pump, lambda probe, air mass meter, active charcoal filter system solenoid valve	561
6. Motronic control unit, four-wheel drive control unit, charge pressure control solenoid valve, turbocharger air recirculation valve	562
7. Motronic control unit, engine speed sender, charge air pressure sender, Hall sender, knock sensor 1	563
8. Motronic control unit, knock sensor 2, intake air temperature sender, coolant temperature sender, throttle valve module	564
9. Motronic control unit, ignition coils	565
10. Motronic control unit, Motronic current supply relay, oil level thermo sender, injectors	566
11. Fuses, speedometer sender, fuel gauge sender, fuel pump	567
12. Dash panel insert, handbrake warning switch, oil pressure switch, immobilizer	568
13. Control unit with display in dash panel insert, ambient temperature sensor, ambient temperature indicator	569
076 - Automatic gearbox (09G)	570-579
1. Automatic gearbox (09G)	570-572
2. Automatic gearbox control unit, fuse box	573
3. Automatic gearbox control unit, multi-function switch, vacuum pump for brakes	574
4. Automatic gearbox control unit, solenoid valves	575
5. Automatic gearbox control unit, oil temperature sender, gearbox speed sender, vehicle speed sender, hydraulic pressure sender -1-	576
6. Automatic gearbox control unit	577
7. Automatic gearbox control unit, starter inhibitor relay, selector lever lock solenoid, Tiptronic switch	578
8. Operating unit in steering wheel, Tiptronic switch in steering wheel	579
077 - CAN bus wires	580-582
1. CAN bus wires	580
2. CAN bus wires, high bus connection, low bus connection	581
3. CAN bus wires (convenience features, display)	582
078 - Steering wheel with Tiptronic	583-587
1. Steering wheel with Tiptronic	583-584
2. Dual tone horn relay, high tone horn, low tone horn, operating unit in steering wheel	585
3. Operating unit in steering wheel, Tiptronic switch in steering wheel for automatic gearbox 09G	586
4. Tiptronic switch (shift up and shift down) in steering wheel for direct shift gearbox 02E	587
079 - Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	588-591
1. Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	588
2. Radio stereo system: Chorus, Concert	589
3. Radio stereo system: Chorus, Concert	590
4. Radio stereo system: Chorus, Concert	591
080 - Radio Bose sound system Concert with and without CD changer (Coupé models)	592-597
1. Radio Bose sound system Concert with and without CD changer (Coupé models)	592
2. Radio Bose sound system Concert with and without CD changer	593
3. Radio Bose sound system Concert with and without CD changer	594
4. Radio Bose sound system Concert with and without CD changer	595
5. Radio Bose sound system Concert with and without CD changer	596
6. Radio Bose sound system Concert with and without CD changer	597
081 - Radio Bose sound system Concert with and without CD changer (Roadster)	598-603
1. Radio Bose sound system Concert with and without CD changer (Roadster)	598
2. Radio Bose sound system Concert with and without CD changer	599
3. Radio Bose sound system Concert with and without CD changer	600
4. Radio Bose sound system Concert with and without CD changer	601
5. Radio Bose sound system Concert with and without CD changer	602
6. Radio Bose sound system Concert with and without CD changer	603
082 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	604-609
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	604-605
2. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	606
3. Ignition/starter switch, X contact relief relay	607
4. Headlight, left	608
5. Headlight, right	609
083 - 3.2 litre fuel injection engine (184 kW - Motronic - 6-cylinder), engine codes BHE, BPF	610-628
1. 3.2 litre fuel injection engine (184 kW - Motronic - 6-cylinder), engine codes BHE, BPF	610-612
2. Battery, starter, alternator, main fuse box/battery, starter inhibitor relay	613
3. Motronic control unit. fuel pump relav. accelerator pedal position senders	614

4. Motronic control unit, cruise control system switch, brake light switch	615
5. Motronic control unit, air mass meter, lambda probes	616
6. Motronic control unit, lambda probes	617
7. Motronic control unit, Motronic current supply relay, injectors for cylinders 1 - 6	618
8. Motronic control unit, brake servo relay, vacuum pump for brakes, four-wheel drive control unit, hydraulic pump relay fuse	619
9. Motronic control unit, ignition coils 1 - 4 with output stage, variable intake manifold change-over valve	620
10. Motronic control unit, ignition coils 5 and 6 with final output stage, camshaft timing adjustment valve	621
11. Motronic control unit, engine speed sender, Hall senders, knock sensor 1	622
12. Motronic control unit, throttle valve module, knock sensor 2, coolant temperature senders, oil level thermo sender (service interval)	623
13. Motronic control unit, secondary air pump relay, secondary air pump motor, activated charcoal filter system solenoid valve 1 (pulsed), secondary air inlet valve, heater element (crankcase breather)	624
14. Motronic control unit, exhaust flap valve, radiator fan control unit (in engine compartment, front left), continued coolant circulation pump, high pressure sender, power steering sensor	625
15. Fuses, fuel gauge sender, fuel pump (pre-supply pump)	626
16. Dash panel insert, handbrake warning switch, oil pressure switch, immobilizer reading coil	627
17. Control unit with display in dash panel insert, ambient temperature sensor, ambient temperature indicator	628
084 - Direct shift gearbox (02E)	629-637
1. Direct shift gearbox (02E)	629-631
2. Direct shift gearbox mechatronics, automatic gearbox control unit fuse, fuse box	632
3. Direct shift gearbox mechatronics, reversing light relay, vacuum pump for brakes, brake servo relay	633
4. Direct shift gearbox mechatronics, selector lever, Tiptronic switch, selector lever display illumination, selector lever lock solenoid	634
5. Direct shift gearbox mechatronics, CAN bus wires	635
6. Direct shift gearbox mechatronics, starter inhibitor relay	636
7. Tiptronic switch (shift up and shift down) in steering wheel	637
085 - Mobile phone	638-640
1. Mobile phone	638
2. Mobile phone	639
3. Mobile phone	640
086 - Anti-lock brake system MK60 (ABS) with electronic stabilisation program (ESP)	641-646
1. Anti-lock brake system MK60 (ABS) with electronic stabilisation program (ESP)	641
2. Control unit for anti-lock brake system with electronic differential lock, lateral acceleration sender, yaw rate sender	642
3. Control unit for anti-lock brake system with electronic differential lock, speed sensors, valves for anti-lock brake system, ABS hydraulic pump	643
4. Control unit for anti-lock brake system with electronic differential lock, steering angle sender, brake pressure senders	644
5. Control unit for anti-lock brake system with electronic differential lock, brake light switch	645
6. Control unit for anti-lock brake system with electronic differential lock, TCS/ESP button	646
087 - Haldex coupling (02D) for quattro four-wheel drive	647-649
1. Haldex coupling (02D) for quattro four-wheel drive	647
2. Haldex coupling (02D) for quattro four-wheel drive	648
3. Haldex coupling (02D) for quattro four-wheel drive	649
088 - Air conditioner with automatic control	650-659
1. Air conditioner with automatic control	650-651
2. Control and display unit for air conditioning system, high pressure sender	652
3. Control and display unit for air conditioning system, control unit with display in dash panel insert	653
4. Control and display unit for air conditioning system, control motors for temperature flap, central flap and air flow flap	654
5. Control and display unit for air conditioning system, footwell/defroster flap control motor, ambient temperature sensor and fresh air intake duct temperature sensor, sunlight penetration photosensor	655
6. Control and display unit for air conditioning system, fresh air blower control unit, fresh air blower	656
7. Radiator fan control unit, fuses	657
8. Radiator fan control unit and thermo-switches, radiator fan	658
9. Radiator fan control unit, air conditioning system magnetic coupling, continued coolant circulation pump	659

089 - Navigation system	660-663
1. Navigation system	660
2. Navigation system with CD drive control unit, navigation aerial, fuses	661
3. Navigation system with CD drive control unit, mobile phone operating electronics control unit, radio	662
4. Control unit with display in dash panel insert, function selection switch II in centre console	663
090 - Radio stereo system: Chorus, Concert with and without CD changer (Roadster)	664-667
1. Radio stereo system: Chorus, Concert with and without CD changer (Roadster)	664
2. Radio stereo system: Chorus, Concert	665
3. Radio stereo system: Chorus, Concert	666
4. Radio stereo system: Chorus, Concert	667
091 - Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	668-671
1. Radio stereo system: Chorus, Concert with and without CD changer (Coupé models)	668
2. Radio stereo system: Chorus, Concert	669
3. Radio stereo system: Chorus, Concert	670
4. Radio stereo system: Chorus, Concert	671
092 - Radio Bose sound system Concert with and without CD changer (Roadster)	672-677
1. Radio Bose sound system Concert with and without CD changer (Roadster)	672
2. Radio Bose sound system Concert with and without CD changer	673
3. Radio Bose sound system Concert with and without CD changer	674
4. Radio Bose sound system Concert with and without CD changer	675
5. Radio Bose sound system Concert with and without CD changer	676
6. Radio Bose sound system Concert with and without CD changer	677
093 - Radio Bose sound system Concert with and without CD changer (Coupé models)	678-683
1. Radio Bose sound system Concert with and without CD changer (Coupé models)	678
2. Radio Bose sound system Concert with and without CD changer	679
3. Radio Bose sound system Concert with and without CD changer	680
4. Radio Bose sound system Concert with and without CD changer	681
5. Radio Bose sound system Concert with and without CD changer	682
6. Radio Bose sound system Concert with and without CD changer	683
094 - Provision for radio	684-686
1. Provision for radio	684
2. Provision for radio	685
3. Provision for radio	686
095 - Headlights with gas discharge lamps and automatic headlight range control	687-695
1. Headlights with gas discharge lamps and automatic headlight range control	687-688
2. Ignition/starter switch, X contact relief relay	689
3. Lighting switch	690
4. Steering column switch	691
5. Fuses, left gas discharge lamp, left gas discharge lamp control unit	692
6. Fuses, right gas discharge lamp, right gas discharge lamp control unit	693
7. Control unit for headlight range control, vehicle level senders	694
8. Headlight range control motors, fog light relay	695
096 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	696-704
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Coupé models)	696
2. Central locking control unit, fuses, anti-theft alarm ultra-sonic sensor	697
3. Central locking control unit, lock cylinder switch - driver s door	698
4. Central locking control unit, lock cylinder switch - front passenger s door	699
5. Central locking control unit, remote release switches for rear lid and tank filler flap	700
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	701
7. Central locking control unit, left door warning lamp, right door warning lamp	702
8. Central locking control unit, interior light, reading lights, illuminated vanity mirrors	703
9. Central locking control unit	704
097 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	705-711
1. Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Coupé models)	705
2. Central locking control unit, fuses	706
3. Central locking control unit, lock cylinder switch - driver s door	707
4. Central locking control unit, lock cylinder switch - front passenger s door	708
5. Central locking control unit, remote release switches for rear lid and tank filler flap, luggage compartment lights	709
6. Central locking control unit. interior locking switch. left door warning lamp. right door warning	710

lamp	
7. Central locking control unit, reading lights, illuminated vanity mirrors	711
098 - Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster)	712-725
1. Central locking with radio-operated remote control and interior lights switch-off delay and anti-theft alarm system with interior monitoring (Roadster)	712-714
2. Central locking control unit, fuses, interior monitor sender/receiver module 1	715
3. Central locking control unit, lock cylinder switch - driver s door	716
4. Central locking control unit, lock cylinder switch - front passenger s door	717
5. Central locking control unit, remote release switches for rear lid and tank filler flap	718
6. Central locking control unit, interior locking switch, interior monitor switch, luggage compartment lights	719
7. Central locking control unit, left door warning lamp, right door warning lamp	720
8. Central locking control unit, interior light, reading lights, illuminated vanity mirrors	721
9. Central locking control unit	722
10. Convertible top, heated rear window	723
11. Convertible top	724
12. Windbreak	725
099 - Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Roadster)	726-739
1. Central locking with radio-operated remote control and interior lights switch-off delay - without anti-theft alarm system (Roadster)	726-728
2. Central locking control unit, fuses	729
3. Central locking control unit, lock cylinder switch - driver s door	730
4. Central locking control unit, lock cylinder switch - front passenger s door	731
5. Central locking control unit, remote release switches for rear lid and tank filler flap	732
6. Central locking control unit, interior locking switch, luggage compartment lights	733
7. Central locking control unit, left door warning lamp, right door warning lamp	734
8. Central locking control unit, interior light, reading lights, illuminated vanity mirrors	735
9. Central locking control unit	736
10. Convertible top, heated rear window	737
11. Convertible top	738
12. Windbreak	739
100 - CD changer for Coupé models and Roadster	740-741
1. CD changer for Coupé models and Roadster	740
2. Radio, CD changer	741
201 - -Fitting Locations: Position of relays and fuses - 3	742-751
1. Position of relays and fuses	742-751
1.1 Position of fuses in fuse box, dash panel, left	742-747
1.2 13-point relay carrier above micro-central electrics	748
1.3 Micro-central electrics below shelf, left	749
1.4 Main fuse box/battery	750
1.5 Protective housing for relays in engine compartment	751
202 - -Fitting Locations: Earth points - 3	752-760
1. Earth points	752-760
1.1 List of all earth points in engine compartment	752-755
1.2 List of all earth points in vehicle interior	756-760
203 - -Fitting Locations: Fitting locations of individual control units - 3	761-777
1. Fitting locations of individual control units	761-777
1.1 Fitting locations of individual control units	761-777
204 - -Fitting Locations: Fitting locations of individual components for radio sound system and telephone - Coupé models - 3	778-790
1. Fitting locations of individual components for radio sound system and telephone - Coupé models	778-790
1.1 Fitting locations of individual components for radio sound system and telephone - Coupé models	778-790
205 - -Fitting Locations: Fitting locations of individual components for radio sound system and telephone - Roadster - 3	791-800
1. Fitting locations of individual components for radio sound system and telephone - Roadster	791-800
1.1 Fitting locations of individual components for radio sound system and telephone - Roadster	791-800
206 - -Fitting Locations: Fitting locations of individual components for navigation systems III and IV - 3	801-805
1. Fitting locations of individual components for navigation systems III and IV	801-805
1.1 Fitting locations of individual components for navigation systems III and IV	801-805
207 - -Fitting Locations: Connector points - 3	806-807
1. Connector points	806-807
1.1 Connector point, in protective housing, in plenum chamber, left	806
1.2 Position of components in: connector points. A pillar	807

