

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 PR number and type of brake system	1
<b>2 Safety information</b>	<b>3</b>
2.1 Safety precautions when working on vehicles with start/stop system	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Identification plates	4
3.2 Use of impact wrenches	4
3.3 Rules for cleanliness	4
3.4 General repair instructions	5
3.5 Contact corrosion	5
<b>4 Technical data</b>	<b>7</b>
4.1 Technical data for brakes	7
<b>5 Brake test</b>	<b>9</b>
5.1 General notes	9
5.2 Testing vehicles with front-wheel drive	9
5.3 Testing vehicles with all-wheel drive	9
5.4 Checking parking brake	9
5.5 Checking brake discs	10
<b>6 Electrical components</b>	<b>18</b>
6.1 Starting diagnosis	18
<b>45 - Anti-lock brake system</b>	<b>19</b>
<b>1 General notes</b>	<b>19</b>
1.1 Notes for repair work on ABS	19
<b>2 Overview of fitting locations</b>	<b>20</b>
2.1 Overview of fitting locations - ABS/ESP	20
<b>3 Control unit and hydraulic unit</b>	<b>23</b>
3.1 Assembly overview - control unit and hydraulic unit	23
3.2 Removing and installing ABS control unit J104/ABS hydraulic unit N55	28
3.3 Separating control unit from hydraulic unit	42
3.4 Attaching control unit to hydraulic unit	43
<b>4 Sensors</b>	<b>46</b>
4.1 Assembly overview - speed sensors on front axle	46
4.2 Assembly overview - speed sensors on rear axle	47
4.3 Removing and installing front wheel speed sensor G45/G47	48
4.4 Removing and installing rear wheel speed sensor G44/G46	49
4.5 Checking ABS sensor ring	50
<b>46 - Brakes - mechanism</b>	<b>52</b>
<b>1 Front brakes</b>	<b>52</b>
1.1 Assembly overview - front brakes	52
1.2 Removing and installing brake pads	62
1.3 Removing and installing brake caliper	74
1.4 Renewing brake caliper	83
1.5 Removing and installing brake carrier	98
1.6 Removing and installing brake disc	98
1.7 Removing and installing splash plate	101
<b>2 Rear brakes</b>	<b>102</b>
2.1 Assembly overview - rear brakes	102



2.2	Removing and installing brake pads	104
2.3	Removing and installing brake caliper	111
2.4	Renewing brake caliper	114
2.5	Removing and installing brake carrier	118
2.6	Removing and installing brake disc	119
2.7	Removing and installing splash plate	120
<b>3</b>	<b>Parking brake</b>	<b>122</b>
3.1	Assembly overview - parking brake	122
3.2	Removing and installing parking brake motor V282/V283	123
3.3	Releasing parking brake manually	125
<b>4</b>	<b>Brake pedal</b>	<b>127</b>
4.1	Assembly overview - brake pedal	127
4.2	Separating brake pedal from brake servo	130
4.3	Connecting brake pedal to brake servo	131
4.4	Removing and installing brake pedal	132
4.5	Removing and installing mounting bracket	133
<b>47</b>	<b>Brakes - hydraulics</b>	<b>139</b>
<b>1</b>	<b>Front brake caliper</b>	<b>139</b>
1.1	Assembly overview - front brake caliper	139
1.2	Removing and installing brake caliper piston	140
1.3	Renewing protective covers and guide pins	148
<b>2</b>	<b>Rear brake caliper</b>	<b>149</b>
2.1	Assembly overview - rear brake caliper	149
2.2	Removing and installing protective cap	149
2.3	Renewing bearing bushes and guide pins	152
<b>3</b>	<b>Brake servo/brake master cylinder</b>	<b>154</b>
3.1	Assembly overview - brake servo/brake master cylinder	154
3.2	Removing and installing brake light switch	159
3.3	Removing and installing brake servo	164
3.4	Removing and installing brake master cylinder	181
3.5	Removing and installing brake fluid reservoir	191
3.6	Removing and installing brake fluid level warning contact F34	196
<b>4</b>	<b>Vacuum system</b>	<b>197</b>
4.1	Assembly overview - vacuum pump	197
4.2	Checking non-return valve	199
4.3	Removing and installing non-return valve	200
4.4	Removing and installing vacuum sender G608	203
4.5	Checking vacuum system	204
4.6	Removing and installing vacuum pump	209
<b>5</b>	<b>Brake lines</b>	<b>213</b>
5.1	Connection points	213
<b>6</b>	<b>Hydraulic system</b>	<b>215</b>
6.1	General notes on brake fluid	215
6.2	Bleeding hydraulic system	216
6.3	Bleeding hydraulic system (additional bleeding procedure)	219
6.4	Leak test	222