

Contents

00 - Technical data	1
1 General notes	1
1.1 Running gear	1
1.2 Steering	1
1.3 Types of tyre	1
2 Safety information	2
2.1 Safety precautions when working on vehicles with start/stop system	2
2.2 Safety precautions when working on the subframe	2
2.3 Safety precautions when using testers and measuring instruments during a road test	2
3 Repair instructions	4
3.1 General repair instructions	4
3.2 Leaks at shock absorbers	5
3.3 Noises from shock absorbers	6
3.4 Checking shock absorbers when removed	6
3.5 Checking shock absorbers on shock tester	7
3.6 Maximum values "a" in mm	8
3.7 Rules for cleanliness	9
3.8 General notes	9
3.9 Contact corrosion	9
3.10 Steering rack	9
3.11 Gaskets, seals	10
3.12 Nuts, bolts	10
3.13 Electrical components	10
3.14 Repair instructions for drive shaft	11
3.15 Repairing damaged threads in longitudinal member (subframe to body)	12
3.16 Lifting suspension to unladen position - vehicles with coil springs	12
4 Technical data	15
4.1 Running gear	15
4.2 Steering	15
5 Disposal	16
5.1 Releasing gas and draining front gas-filled shock absorbers	16
5.2 Releasing gas and draining rear gas-filled shock absorbers	18
40 - Front suspension	20
1 Front axle	20
1.1 Overview of fitting locations - front axle	20
2 Subframe	21
2.1 Assembly overview - subframe	21
2.2 Fixing subframe in position	24
2.3 Lowering subframe	27
2.4 Removing and installing subframe without steering rack	33
2.5 Removing and installing subframe with steering rack	38
2.6 Servicing subframe	46
2.7 Removing and installing anti-roll bar	58
2.8 Removing and installing coupling rod	59
3 Suspension strut, upper suspension links	60
3.1 Assembly overview - suspension strut, upper suspension links	60
3.2 Removing and installing suspension strut	62
3.3 Servicing suspension strut	67
3.4 Lowering suspension strut	70
4 Lower wishbone, swivel joint	73
4.1 Assembly overview - lower wishbone, swivel joint	73



4.2	Removing and installing lower wishbone	75
4.3	Renewing bonded rubber bushes for lower wishbone	79
4.4	Removing and installing swivel joint	86
5	Wheel bearing	89
5.1	Assembly overview - wheel bearing	89
5.2	Removing and installing wheel bearing housing	90
5.3	Removing and installing wheel bearing unit	94
6	Drive shaft	99
6.1	Assembly overview - drive shaft	99
6.2	Loosening and tightening bolt securing drive shaft	103
6.3	Removing and installing heat shield for drive shaft	104
6.4	Removing and installing drive shaft	106
6.5	Dismantling and assembling drive shaft	115
6.6	Checking outer constant velocity joint	128
6.7	Checking inner constant velocity joint	130
42	Rear suspension	133
1	Rear axle	133
1.1	Overview - rear axle	133
1.2	Removing and installing rear axle	134
2	Subframe	144
2.1	Assembly overview - subframe	144
2.2	Fixing subframe in position	148
2.3	Servicing subframe	154
3	Anti-roll bar	165
3.1	Assembly overview - anti-roll bar	165
3.2	Removing and installing anti-roll bar	165
3.3	Removing and installing coupling rod	167
4	Suspension links, track rod	170
4.1	Assembly overview - wishbones	170
4.2	Assembly overview - track rod	172
4.3	Removing and installing upper transverse link	173
4.4	Removing and installing lower transverse links	175
4.5	Removing and installing track rod	178
5	Suspension strut/shock absorber, spring	180
5.1	Assembly overview - suspension strut/shock absorber, spring	180
5.2	Removing and installing shock absorber	181
5.3	Servicing shock absorber	183
5.4	Removing and installing spring	188
6	Wheel bearing, trailing arm	191
6.1	Assembly overview - wheel bearing	191
6.2	Assembly overview - trailing arm	195
6.3	Removing and installing wheel bearing housing	196
6.4	Removing and installing wheel bearing unit	205
6.5	Renewing bonded rubber bush for wheel bearing housing	211
6.6	Removing and installing trailing arm with mounting bracket	216
6.7	Servicing trailing arm	220
7	Drive shaft	224
7.1	Assembly overview - drive shaft	224
7.2	Loosening and tightening bolt securing drive shaft	226
7.3	Removing and installing drive shaft	228
7.4	Dismantling and assembling drive shaft	230
7.5	Checking outer constant velocity joint	235
7.6	Checking inner constant velocity joint	237

43 - Self-levelling suspension	240
1 Electronic damping control	240
1.1 Assembly overview - electronic damping control	240
1.2 Removing and installing electronically controlled damping control unit J250	242
2 Vehicle level senders	243
2.1 Assembly overview - front vehicle level senders	243
2.2 Assembly overview - rear vehicle level senders	243
2.3 Removing and installing front vehicle level sender G78/G289	244
2.4 Removing and installing rear vehicle level sender G76/G77	246
44 - Wheels, tyres, vehicle geometry	248
1 Wheels, tyres	248
2 Wheel alignment	249
2.1 Notes on wheel alignment	249
2.2 When does wheel alignment have to be checked?	250
2.3 Test requirements	252
2.4 Preparations required before calibration of driver assist systems	252
2.5 Explanatory notes on production control numbers (PR numbers)	253
2.6 Preparations for measurement	254
2.7 Wheel runout compensation	255
2.8 Checking maximum steering angle	255
2.9 Wheel alignment procedure	256
2.10 Checking unladen position for wheel alignment - vehicles with coil springs	257
2.11 Wheel alignment specifications	257
2.12 Adjusting camber at front wheels	261
2.13 Adjusting camber at rear wheels	263
2.14 Adjusting toe setting at rear wheels	265
2.15 Adjusting toe setting at front wheels	265
3 Front camera for driver assist systems	268
3.1 Calibrating front camera for driver assist systems	268
48 - Steering	276
1 Steering wheel	276
1.1 Assembly overview - steering wheel	276
1.2 Removing and installing steering wheel	277
2 Steering column	279
2.1 Assembly overview - steering column	279
2.2 Handling and transporting steering column	280
2.3 Checking steering column for damage	282
2.4 Removing and installing steering column	283
2.5 Removing and installing control unit for electronic steering column lock J764	290
3 Steering rack	292
3.1 Assembly overview - steering rack	292
3.2 Assembly overview - track rods	295
3.3 Handling and transporting steering rack	297
3.4 Removing and installing steering rack	298
3.5 Removing and installing boot	300
3.6 Removing and installing track rod	303
3.7 Removing and installing track rod ball joint	306