

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Notes on use and safety for LED headlights and Audi laser lights	1
1.4 Safety information for handling gas discharge bulbs	2
2 Repair instructions	3
2.1 Rules for cleanliness	3
2.2 General notes	3
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	4
2.5 Routing and attachment of lines and wiring	4
2.6 Identification plates	5
2.7 Use of impact wrenches	5
2.8 Cleaning engine	5
27 - Starter, current supply, CCS	7
1 Battery	7
1.1 Assembly overview – battery	7
1.2 Disconnecting and connecting battery	9
1.3 Removing and installing earth cable with battery monitor control unit J367	11
1.4 Removing and installing battery	12
1.5 Charging battery	16
2 Jump-start terminal	17
2.1 Assembly overview - jump-start terminal	17
2.2 Removing and installing jump-start terminal	18
3 Alternator	20
3.1 Assembly overview - alternator	20
3.2 Removing and installing alternator	21
3.3 Checking alternator	27
4 Starter	28
4.1 Assembly overview - starter	28
4.2 Removing and installing starter	30
5 Start/stop system	35
5.1 Overview of fitting locations - start/stop system	35
90 - Gauges, instruments	36
1 Dash panel insert	36
1.1 Assembly overview - dash panel insert	36
1.2 Removing and installing dash panel insert with control unit in dash panel insert J285	38
2 Horn	41
2.1 Assembly overview - horn	41
2.2 Removing and installing treble horn H2/bass horn H7	42
92 - Windscreen wash/wipe system	44
1 Windscreen wiper system	44
1.1 Assembly overview - windscreen wiper system	44
1.2 Moving wipers to service position	47
1.3 Removing and installing wiper blade	47
1.4 Removing and installing wiper arms	48
1.5 Adjusting wiper arms	50
1.6 Removing and installing wiper motor V	51

1.7	Removing and installing rain and light sensor	52
2	Windscreen washer system	59
2.1	Assembly overview - windscreen washer system	59
2.2	Removing and installing washer fluid reservoir	60
2.3	Removing and installing windscreen washer fluid level sender	62
2.4	Removing and installing washer pump	62
2.5	Removing and installing washer jets	63
2.6	Adjusting washer jets	63
3	Headlight washer system	65
3.1	Assembly overview - headlight washer system	65
3.2	Removing and installing headlight washer system pump V11	66
3.3	Removing and installing washer jets	66
3.4	Adjusting washer jets	67
4	Washer fluid hoses	68
94	Lights, bulbs, switches - exterior	69
1	Headlights	69
1.1	Assembly overview - headlight	69
1.2	Removing and installing headlights	74
1.3	Adjusting headlights	79
1.4	Calibrating headlights	90
1.5	Removing and installing front turn signal bulb M5/M7	100
1.6	Removing and installing static cornering light M51/M52	101
1.7	Removing and installing gas discharge bulb L13/L14 with control unit J343/J344	102
1.8	Removing and installing LED module for daytime running light and side light L176/L177	103
1.9	Removing and installing control unit for daytime running light and side light J860/J861	104
1.10	Removing and installing output module for headlight J667/J668	105
1.11	Removing and installing gas discharge bulb control unit J343/J344	105
1.12	Removing and installing output module for headlight	106
1.13	Adapting headlights for driving on the left side of the road	107
1.14	Adapting headlights for driving on the right side of the road	107
2	Lights in exterior mirror	108
2.1	Assembly overview - lights in exterior mirror	108
2.2	Removing and installing turn signal	109
3	Tail light clusters	110
3.1	Assembly overview - tail light cluster on body	110
3.2	Removing and installing tail light cluster	110
4	High-level brake light	114
4.1	Assembly overview - high-level brake light	114
4.2	Removing and installing high-level brake light	114
5	Number plate light	117
6	Entry and start authorisation	118
6.1	Overview of fitting locations - entry and start authorisation system	118
6.2	Overview of fitting locations - keyless entry system	119
6.3	Assembly overview - exterior door handle for keyless entry system	121
6.4	Removing and installing front exterior door handle switches	122
6.5	Removing and installing entry and start authorisation control unit J518	124
6.6	Removing and installing interior aerial 1 for entry and start system R138	128
6.7	Removing and installing luggage compartment aerial for entry and start system R137	130
6.8	Removing and installing interior aerial 2 for entry and start system R139	130
6.9	Removing and installing aerial for entry and start system R134/R135	131
6.10	Removing and installing rear bumper aerial for entry and start system R136	132
7	Steering column switch module	133
7.1	Assembly overview - steering column switch module	133

7.2	Removing and installing steering column switch module	134
8	Parking aid	136
8.1	Assembly overview - parking aid	136
8.2	Removing and installing parking aid control unit J446	139
8.3	Removing and installing front parking aid warning buzzer H22	141
8.4	Removing and installing rear parking aid warning buzzer H15	143
8.5	Removing and installing front parking aid sender	144
8.6	Removing and installing rear parking aid sender	146
9	Park assist steering	147
9.1	Assembly overview - park assist steering	147
9.2	Removing and installing front sender	148
9.3	Removing and installing rear sender	148
10	Automatic headlight range control	149
10.1	Assembly overview - automatic headlight range control	149
10.2	Removing and installing headlight range control unit	150
96	Lights, bulbs, switches - interior	153
1	Lights	153
1.1	Overview of fitting locations - lights in dash panel	153
1.2	Overview of fitting locations - lights in front doors	154
1.3	Overview of fitting locations - background lighting in doors	156
1.4	Overview of fitting locations - lights in centre console	157
1.5	Overview of fitting locations - lights in luggage compartment	158
1.6	Overview of fitting locations - lights in roof trim	159
1.7	Removing and installing glove compartment light W6	161
1.8	Renewing bulb for glove compartment light W6	161
1.9	Removing and installing front footwell illumination bulb L151/L152	162
1.10	Removing and installing central locking SAFELOCK function warning lamp K133	163
1.11	Removing and installing entry light W92/W93	163
1.12	Removing and installing door warning lamp W30/W36	164
1.13	Removing and installing light for interior door handle illumination L219/L220	165
1.14	Removing and installing door storage compartment illumination bulb L160/L161	166
1.15	Removing and installing light for front door background lighting W86/W87	167
1.16	Removing and installing storage compartment illumination bulb L120	169
1.17	Removing and installing selector lever position display Y26	169
1.18	Removing and installing light for centre console background lighting L193/L194	170
1.19	Removing and installing luggage compartment light	171
1.20	Removing and installing illuminated vanity mirror W20/W14	173
2	Controls	174
2.1	Overview of fitting locations - controls in dash panel	174
2.2	Overview of fitting locations - controls in front doors	176
2.3	Overview of fitting locations - controls in centre console	178
2.4	Overview of fitting locations - controls in luggage compartment	179
2.5	Overview of fitting locations - controls in roof trim	180
2.6	Removing and installing light switch E1	182
2.7	Removing and installing buttons/switches in dash panel	183
2.8	Removing and installing glove compartment light switch E26	184
2.9	Removing and installing mirror adjustment switch E43/E168	185
2.10	Removing and installing operating unit for window regulator in driver door E512	185
2.11	Removing and installing driver side interior locking button for central locking system E308	186
2.12	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	187
2.13	Removing and installing entry and start authorisation button E408	188
2.14	Removing and installing parking brake button EX12	189
2.15	Removing and installing convertible roof actuation button E137	190



2.16	Removing and installing cabriolet windbreak switch E278	191
2.17	Removing and installing release button for rear lid lock cylinder F248	191
2.18	Removing and installing front interior light/reading light	193
2.19	Removing and installing garage door operating unit E284	194
3	Further lights and controls in vehicle interior	195
3.1	Overview of fitting locations - further lights and controls in vehicle interior	195
4	Anti-theft alarm system	196
4.1	Assembly overview - interior monitoring	196
4.2	Removing and installing alarm horn H12	197
4.3	Removing and installing anti-theft alarm sensor G578	198
5	Immobiliser	199
5.1	Removing and installing immobiliser reader coil	199
6	Lane change assist	200
6.1	Assembly overview - lane change assist	200
6.2	Removing and installing lane change assist warning lamp in exterior mirror K233/K234	201
6.3	Removing and installing lane change assist control unit J769/J770	201
6.4	Calibrating lane change assist	202
7	Front camera for driver assist systems	211
7.1	Overview of fitting locations - front camera for driver assist systems	211
7.2	Removing and installing front camera for driver assist systems	211
8	Cigarette lighter, socket	214
8.1	Assembly overview - cigarette lighter, 12 V socket	214
8.2	Removing and installing cigarette lighter U1	214
8.3	Removing and installing cigarette lighter illumination bulb L28	217
8.4	Removing and installing electric socket U	218
8.5	Renewing electric socket U	218
97 - Wiring		221
1	Relay carriers, fuse carriers, electronics boxes	221
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	221
1.2	Removing and installing electronics box	223
1.3	Removing and installing suppression filter C24	225
1.4	Removing and installing fuse holder B SB in electronics box	226
1.5	Removing and installing fuse holder A SA	228
1.6	Removing and installing fuse holder C SC under dash panel (left-side)	229
1.7	Removing and installing bracket for on-board supply control unit	231
1.8	Removing and installing bracket for control unit	233
2	Control units	235
2.1	Overview of fitting locations - control units	235
2.2	Assembly overview - data bus diagnostic interface	236
2.3	Removing and installing onboard supply control unit J519	237
2.4	Removing and installing garage door operation control unit	239
2.5	Removing and installing data bus diagnostic interface J533	241
3	Connectors	242
3.1	Overview of fitting locations - connectors	242
3.2	Unplugging left door coupling point	243
3.3	Removing and installing coupling station at left A-pillar	243
3.4	Removing and installing coupling station at right A-pillar	244
3.5	Repairing electrical wiring harnesses and electrical connectors	245
4	Releasing and dismantling connector housings	246
5	Cleaning contact surfaces	247
6	Repairing aerial wires	248
7	Fibre optic cables	249

8	Vehicle diagnostic, testing and information systems	250
----------	--	------------