

## Contents

<b>00 - Technical data</b>	<b>1</b>
1     Repair instructions	1
1.1 General repair instructions	1
1.2 Notes on repairing CAN bus wiring	1
<b>91 - Radio, telephone, navigation</b>	<b>2</b>
1     Infotainment system	2
1.1 Layout - infotainment system	2
1.2 Overview of fitting locations - infotainment system	6
1.3 Removing and installing infotainment system display	7
1.4 Removing and installing control unit 1 for information electronics J794	7
1.5 Removing and installing multimedia system operating unit E380	9
1.6 Removing and installing driver side volume regulator E67	10
2     Sound system	11
2.1 Layout - sound system	11
2.2 Overview of fitting locations - sound system	15
2.3 Removing and installing digital sound package control unit/amplifier	19
2.4 Removing and installing rear treble loudspeakers R14/R16	21
2.5 Removing and installing front treble loudspeakers R20/R22	23
2.6 Removing and installing front mid-range loudspeakers	24
2.7 Removing and installing rear bass loudspeakers R15/R17	25
2.8 Removing and installing front bass loudspeakers R21/R23	26
2.9 Removing and installing centre loudspeaker R208	28
2.10 Removing and installing centre loudspeaker 2 R219	28
3     Aerial systems	30
3.1 Layout - aerial systems	30
3.2 Overview of fitting locations - aerial systems	32
3.3 Removing and installing aerial amplifier	36
3.4 Removing and installing window aerial suppression filter C18	40
3.5 Removing and installing roof aerial	41
3.6 Removing and installing GPS aerial	42
3.7 Removing and installing GSM aerial	43
3.8 Removing and installing LTE aerials	43
3.9 Removing and installing digital radio aerial	44
3.10 Removing and installing satellite tuner aerial	44
3.11 Removing and installing bumper aerials	45
3.12 Removing and installing traffic data aerial	46
3.13 Removing and installing dedicated short-range communication aerial	47
3.14 Removing and installing aerial at back panel/rollover bar	47
3.15 Removing and installing film aerials	48
4     Telephone system	50
4.1 Layout - telephone	50
4.2 Overview of fitting locations - telephone system	59
4.3 Assembly overview - microphone unit	60
4.4 Removing and installing microphone unit in front roof module R164	63
4.5 Removing and installing control unit for seat belt microphone	64
4.6 Removing and installing aerial amplifier for mobile telephone R86	65
4.7 Removing and installing telephone bracket R126	67
5     Navigation system	69
5.1 Layout - navigation system	69
5.2 Overview of fitting locations - navigation system	69
5.3 Removing and installing chip card reader control unit	70

<b>6</b>	<b>TV system</b>	<b>72</b>
6.1	Layout - TV system	72
6.2	Overview of fitting locations - TV system	72
6.3	Removing and installing TV tuner	73
<b>7</b>	<b>Reversing camera system</b>	<b>75</b>
7.1	Layout - reversing camera system	75
7.2	Overview of fitting locations - reversing camera system	75
7.3	Removing and installing reversing camera R189	76
7.4	Removing and installing reversing camera system control unit J772	77
7.5	Calibrating reversing camera system	78
<b>8</b>	<b>Multifunction steering wheel</b>	<b>84</b>
8.1	Layout - multifunction steering wheel	84
8.2	Assembly overview - multi-function steering wheel	84
8.3	Removing and installing multifunction buttons in steering wheel E441/E440	87
8.4	Removing and installing tiptronic switches in steering wheel E439/E438	91
8.5	Removing and installing buttons E387/E408 (satellite switches)	91
<b>9</b>	<b>Connection for external multimedia devices</b>	<b>93</b>
9.1	Layout - connection for external multimedia devices	93
9.2	Removing and installing connection for external multimedia devices	93