

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system	2
1.2 Safety precautions when working on pyrotechnic components	3
1.3 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	5
1.4 Additional safety regulations for side airbags	5
1.5 Additional safety regulations for curtain airbags	6
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbag	6
1.7 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	7
1.8 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	8
1.10 Checking airbag mounting components following an accident	9
1.11 Accident in which no airbag was triggered	10
1.12 Checking seat belts	10
1.13 Checking belt webbing	10
1.14 Checking automatic belt retractor (locking action)	11
1.15 Visual inspection of belt buckle	12
1.16 Functional check of belt buckle	12
1.17 Checking guide fittings and latch plate	12
1.18 Checking securing components and anchorage points following an accident	12
1.19 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	13
1.20 Checking child seat anchors following an accident	13
1.21 Safety regulations for automatic anti-dazzle interior mirror	14
<b>2 Repair instructions</b>	<b>15</b>
2.1 Contact corrosion	15
2.2 Routing and attachment of pipes, hoses and wiring	15
<b>68 - Interior equipment</b>	<b>16</b>
<b>1 Storage compartments/covers/trim panels</b>	<b>16</b>
1.1 Overview of fitting locations - storage compartments/covers/trim panels	16
1.2 Assembly overview - dash panel cover (driver side)	17
1.3 Assembly overview - steering column trim	18
1.4 Assembly overview - glove compartment	19
1.5 Removing and installing dash panel cover (driver side)	21
1.6 Removing and installing upper steering column trim	22
1.7 Removing and installing lower steering column trim	23
1.8 Removing and installing glove compartment opening mechanism	24
1.9 Removing and installing lock cylinder for glove compartment opening mechanism	26
1.10 Removing and installing glove compartment	27
1.11 Removing and installing glove compartment cover	31
1.12 Removing and installing restrictor for glove compartment cover	32
<b>2 Equipment</b>	<b>34</b>
2.1 Assembly overview - sun visors	34
2.2 Assembly overview - windbreak	35
2.3 Removing and installing sun visor	36
2.4 Removing and installing sun visor centre mount	37
2.5 Removing and installing windbreak	39
<b>3 Centre console</b>	<b>44</b>
3.1 Assembly overview - centre console	44



3.2	Removing and installing rear centre console trim	50
3.3	Removing and installing cover for centre console	52
3.4	Removing and installing centre console insert	53
3.5	Removing and installing front centre console storage compartment	55
3.6	Removing and installing centre console	57
3.7	Removing and installing trim panel for centre console	62
3.8	Removing and installing bracket for centre console	64
<b>4</b>	<b>Centre armrest (front)</b>	<b>66</b>
4.1	Assembly overview - front centre armrest	66
4.2	Removing and installing front centre armrest	67
<b>5</b>	<b>Interior mirror</b>	<b>68</b>
5.1	Assembly overview - interior mirror	68
5.2	Removing and installing interior mirror	69
5.3	Switching automatic anti-dazzle function on and off	72
5.4	Switching compass display on and off	73
5.5	Setting magnetic deflection zone	73
5.6	Calibrating digital compass	74
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	74
5.8	Selecting the applicable deflection zone from the map	75
5.9	Checking operation of automatic anti-dazzle interior mirror	81
<b>69</b>	<b>Passenger protection</b>	<b>83</b>
<b>1</b>	<b>Seat belts</b>	<b>83</b>
1.1	Overview of fitting locations - seat belts and anchorage points	83
1.2	Assembly overview - front three-point seat belt	85
1.3	Assembly overview - rear outer three-point seat belt	88
1.4	Assembly overview - front belt buckle	88
1.5	Assembly overview - rear belt buckle	89
1.6	Removing and installing front three-point seat belt	90
1.7	Removing and installing rear three-point seat belt	97
1.8	Removing and installing rear belt guide	98
1.9	Removing and installing front belt guide	99
1.10	Removing and installing front belt end fitting	101
1.11	Removing and installing rear outer belt end fitting	101
1.12	Removing and installing front belt buckle	102
1.13	Removing and installing rear belt buckle	103
<b>2</b>	<b>Child seat anchors</b>	<b>104</b>
2.1	Assembly overview - front child seat anchors	104
2.2	Assembly overview - rear child seat anchors	104
2.3	Removing and installing front child seat anchor	106
2.4	Removing and installing rear child seat anchor	106
<b>3</b>	<b>Airbag system</b>	<b>108</b>
3.1	Overview of fitting locations - airbag system	108
<b>4</b>	<b>Airbag control unit</b>	<b>111</b>
4.1	Assembly overview - airbag control unit	111
4.2	Removing and installing airbag control unit J234	111
<b>5</b>	<b>Battery isolation igniter</b>	<b>114</b>
5.1	Assembly overview - battery isolation igniter	114
5.2	Removing and installing battery isolation igniter	114
<b>6</b>	<b>Airbag (driver side)</b>	<b>118</b>
6.1	Assembly overview - driver airbag	118
6.2	Removing and installing airbag unit with igniters	119
6.3	Renewing connector at airbag	122
<b>7</b>	<b>Airbag (front passenger side)</b>	<b>125</b>

7.1	Assembly overview - front passenger airbag	125
7.2	Removing and installing front passenger airbag unit with igniters	127
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	131
<b>8</b>	<b>Side airbags</b>	<b>133</b>
8.1	Assembly overview - front side airbag	133
8.2	Removing and installing front side airbag with igniter	134
8.3	Removing and installing wire for side airbag	138
<b>9</b>	<b>Curtain airbags</b>	<b>143</b>
9.1	Assembly overview - curtain airbag	143
9.2	Removing and installing curtain airbag with igniter	143
<b>10</b>	<b>Knee airbags</b>	<b>149</b>
10.1	Assembly overview - knee airbag	149
10.2	Removing and installing knee airbag with igniter	151
<b>11</b>	<b>Crash sensors for airbags</b>	<b>157</b>
11.1	Overview of fitting locations - crash sensors for airbags	157
11.2	Removing and installing front airbag crash sensor for driver side G283	158
11.3	Removing and installing front side airbag crash sensor G179/G180	161
11.4	Removing and installing rear side airbag crash sensor G256	165
<b>12</b>	<b>Seat position sensor</b>	<b>169</b>
12.1	Assembly overview - seat position sensor	169
12.2	Removing and installing seat position sensor	171
<b>13</b>	<b>Belt-fastened recognition system</b>	<b>175</b>
13.1	Removing and installing seat occupied sensor on front passenger side G128	175
<b>14</b>	<b>Seat occupied recognition system</b>	<b>176</b>
14.1	Overview of fitting locations - seat occupied recognition system	176
14.2	Removing and installing seat occupied sensor	177
<b>15</b>	<b>Pedestrian protection</b>	<b>181</b>
15.1	Assembly overview - pedestrian protection	181
15.2	Removing and installing front pressure hose sensor for pedestrian protection G579	183
15.3	Removing and installing centre crash sensor for pedestrian protection G693	186
15.4	Removing and installing trigger for pedestrian protection G598/G599	189
<b>70</b>	<b>Trim, insulation</b>	<b>192</b>
<b>1</b>	<b>Front door trim</b>	<b>192</b>
1.1	Assembly overview - front door trim	192
1.2	Removing and installing loudspeaker trim	195
1.3	Removing and installing trim panel	196
1.4	Removing and installing front door trim	197
1.5	Removing and installing front armrest	200
1.6	Removing and installing front door puller	201
1.7	Removing and installing switch trim	201
1.8	Removing and installing interior door handle	202
1.9	Removing and installing triangular trim	203
<b>2</b>	<b>Dash panel</b>	<b>205</b>
2.1	Assembly overview - dash panel	205
2.2	Removing and installing dash panel cover (side)	208
2.3	Removing and installing trim panel for dash panel	209
2.4	Removing and installing trim for dash panel insert	210
2.5	Removing and installing loudspeaker trim	213
2.6	Removing and installing dash panel	214
2.7	Removing and installing dash panel vents	221
2.8	Removing and installing defroster vent (front centre)	222
2.9	Removing and installing side defroster vent	223
<b>3</b>	<b>Dash panel cross member</b>	<b>224</b>



3.1	Assembly overview - dash panel cross member	224
3.2	Removing and installing crash bar	227
3.3	Removing and installing dash panel cross member	228
<b>4</b>	<b>Passenger compartment trim panels</b>	<b>233</b>
4.1	Overview of fitting locations - passenger compartment trim panels	233
4.2	Assembly overview - sill panel moulding	235
4.3	Assembly overview - A-pillar trim	236
4.4	Assembly overview - C-pillar trim	237
4.5	Assembly overview - windscreen frame trim	238
4.6	Assembly overview - side trim	239
4.7	Assembly overview - back panel trim	240
4.8	Assembly overview - foot rest and floor covering	242
4.9	Assembly overview - rear shelf	244
4.10	Assembly overview - rollover bar trim	245
4.11	Assembly overview - convertible roof compartment trim	246
4.12	Removing and installing sill panel moulding	247
4.13	Removing and installing A-pillar trim	249
4.14	Removing and installing windscreen frame trim	255
4.15	Removing and installing C-pillar trim	257
4.16	Removing and installing side trim	258
4.17	Removing and installing back panel trim	260
4.18	Removing and installing foot rest	265
4.19	Removing and installing floor covering	267
4.20	Removing and installing rear shelf	269
4.21	Removing and installing rollover bar trim	270
4.22	Removing and installing convertible roof compartment trim	271
<b>5</b>	<b>Luggage compartment trim panels</b>	<b>276</b>
5.1	Overview of fitting locations - luggage compartment trim panels	276
5.2	Assembly overview - luggage compartment side trim	278
5.3	Assembly overview - luggage compartment floor	282
5.4	Assembly overview - lower rear lid trim	282
5.5	Assembly overview - upper rear lid trim	285
5.6	Removing and installing lower rear lid trim	286
5.7	Removing and installing upper rear lid trim	290
5.8	Removing and installing luggage compartment side trim	291
5.9	Removing and installing luggage compartment trim	294
5.10	Removing and installing lock carrier trim	296
5.11	Removing and installing fastening ring	297
5.12	Removing and installing grip for rear luggage compartment floor	297
<b>6</b>	<b>Roof trim panels</b>	<b>300</b>
6.1	Assembly overview - moulded headliner	300
6.2	Removing and installing moulded headliner	301
6.3	Attaching roof reinforcement to body	304
<b>72</b>	<b>Seat frames</b>	<b>306</b>
<b>1</b>	<b>Overview - seat versions</b>	<b>306</b>
1.1	Overview of fitting locations - seat versions	306
<b>2</b>	<b>Front seats</b>	<b>309</b>
2.1	Overview of fitting locations - electrical and electronic components	309
2.2	Assembly overview - front seat	312
2.3	Assembly overview - backrest release mechanism and easy entry system	314
2.4	Assembly overview - front seat backrest	316
2.5	Assembly overview - seat pan	321
2.6	Removing and installing front seat	329
2.7	Connecting and disconnecting airbag adapter	335

2.8	Attaching front seat to seat repair stand	338
2.9	Removing and installing seat height adjuster	338
2.10	Removing and installing seat rake adjustment unit	340
2.11	Removing and installing backrest adjustment unit	342
2.12	Removing and installing front seat backrest	347
2.13	Removing and installing head restraint	358
2.14	Removing and installing head restraint guide	359
2.15	Dismantling and assembling seat pan	361
2.16	Removing and installing trim for backrest release mechanism	384
2.17	Removing and installing backrest release mechanism	385
2.18	Removing and installing lumbar support adjustment switch E176/E177	389
2.19	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	390
<b>3</b>	<b>Rear seats</b>	<b>393</b>
3.1	Assembly overview - bench seat/individual seats	393
3.2	Assembly overview - rear seat backrest	393
3.3	Removing and installing bench seat/individual seats	395
3.4	Removing and installing rear seat backrest	397
3.5	Removing and installing trim for locking mechanism	400
3.6	Removing and installing locking mechanism for rear seat backrest	400
<b>4</b>	<b>Front seat pneumatic system</b>	<b>403</b>
4.1	Connection diagram - pneumatic system	403
4.2	Assembly overview - pneumatic system	404
4.3	Checking pneumatic system	405
4.4	Severing and connecting pneumatic lines	412
4.5	Servicing pneumatic lines	414
4.6	Removing and installing air cushion for lumbar support	414
4.7	Removing and installing air cushion for backrest bolster adjuster	415
4.8	Removing and installing control unit for front multicontour seat J872/J873	417
4.9	Removing and installing compressor for multicontour seat V439/V440	419
<b>74</b>	<b>Seat - padding, covers</b>	<b>421</b>
<b>1</b>	<b>Covers and padding on front seats</b>	<b>421</b>
1.1	Assembly overview - seat pan cover and padding	421
1.2	Assembly overview - backrest cover and padding	424
1.3	Assembly overview - seat heater elements	425
1.4	Removing and installing seat pan cover and padding	427
1.5	Removing and installing backrest cover and padding	433
1.6	Separating seat pan cover and padding	442
1.7	Separating backrest cover and padding	443
1.8	Removing and installing seat heater element Z6/Z8	444
1.9	Removing and installing backrest heater element Z7/Z9	445
<b>2</b>	<b>Covers and padding on rear seats</b>	<b>446</b>
2.1	Assembly overview - cover and padding	446
2.2	Removing and installing cover and padding	447
2.3	Detaching cover from padding	449