

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
2 Repair instructions	2
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Preparations for installation of self-adhesive components	2
2.4 General information on using adhesives	4
2.5 Secure threaded connections	5
2.6 Identification plates	5
2.7 Impact wrenches	5
50 - Body - front	6
1 Lock carrier	6
1.1 Assembly overview - lock carrier	6
1.2 Assembly overview - lock carrier struts	9
1.3 Removing and installing lock carrier	10
1.4 Removing and installing mounting for bumper and headlight	16
1.5 Removing and installing struts	17
1.6 Removing and installing air duct for radiator	18
2 Wing	19
2.1 Assembly overview - wing	19
2.2 Assembly overview - wing covers	21
2.3 Removing and installing wing	21
2.4 Removing and installing wing panel brace	23
2.5 Removing and installing wing bracket	24
2.6 Removing and installing cover for wing	26
2.7 Removing and installing closure plate	29
3 Bulkhead	30
3.1 Assembly overview - plenum chamber partition panel	30
3.2 Assembly overview - plenum chamber cover	30
3.3 Removing and installing plenum chamber partition panel	31
3.4 Removing and installing cover for plenum chamber partition panel	32
3.5 Removing and installing plenum chamber cover	33
3.6 Removing and installing sealing element	34
55 - Bonnet, rear lid	35
1 Bonnet	35
1.1 Assembly overview - bonnet	35
1.2 Assembly overview - insulation and impact guard on bonnet	36
1.3 Assembly overview - Bowden cable	37
1.4 Removing and installing bonnet	39
1.5 Adjusting bonnet	40
1.6 Removing and installing hinges	44
1.7 Resetting hinge	46
1.8 Removing and installing striker	47
1.9 Removing and installing gas strut	47
1.10 Releasing gas from gas strut	48
1.11 Removing and installing insulation	48
1.12 Removing and installing impact guard	49
1.13 Removing and installing Bowden cable	51



1.14	Removing and installing bonnet lock	55
1.15	Removing and installing operating lever for bonnet lock	58
1.16	Removing and installing operating lever for arrester	59
1.17	Removing and installing mounting bracket for operating lever for bonnet lock	59
1.18	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	60
2	Rear lid	62
2.1	Assembly overview - rear lid	62
2.2	Assembly overview - attachments on rear lid	64
2.3	Assembly overview - rear lid locking mechanism	65
2.4	Removing and installing rear lid	66
2.5	Adjusting rear lid	68
2.6	Removing and installing hinges	74
2.7	Removing and installing hinge cover	76
2.8	Removing and installing rear lid seal	76
2.9	Removing and installing roof frame cover	78
2.10	Removing and installing adjusting buffer	79
2.11	Removing and installing stop for adjusting buffer	80
2.12	Removing and installing gas strut	80
2.13	Releasing gas from gas strut	81
2.14	Removing and installing water deflector strip	82
2.15	Removing and installing rear lid lock	84
2.16	Removing and installing manual release cable	85
2.17	Removing and installing striker	88
3	Tank flap unit	90
3.1	Assembly overview - tank flap unit	90
3.2	Removing and installing tank flap unit	90
3.3	Removing and installing trim panel for tank flap	92
3.4	Removing and installing trim panel for tank flap unit	92
3.5	Removing and installing drain hose for tank flap unit	93
3.6	Removing and installing manual release cable	94
57	Front doors, door components, central locking	95
1	Door	95
1.1	Assembly overview - door	95
1.2	Assembly overview - door seals	97
1.3	Removing and installing door	98
1.4	Adjusting door	100
1.5	Removing and installing door arrester	104
1.6	Removing and installing inner door seal/windscreen frame seal	105
1.7	Removing and installing inner door seal	107
1.8	Removing and installing door seal for roof trim strip	109
1.9	Removing and installing outer door seal	110
2	Door components	114
2.1	Assembly overview - window regulator	114
2.2	Assembly overview - door handle and door lock	115
2.3	Assembly overview - window guides and window slot seals	117
2.4	Removing and installing window regulator	118
2.5	Removing and installing window regulator motor	120
2.6	Removing and installing driver exterior door handle switch F272/front passenger exterior door handle switch F273	120
2.7	Removing and installing door handle	121
2.8	Removing and installing door handle trim	123
2.9	Removing and installing mounting bracket	124
2.10	Removing and installing operating cable for exterior door handle	125
2.11	Removing and installing lock cylinder	127

2.12	Removing and installing cap for lock cylinder	128
2.13	Removing and installing housing	128
2.14	Removing and installing door lock	129
2.15	Removing and installing cover for door lock	130
2.16	Removing and installing striker	131
2.17	Removing and installing operating cable for interior door handle	131
2.18	Removing and installing inner door cover	132
2.19	Removing and installing inner window slot seal	133
2.20	Removing and installing outer window slot seal	134
3	Central locking system	136
3.1	Overview of fitting locations - central locking system	136
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	138
3.3	Removing and installing interface control unit for vehicle location system J843	139
3.4	Removing and installing bonnet contact switch F266	140
3.5	Removing and installing tank filler flap locking motor V155	141
61	Convertible roof, hardtop, canopy	142
1	Convertible roof	142
1.1	Assembly overview - convertible roof	142
1.2	Assembly overview - convertible roof frame	142
1.3	Assembly overview - main mounting for convertible roof	143
1.4	Assembly overview - convertible roof locking mechanism	144
1.5	Removing and installing convertible roof	146
1.6	Removing and installing convertible roof locking mechanism	152
1.7	Manual operation	156
1.8	Adjusting convertible roof	156
2	Convertible roof cover	162
2.1	Assembly overview - insulation and convertible roof headliner	162
2.2	Assembly overview - tensioning cables and control cables for convertible roof cover	163
2.3	Assembly overview - tensioning cables and control cables for convertible roof headliner	164
2.4	Removing and installing convertible roof cover	166
2.5	Removing and installing tensioning cable for convertible roof cover	171
2.6	Removing and installing guide strap for convertible roof cross strut	173
2.7	Removing and installing convertible roof headliner	174
3	Attachments	181
3.1	Assembly overview - convertible roof seals, convertible roof trim	181
3.2	Assembly overview - water drain	183
3.3	Assembly overview - flap for convertible roof frame	184
3.4	Assembly overview - flap for convertible roof frame, repair kit	186
3.5	Removing and installing convertible roof seals	186
3.6	Removing and installing convertible roof trim	191
3.7	Removing and installing convertible roof compartment seal	195
3.8	Removing and installing convertible roof compartment trim	197
3.9	Removing and installing water drip tray	200
3.10	Removing and installing water drain hose	201
3.11	Removing and installing flap for convertible roof frame	202
3.12	Removing and installing trim panel for flap for convertible roof frame	204
3.13	Adjustment dimensions for flap for convertible roof frame	205
3.14	Adjusting flap for convertible roof frame	206
3.15	Removing and installing retaining plate for flap for convertible roof frame	207
3.16	Removing and installing Bowden cable for flap for convertible roof frame	208
3.17	Removing and installing actuating mechanism with extension spring	212
4	Electrical and electronic components	217
4.1	Overview of fitting locations - electrical and electronic components	217



4.2	Assembly overview - convertible roof actuation motor	218
4.3	Removing and installing convertible roof actuation control unit J256	219
4.4	Removing and installing switches	220
4.5	Removing and installing convertible roof actuation motors	223
63	- Bumpers	226
1	Front bumper	226
1.1	Assembly overview - bumper cover	226
1.2	Assembly overview - bumper carrier	237
1.3	Removing and installing bumper cover	237
1.4	Removing and installing bumper cover mounting	240
1.5	Removing and installing reinforcement strut	241
1.6	Removing and installing retaining strip for wheel housing liner	244
1.7	Removing and installing cover for headlight washer jet	246
1.8	Removing and installing air intake grille	246
1.9	Removing and installing cover for air inlet (side)	250
1.10	Removing and installing front spoiler	253
1.11	Removing and installing closure plate for bumper cover	257
1.12	Removing and installing lock carrier cover	260
1.13	Removing and installing bumper carrier	261
1.14	Removing and installing connecting brace	262
1.15	Removing and installing moulded foam insert	263
1.16	Removing and installing attachments from aero kit - TT RS	265
2	Rear bumper	276
2.1	Assembly overview - bumper cover	276
2.2	Assembly overview - bumper cover mounting	284
2.3	Assembly overview - bumper carrier	286
2.4	Removing and installing bumper cover	287
2.5	Removing and installing base plate for bumper cover	289
2.6	Removing and installing reinforcement for bumper cover	291
2.7	Removing and installing trim for lower section of bumper cover	293
2.8	Removing and installing tailpipe trim strip	294
2.9	Removing and installing trim strip for lower section of bumper cover	294
2.10	Removing and installing bumper cover mounting	295
2.11	Removing and installing bumper carrier	297
2.12	Removing and installing attachments from aero kit - TT RS	298
64	- Glazing	306
1	Repair instructions	306
1.1	Minimum drying times for bonded windows	306
1.2	Repairing windows	306
1.3	Tools and materials required for installation and removal	307
1.4	Preparing undamaged windows for installation	310
1.5	Preparing new windows for installation	310
1.6	Preparing body flange for installation	312
1.7	Cleaning off adhesive sealant	313
2	Windscreen	314
2.1	Assembly overview - windscreen	314
2.2	Removing and installing windscreen	316
3	Rear window	323
3.1	Assembly overview - rear window	323
3.2	Removing and installing rear window	324
4	Side windows	331
4.1	Assembly overview - rear side window	331
4.2	Removing and installing rear side window	332

5	Door windows	335
5.1	Assembly overview - front door window	335
5.2	Removing and installing front door window	335
5.3	Adjusting front door window	336
66	Exterior equipment	347
1	Radiator grille/front trim	347
1.1	Assembly overview - radiator grille	347
1.2	Removing and installing radiator grille	352
1.3	Removing and installing reinforcement strut	354
1.4	Removing and installing cover for radiator grille	356
1.5	Removing and installing mounting bracket for front parking aid sender	356
1.6	Removing and installing mounting for centre crash sensor for pedestrian protection G693	358
1.7	Removing and installing number plate holder	359
2	Spoilers	360
2.1	Assembly overview - spoiler	360
2.2	Removing and installing spoiler	369
2.3	Adjusting spoiler	373
2.4	Removing and installing spoiler mounting	376
2.5	Removing and installing buffer	379
2.6	Dismantling and assembling spoiler	381
3	Strips/trim panels/extensions	388
3.1	Assembly overview - trim strip and covers	388
3.2	Assembly overview - sill panel trim	390
3.3	Assembly overview - side member trim	391
3.4	Assembly overview - trim panel for A-pillar	392
3.5	Assembly overview - heat shield	393
3.6	Removing and installing trim strip	395
3.7	Removing and installing sill panel trim	397
3.8	Removing and installing side member trim	399
3.9	Removing and installing reinforcement plate for side member trim	402
3.10	Removing and installing bracket for side member trim	404
3.11	Removing and installing trim inlay for side member trim	404
3.12	Removing and installing side skirt - aero kit, TT RS	406
3.13	Removing and installing trim panel for A-pillar	410
3.14	Removing and installing heat shield for floor	411
4	Noise insulation	418
4.1	Assembly overview - noise insulation	418
4.2	Removing and installing noise insulation	419
5	Underbody cladding	422
5.1	Assembly overview - underbody cladding	422
5.2	Removing and installing underbody cladding	425
5.3	Removing and installing tunnel cross-piece	427
5.4	Removing and installing diagonal struts	428
6	Exterior mirrors	430
6.1	Assembly overview - exterior mirror	430
6.2	Removing and installing exterior mirror	432
6.3	Removing and installing mirror cover	433
6.4	Removing and installing mirror glass	434
6.5	Removing and installing mirror adjustment unit	435
6.6	Removing and installing mirror trim	436
6.7	Removing and installing cover for mirror base	436
6.8	Removing and installing seal for cover for mirror base	437
7	Wheel housing liners	438
7.1	Assembly overview - front wheel housing liner	438



7.2	Assembly overview - rear wheel housing liner	438
7.3	Removing and installing front wheel housing liner	439
7.4	Removing and installing wheel spoiler (front)	440
7.5	Removing and installing rear wheel housing liner	441
8	Lettering and badges	442
8.1	General notes on renewing lettering and badges	442
8.2	Dimensions - bonnet	442
8.3	Dimensions - lettering and badges on rear lid	443
8.4	Dimensions - lettering and badges on wings	444
8.5	Removing and installing front badges	445