

## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b> .....  | <b>1</b>  |
| <b>1 Safety briefing/employee qualification</b> .....   | <b>1</b>  |
| 1.1 Qualification .....   | 1         |
| <b>2 Safety information</b> .....   | <b>2</b>  |
| 2.1 Safety information .....  | 2         |
| 2.2 Safety precautions when working on the cooling system .....   | 4         |
| 2.3 Safety precautions when using testers and measuring instruments during a road test .....                  | 5         |
| <b>3 Repair instructions</b> .....  | <b>6</b>  |
| 3.1 Information on handling fine dust, aluminium dust and steel dust .....                                    | 6         |
| 3.2 Routing and attachment of pipes, hoses and wiring .....   | 7         |
| 3.3 Contact corrosion .....   | 7         |
| 3.4 Bonding surfaces for self-adhesive components .....   | 7         |
| 3.5 Secure threaded connections .....   | 7         |
| 3.6 Identification plates .....   | 8         |
| 3.7 Impact wrenches .....   | 8         |
| <b>4 Important notes</b> .....  | <b>9</b>  |
| <b>5 Vehicle identification data</b> .....  | <b>10</b> |
| 5.1 Vehicle identification number .....   | 10        |
| 5.2 Type plate .....  | 11        |
| 5.3 Vehicle data sticker .....  | 11        |
| <b>6 Repairing joints with flow-drill screws</b> .....  | <b>12</b> |
| 6.1 Socket for flow-drill screws (alternative) .....  | 12        |
| 6.2 Position of screws .....  | 12        |
| 6.3 Repair set for flow-drill screws -VAS 6631- .....   | 13        |
| 6.4 Dent removal .....  | 13        |
| 6.5 Surface treatment .....   | 14        |
| 6.6 Contact corrosion .....   | 14        |
| 6.7 Laser welding .....   | 15        |
| 6.8 Repair methods for replacing body parts .....   | 15        |
| 6.9 Matching the surface contour .....  | 15        |
| <b>7 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b><br>..... | <b>17</b> |
| <b>8 Moulded foam inserts</b> .....   | <b>19</b> |
| <b>9 Processing body structure adhesive D 180 004 M2</b> .....  | <b>21</b> |
| 9.1 Preparing bonding surfaces .....  | 22        |
| <b>10 Galvanised body panels, high-strength and extra-high-strength steel</b> .....                           | <b>35</b> |
| 10.1 Aluminium panels .....   | 38        |
| <b>11 Overview of riveting attachments (pairs of tools)</b> .....   | <b>42</b> |
| <b>12 Overview of rivets used for repair measures</b> .....   | <b>43</b> |
| 12.1 Overview of rivets and tools .....   | 43        |
| 12.2 Thread repair for M6 pop rivet nut .....   | 49        |
| 12.3 Inserting pop rivet bolts WHT 005 180 .....  | 49        |
| <b>13 Body dimensions</b> .....   | <b>50</b> |
| 13.1 Body - front .....   | 50        |
| 13.2 Body - centre .....  | 52        |
| 13.3 Floor group .....  | 55        |
| 13.4 Body - rear .....  | 59        |
| <b>14 Tools</b> .....   | <b>61</b> |
| <b>15 Straightening jig</b> .....   | <b>65</b> |
| 15.1 Procedure for repairing structural body damage on Audi vehicles .....                                    | 65        |



|   |            |
|---|------------|
| <b>50 - Body - front</b>  | <b>67</b>  |
| 1 Safety information  | 67         |
| 2 Renewing engine console, right-side - Coupé and Roadster identical                            | 68         |
| 2.1 Tools   | 68         |
| 2.2 Procedure   | 69         |
| 3 Renewing mounting bracket for subframe - Coupé and Roadster identical                         | 73         |
| 3.1 Tools   | 73         |
| 3.2 Procedure   | 74         |
| 4 Renewing upper longitudinal member for wheel housing - Coupé and Roadster identical           | 82         |
| 4.1 Tools   | 82         |
| 4.2 Procedure   | 83         |
| 5 Renewing front wheel housing - Coupé and Roadster identical                                   | 92         |
| 5.1 Tools   | 92         |
| 5.2 Procedure   | 93         |
| 6 Renewing front longitudinal member - Coupé and Roadster identical                             | 100        |
| 6.1 Tools   | 100        |
| 6.2 Procedure   | 101        |
| 7 Renewing front longitudinal member (left-side) - part section (Coupé and Roadster identical)  | 106        |
| 7.1 Tools   | 106        |
| 7.2 Procedure   | 107        |
| 8 Renewing front longitudinal member (right-side) - part section (Coupé and Roadster identical) | 113        |
| 8.1 Tools   | 113        |
| 8.2 Procedure   | 114        |
| 9 Renewing impact damper plate - Coupé and Roadster identical                                   | 120        |
| 9.1 Tools   | 120        |
| 9.2 Procedure   | 121        |
| 10 Renewing upper footwell cross member - Coupé and Roadster identical                          | 124        |
| 10.1 Tools  | 124        |
| 10.2 Procedure  | 125        |
| 11 Renewing outer footwell cross member - partial renewal (Coupé and Roadster identical)        | 131        |
| 11.1 Tools  | 131        |
| 11.2 Procedure  | 132        |
| 12 Repairing threads for attachment of subframe   | 137        |
| 12.1 Tools  | 137        |
| <b>51 - Body - centre</b>   | <b>143</b> |
| 1 Safety information  | 143        |
| 2 Permitted separating cuts on complete side panel  | 144        |
| 3 Renewing roof   | 146        |
| 3.1 Tools   | 146        |
| 3.2 Procedure   | 152        |
| 4 Renewing roof side member   | 166        |
| 4.1 Tools   | 166        |
| 4.2 Procedure   | 167        |
| 5 Renewing outer roof frame (Roadster)  | 174        |
| 5.1 Tools   | 174        |
| 5.2 Procedure   | 175        |
| 6 Renewing front roof cross member  | 182        |
| 6.1 Tools   | 182        |
| 6.2 Procedure   | 183        |

|                               |   |            |
|-------------------------------|---|------------|
| <b>7</b>                      | <b>Renewing rear roof cross member</b> .....                                    | <b>186</b> |
| 7.1                           | Tools .....   | 186        |
| 7.2                           | Procedure .....   | 187        |
| <b>8</b>                      | <b>Renewing outer A-pillar</b> .....  | <b>192</b> |
| 8.1                           | Tools .....   | 193        |
| 8.2                           | Procedure .....   | 194        |
| <b>9</b>                      | <b>Renewing outer A-pillar (Roadster)</b> .....                                 | <b>204</b> |
| 9.1                           | Tools .....   | 204        |
| 9.2                           | Procedure .....   | 205        |
| <b>10</b>                     | <b>Renewing inner A-pillar (Coupé)</b> .....                                    | <b>212</b> |
| 10.1                          | Tools .....   | 212        |
| 10.2                          | Procedure .....   | 213        |
| <b>11</b>                     | <b>Renewing A-pillar - partial renewal (Coupé and Roadster identical)</b> ..... | <b>222</b> |
| 11.1                          | Tools .....   | 222        |
| 11.2                          | Procedure .....   | 223        |
| <b>12</b>                     | <b>Renewing inner A-pillar reinforcement</b> .....                              | <b>231</b> |
| 12.1                          | Tools .....   | 231        |
| 12.2                          | Procedure .....   | 232        |
| <b>13</b>                     | <b>Renewing B-pillar</b> .....  | <b>239</b> |
| 13.1                          | Tools .....   | 239        |
| 13.2                          | Procedure .....   | 240        |
| <b>14</b>                     | <b>Renewing inner B-pillar (Roadster)</b> .....                                 | <b>245</b> |
| 14.1                          | Tools .....   | 245        |
| 14.2                          | Procedure .....   | 246        |
| <b>15</b>                     | <b>Renewing inner side member - partial renewal (Coupé)</b> .....               | <b>250</b> |
| 15.1                          | Tools .....   | 250        |
| 15.2                          | Procedure .....   | 251        |
| <b>16</b>                     | <b>Renewing inner side member (Coupé)</b> .....                                 | <b>259</b> |
| 16.1                          | Tools .....   | 259        |
| 16.2                          | Procedure .....   | 260        |
| <b>17</b>                     | <b>Renewing inner side member reinforcement - Coupé</b> .....                   | <b>268</b> |
| 17.1                          | Tools .....   | 268        |
| 17.2                          | Procedure .....   | 269        |
| <b>18</b>                     | <b>Renewing inner side member (Roadster)</b> .....                              | <b>272</b> |
| 18.1                          | Tools .....   | 272        |
| 18.2                          | Procedure .....   | 273        |
| <b>19</b>                     | <b>Renewing seat cross member (Coupé and Roadster identical)</b> .....          | <b>278</b> |
| 19.1                          | Tools .....   | 278        |
| 19.2                          | Procedure .....   | 279        |
| <b>20</b>                     | <b>Renewing centre tunnel (Coupé and Roadster identical)</b> .....              | <b>284</b> |
| 20.1                          | Tools .....   | 284        |
| 20.2                          | Procedure .....   | 285        |
| <b>21</b>                     | <b>Renewing floor panel (Coupé and Roadster identical)</b> .....                | <b>293</b> |
| 21.1                          | Tools .....   | 293        |
| 21.2                          | Procedure .....   | 294        |
| <b>22</b>                     | <b>Renewing back panel (bolted component)</b> .....                             | <b>300</b> |
| 22.1                          | Procedure .....   | 300        |
| <b>53 - Body - rear</b> ..... | <b>303</b>  |            |
| 1                             | Safety information .....  | 303        |
| 2                             | Permitted separating cuts on complete side panel .....                          | 304        |
| 3                             | Renewing rear upper cross panel .....   | 306        |



|           |   |            |
|-----------|---|------------|
| 3.1       | Tools .....   | 306        |
| 3.2       | Procedure .....   | 307        |
| <b>4</b>  | <b>Renewing rear cross panel - partial renewal .....</b>      | <b>313</b> |
| 4.1       | Tools .....   | 313        |
| 4.2       | Procedure .....   | 314        |
| <b>5</b>  | <b>Renewing rear longitudinal member - part section .....</b> | <b>320</b> |
| 5.1       | Tools .....   | 320        |
| 5.2       | Procedure .....   | 321        |
| <b>6</b>  | <b>Renewing side panel .....</b>                              | <b>327</b> |
| 6.1       | Tools .....   | 327        |
| 6.2       | Procedure .....   | 328        |
| <b>7</b>  | <b>Renewing side panel (Roadster) .....</b>                   | <b>341</b> |
| 7.1       | Tools .....   | 341        |
| 7.2       | Procedure .....   | 342        |
| <b>8</b>  | <b>Renewing luggage compartment floor .....</b>               | <b>353</b> |
| 8.1       | Tools .....   | 353        |
| 8.2       | Procedure .....   | 354        |
| <b>9</b>  | <b>Renewing rear wheel housing - part section .....</b>       | <b>360</b> |
| 9.1       | Tools .....   | 360        |
| 9.2       | Procedure .....   | 361        |
| <b>10</b> | <b>Renewing rear wheel housing (Roadster) .....</b>           | <b>366</b> |
| 10.1      | Tools .....   | 366        |
| 10.2      | Procedure .....   | 367        |