

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 General safety information	1
1.2 Safety measures for working on vehicles with high-voltage system	1
1.3 Safety precautions when working on the cooling system	2
1.4 Safety precautions when working on air conditioning systems	3
1.5 Safety measures during road test with testing and measuring instruments	3
1.6 Safety precautions when working on passenger protection systems	4
1.7 Safety precautions when working with chemical substances	5
1.8 Safety precautions when working with compressed gas cylinders	5
1.9 Safety precautions when working with batteries	5
1.10 Safety measures when working with special tools and workshop equipment	6
2 Repair instructions	7
2.1 Laws, specifications, guidelines and risk assessments	7
2.2 Notes on the application of the workshop manual	7
2.3 Replacement parts, servicing materials and consumables	7
2.4 Transport and storage	9
2.5 Qualification	10
2.6 Environmental protection	10
2.7 Rules for cleanliness	10
2.8 Identification labels	11
2.9 Bolts and nuts	11
2.10 Using power tools	11
2.11 Contact corrosion	12
2.12 Gaskets and seals	12
2.13 Bonding surfaces	13
2.14 Unplugging electrical connectors	13
2.15 Routing and attachment of lines	13
2.16 Retaining rings	14
2.17 Working on refrigerant circuit	14
2.18 Work on seat occupied recognition for front passenger airbag deactivation	14
2.19 Battery	15
2.20 Assessing accident vehicles	15
54 - Vehicle-specific paintwork information	20
1 Paintwork structure	20
1.1 Structure of factory finish	20
2 Areas exposed to stone chipping	21
2.1 Overview - areas exposed to stone chipping	21
3 Seam sealing	22
3.1 Joint seals - general information	22
3.2 Joint seals - body, centre	22
4 Underseal	23
4.1 Underseal - general information	23
4.2 Overview - underseal (body), with differing layer thicknesses	23
5 Contrasting colours	25
5.1 Contrasting colours - whole vehicle	25
6 Paintwork repair	26
6.1 Repairing paintwork - components	26
6.2 Repairing paintwork - sensors	27