

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
1.2 Identification of bevel box	4
<b>2 Technical data</b>	<b>5</b>
2.1 Allocation of gearbox to engine	5
2.2 Capacities	5
2.3 Calculating gear ratios	5
<b>3 Overview - power transmission</b>	<b>7</b>
3.1 Overview - power transmission, front-wheel drive	7
3.2 Overview - power transmission, all-wheel drive	8
<b>4 Repair instructions</b>	<b>11</b>
4.1 Use of impact wrenches	11
4.2 General repair instructions	11
4.3 Contact corrosion	17
<b>30 - Clutch</b>	<b>18</b>
<b>1 Clutch mechanism</b>	<b>18</b>
1.1 Assembly overview - clutch release mechanism	18
1.2 Removing and installing clutch slave cylinder together with release bearing	20
<b>34 - Controls, housing</b>	<b>23</b>
<b>1 Gear oil</b>	<b>23</b>
1.1 Distinguishing manual gearboxes for oil filling	23
1.2 Checking gear oil level	23
<b>2 Securing to engine and gearbox support</b>	<b>25</b>
<b>3 Dismantling and assembling gearbox</b>	<b>26</b>
3.1 Schematic overview - gearbox	26
3.2 Assembly overview - gearbox	27
3.3 Assembly overview - gearbox/transmission unit housing and selector mechanism	29
3.4 Assembly overview - selector unit	31
3.5 Assembly overview - input shaft, output shafts, differential and selector rods	33
3.6 Assembly overview - selector forks	37
3.7 Dismantling and assembling gearbox	38
<b>4 Gearbox housing, clutch housing</b>	<b>63</b>
4.1 Assembly overview - gearbox housing	63
4.2 Assembly overview - clutch housing	65
4.3 Servicing gearbox/transmission unit housing	67
4.4 Servicing clutch housing	77
<b>35 - Gears, shafts</b>	<b>81</b>
<b>1 Input shaft</b>	<b>81</b>
1.1 Assembly overview - input shaft	81
1.2 Dismantling and assembling input shaft	82
1.3 Renewing input shaft oil seal	88
<b>2 Output shaft</b>	<b>90</b>
2.1 Assembly overview - output shaft	90
2.2 Dismantling and assembling output shaft	98
2.3 Adjusting output shaft	129
<b>39 - Final drive - differential</b>	<b>141</b>
<b>1 Oil seals</b>	<b>141</b>



1.1	Overview of fitting locations - oil seals .....	141
1.2	Renewing left oil seal .....	143
1.3	Renewing right oil seal .....	145
<b>2</b>	<b>Table of adjustments .....</b>	<b>153</b>
<b>3</b>	<b>Differential .....</b>	<b>154</b>
3.1	Assembly overview - differential .....	154
3.2	Dismantling and assembling differential .....	160
3.3	Adjusting differential .....	175
<b>4</b>	<b>Bevel box .....</b>	<b>181</b>
4.1	Assembly overview - bevel box .....	181
4.2	Renewing oil seals for bevel box .....	185
4.3	Renewing output flange and re-determining shim for output flange .....	206
4.4	Renewing needle bearings (polygon bearings) and seal for needle bearing on flange shaft (right-side) .....	207