

Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety regulations	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting and towing	2
2 Identification	3
2.1 Identification of gearbox	3
2.2 Identification of bevel box	4
3 Repair instructions	5
3.1 General notes	5
3.2 Safety functions of gearbox control unit	6
3.3 Rules for cleanliness	6
3.4 General repair instructions	7
3.5 Contact corrosion	8
4 Technical data	9
4.1 Capacities	9
30 - Clutch	10
1 Clutch	10
1.1 Assembly overview - dual clutch	10
1.2 Removing dual clutch	10
1.3 Installing dual clutch	14
34 - Controls, housing	27
1 Selector mechanism	27
1.1 Assembly overview - selector lever handle	27
1.2 Assembly overview - selector mechanism	31
1.3 Manual release from position P	34
1.4 Removing and installing selector lever handle	39
1.5 Bringing interlock button in handle into installation position	43
1.6 Removing and installing selector mechanism	45
1.7 Checking selector mechanism	47
1.8 Checking and adjusting selector lever cable	50
1.9 Renewing selector shaft oil seal	52
2 Removing and installing gearbox	56
2.1 Tightening torques for gearbox	56
2.2 Removing gearbox	57
2.3 Installing gearbox	83
3 Transporting gearbox	87
4 Securing to engine and gearbox support	89
5 Assembly mountings	91
5.1 Assembly overview - assembly mountings	91
6 Bevel box	92
6.1 Assembly overview - bevel box	92
6.2 Removing bevel box	92
6.3 Installing bevel box	99
6.4 Tightening torques for bevel box	99
7 Mechatronic unit	101
7.1 Assembly overview - mechatronic unit	101
7.2 Removing and installing oil pan	104



7.3	Removing and installing mechatronic unit	107
7.4	Renewing securing clip on vehicle connector	110
7.5	Removing and installing gear oil pump	112
8	Gear oil circuit	115
8.1	Assembly overview - gear oil circuit	115
8.2	Removing and installing gear oil cooler	115
8.3	Removing and installing gear oil filter	119
9	Gear oil	122
9.1	Tools for changing gear oil	122
9.2	Checking gear oil level	123
9.3	Draining and filling gear oil	127
35 - Gears, shafts		130
1	Dismantling and assembling gears and shafts	130
39 - Final drive - differential		131
1	Gearbox control system	131
1.1	Overview of fitting locations - gearbox control system	131
2	Oil seals	132
2.1	Overview of fitting locations - oil seals	132
2.2	Renewing left oil seal	133
2.3	Renewing right oil seal	135
3	Differential	139
3.1	Assembly overview - differential	139
3.2	Removing and installing left flange shaft	140
3.3	Removing and installing right flange shaft	142
4	Components of bevel box	147
4.1	Assembly overview - components of bevel box	147
4.2	Renewing oil seals for bevel box	149
5	Gear oil	166
5.1	Tools for changing gear oil	166
5.2	Checking gear oil level	167
5.3	Draining and filling gear oil	169