

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
1.2 Engine versions	1
2 Safety information	3
2.1 Safety precautions when working on the fuel supply system	3
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the exhaust system	4
2.6 Safety precautions when working on the ignition system	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair instructions	7
3.4 Performing adaptations after renewing a component	8
3.5 Foreign material in engine	9
3.6 Cleaning engine	9
3.7 Contact corrosion	9
3.8 Routing and attachment of pipes, hoses and wiring	9
3.9 Installing radiators and condensers	10
3.10 Checking vacuum system	10
3.11 Nuts, bolts	10
3.12 Identification plates	11
3.13 Use of impact wrenches	11
3.14 Checking fuel system for leaks	12
10 - Removing and installing engine	13
1 Removing and installing engine	13
1.1 Removing engine	13
1.2 Separating engine and gearbox	13
1.3 Securing engine to engine and gearbox support	21
1.4 Installing engine	22
2 Assembly mountings	23
3 Engine cover panel	24
3.1 Removing and installing engine cover panel	24
13 - Crankshaft group	25
1 Cylinder block (pulley end)	25
1.1 Assembly overview - cylinder block (pulley end)	25
1.2 Removing and installing poly V-belt	27
1.3 Removing and installing poly V-belt tensioner	29
1.4 Removing and installing vibration damper	29
1.5 Removing and installing bracket for ancillaries	34
1.6 Removing and installing engine support	35
2 Cylinder block (gearbox end)	36
2.1 Assembly overview - cylinder block (gearbox end)	36
2.2 Assembly overview - drive plate	37
2.3 Removing and installing flywheel	38
2.4 Removing and installing drive plate	40
2.5 Removing and installing sealing flange (gearbox end)	42
3 Crankshaft	46



3.1	Assembly overview - crankshaft	46
3.2	Crankshaft dimensions	48
3.3	Allocation of main bearing shells	49
3.4	Renewing needle bearing in crankshaft	49
3.5	Measuring axial clearance of crankshaft	52
3.6	Measuring radial clearance of crankshaft	52
3.7	Removing and installing sender wheel	53
4	Balance shaft	54
4.1	Assembly overview - balance shaft	54
4.2	Removing and installing balance shaft	55
4.3	Renewing oil seal for balance shaft (inlet side)	59
5	Pistons and conrods	61
5.1	Assembly overview - pistons and conrods	61
5.2	Removing and installing pistons	65
5.3	Removing and installing oil spray jets	66
5.4	Checking pistons and cylinder bores	68
5.5	Separating parts of new conrod	69
5.6	Checking radial clearance of conrod bearings	70
15	Cylinder head, valve gear	71
1	Timing chain cover	71
1.1	Assembly overview - timing chain cover	71
1.2	Removing and installing timing chain cover	74
1.3	Renewing oil seal for vibration damper	77
2	Chain drive	80
2.1	Assembly overview - camshaft timing chains	80
2.2	Assembly overview - drive chain for balance shaft	82
2.3	Removing and installing bearing saddle	84
2.4	Removing and installing camshaft timing chain	88
2.5	Removing and installing drive chain for balance shaft	99
2.6	Checking valve timing	102
2.7	Checking chain elongation	105
3	Cylinder head	107
3.1	Assembly overview - cylinder head	107
3.2	Removing and installing cylinder head	110
3.3	Removing and installing vacuum pump	119
3.4	Checking compression	120
4	Valve gear	123
4.1	Assembly overview - valve gear	123
4.2	Removing and installing camshaft	127
4.3	Installing ball for slider	135
4.4	Removing and installing cam adjustment actuator	136
4.5	Removing and installing camshaft control valve 1 N205	137
4.6	Removing and installing valve stem oil seals	137
5	Inlet and exhaust valves	147
5.1	Checking valve guides	147
5.2	Checking valves	148
5.3	Valve dimensions	148
17	Lubrication	149
1	Sump/oil pump	149
1.1	Assembly overview - sump/oil pump	149
1.2	Engine oil	152
1.3	Removing and installing lower part of sump	153
1.4	Removing and installing upper part of sump	154

1.5	Removing and installing oil pump	157
1.6	Removing and installing oil level and oil temperature sender G266	159
2	Engine oil cooler	160
2.1	Assembly overview - engine oil cooler	160
2.2	Removing and installing engine oil cooler	161
2.3	Removing and installing mechanical switching valve	161
3	Crankcase breather	162
3.1	Assembly overview - crankcase breather system	162
3.2	Removing and installing oil separator	163
4	Oil filter/oil pressure switches	165
4.1	Assembly overview - oil filter	165
4.2	Assembly overview - oil pressure switches/oil pressure control	166
4.3	Removing and installing piston cooling jet control valve N522	168
4.4	Removing and installing valve for oil pressure control N428	168
4.5	Removing and installing oil pressure switch F22	169
4.6	Removing and installing oil pressure switch for reduced oil pressure F378	169
4.7	Removing and installing stage 3 oil pressure switch F447	169
4.8	Checking oil pressure	171
19	- Cooling	175
1	Cooling system/coolant	175
1.1	Connection diagram - coolant hoses	175
1.2	Checking cooling system for leaks	175
1.3	Draining and filling cooling system	179
2	Coolant pump/thermostat assembly	180
2.1	Assembly overview - coolant pump/thermostat	180
2.2	Assembly overview - electric coolant pump	182
2.3	Assembly overview - coolant temperature senders	184
2.4	Removing and installing electric coolant pump	186
2.5	Removing and installing coolant pump	190
2.6	Removing and installing toothed belt for coolant pump	193
2.7	Removing and installing actuator for engine temperature regulation N493	195
2.8	Removing and installing coolant temperature sender G62	197
2.9	Removing and installing radiator outlet coolant temperature sender G83	198
2.10	Removing and installing coolant valves	199
3	Coolant pipes	203
3.1	Assembly overview - coolant pipes	203
3.2	Removing and installing coolant pipes	204
3.3	Removing and installing coolant pipes for gearbox	208
4	Radiator/radiator fans	210
21	- Turbocharging/supercharging	211
1	Turbocharger	211
1.1	Assembly overview - turbocharger	211
1.2	Removing and installing turbocharger	216
1.3	Removing and installing turbocharger air recirculation valve N249	226
1.4	Removing and installing charge pressure positioner V465	227
2	Charge air system	229
2.1	Assembly overview - charge air system	229
2.2	Assembly overview - hose connections for charge air system	229
2.3	Removing and installing charge air cooler	230
2.4	Removing and installing charge pressure sender G31	230
2.5	Checking charge air system for leaks	230
24	- Mixture preparation - injection	232



1	Injection system	232
2	Air filter	233
3	Intake manifold	234
3.1	Assembly overview - intake manifold	234
3.2	Removing and installing intake manifold	236
3.3	Removing and installing throttle valve module GX3	246
3.4	Cleaning throttle valve module	247
3.5	Removing and installing intake manifold flap valve N316	248
3.6	Checking intake manifold change-over function	248
4	Injectors	251
4.1	Assembly overview - fuel rail with injectors	251
4.2	Removing and installing fuel rail	255
4.3	Removing and installing injectors	257
4.4	Cleaning injectors	268
5	Senders and sensors	270
5.1	Removing and installing fuel pressure sender G247	270
5.2	Checking fuel pressure sender G247	271
5.3	Removing and installing air mass meter G70	276
5.4	Removing and installing intake manifold sender GX9	276
5.5	Removing and installing fuel pressure sender for low pressure G410	277
5.6	Removing and installing pressure differential sender for particulate filter G1037	277
6	High-pressure pump	279
6.1	Assembly overview - high-pressure pump	279
6.2	Removing and installing high-pressure pump	284
6.3	Removing and installing high-pressure pipe	289
7	Lambda probe	292
7.1	Assembly overview - Lambda probe	292
7.2	Removing and installing Lambda probe	292
8	Engine control unit	295
26 - Exhaust system		296
1	Exhaust pipes/silencers	296
1.1	Assembly overview - silencers	296
1.2	Separating exhaust pipes/silencers	296
1.3	Removing and installing silencers	296
1.4	Stress-free alignment of exhaust system	296
1.5	Checking exhaust system for leaks	296
1.6	Installation position of clamp	296
2	Emission control system	297
2.1	Assembly overview - emission control system	297
2.2	Removing and installing catalytic converter	301
2.3	Removing and installing particulate filter	304
3	Exhaust gas temperature regulation	309
3.1	Assembly overview - exhaust gas temperature regulation	309
3.2	Removing and installing parts of exhaust gas temperature regulation	313
4	Secondary air system	317
4.1	Assembly overview - secondary air system	317
4.2	Removing and installing secondary air pump motor V101	319
4.3	Removing and installing secondary air inlet valve N112	320
4.4	Removing and installing sender 1 for secondary air pressure G609	321
28 - Ignition system		322
1	Ignition system	322
1.1	Assembly overview - ignition system	322

1.2	Removing and installing ignition coils	324
1.3	Removing and installing knock sensor 1 G61	326
1.4	Removing and installing Hall senders	327
1.5	Removing and installing engine speed sender G28	328