

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Safety precautions when working on the cooling system	4
2.4 Safety precautions when working on vehicles with start/stop system	5
2.5 Safety precautions when working on the exhaust system	5
<b>3 Repair instructions</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair instructions	7
3.4 Performing adaptations after renewing a component	8
3.5 Cleaning engine	8
3.6 Bolts/nuts	8
3.7 Identification plates	9
3.8 Use of impact wrenches	9
3.9 Foreign material in engine	9
3.10 Contact corrosion	10
3.11 Routing and attachment of pipes, hoses and wiring	10
3.12 Installing radiators and condensers	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Separating engine and gearbox	27
1.3 Securing engine to engine and gearbox support	29
1.4 Installing engine	30
<b>2 Assembly mountings</b>	<b>35</b>
2.1 Assembly overview - assembly mountings	35
2.2 Supporting engine in installation position	38
2.3 Removing and installing engine mountings	40
2.4 Removing and installing gearbox mounting	41
2.5 Removing and installing pendulum support	44
2.6 Checking adjustment of assembly mountings	44
2.7 Adjusting assembly mountings	45
<b>3 Engine cover panel</b>	<b>48</b>
3.1 Removing and installing engine cover panel	48
<b>13 - Crankshaft group</b>	<b>49</b>
<b>1 Cylinder block (pulley end)</b>	<b>49</b>
1.1 Assembly overview - cylinder block (pulley end)	49
1.2 Assembly overview - sealing flange (pulley end)	52
1.3 Removing and installing poly V-belt	53
1.4 Removing and installing poly V-belt tensioner	55
1.5 Removing and installing vibration damper	56
1.6 Removing and installing bracket for ancillaries	56
1.7 Removing and installing engine support	58
1.8 Removing and installing sealing flange (pulley end)	59
<b>2 Cylinder block (gearbox end)</b>	<b>63</b>
2.1 Assembly overview - cylinder block (gearbox end)	63



2.2	Removing and installing flywheel	65
2.3	Renewing cylinder block cover (gearbox end)	67
2.4	Removing and installing sealing flange (gearbox end)	69
<b>3</b>	<b>Crankshaft</b>	<b>89</b>
3.1	Crankshaft dimensions	89
3.2	Measuring axial clearance of crankshaft	89
3.3	Renewing needle bearing in crankshaft	90
<b>4</b>	<b>Pistons and conrods</b>	<b>93</b>
4.1	Assembly overview - pistons and conrods	93
4.2	Removing and installing pistons	97
4.3	Measuring piston projection at TDC	98
4.4	Checking pistons and cylinder bores	100
4.5	Checking radial clearance of conrod bearings	102
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>104</b>
<b>1</b>	<b>Toothed belt drive</b>	<b>104</b>
1.1	Assembly overview - toothed belt guard	104
1.2	Assembly overview - toothed belt	104
1.3	Removing and installing toothed belt guard	106
1.4	Detaching toothed belt from camshaft	111
1.5	Removing and installing toothed belt	125
<b>2</b>	<b>Cylinder head</b>	<b>140</b>
2.1	Assembly overview - cylinder head	140
2.2	Assembly overview - cylinder head cover	144
2.3	Removing and installing cylinder head cover	146
2.4	Removing and installing seals for injectors	148
2.5	Removing and installing camshaft housing	149
2.6	Removing and installing cylinder head	155
2.7	Checking compression	165
<b>3</b>	<b>Valve gear</b>	<b>168</b>
3.1	Assembly overview - valve gear	168
3.2	Removing and installing camshaft oil seal	172
3.3	Removing and installing camshaft control valve 1 N205	175
3.4	Removing and installing camshaft adjuster	176
3.5	Removing and installing control valve from camshaft control valve 1 N205	179
3.6	Removing and installing valve stem oil seals	182
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>193</b>
4.1	Checking valve guides	193
4.2	Checking valves	194
4.3	Valve dimensions	194
<b>17</b>	<b>Lubrication</b>	<b>196</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>196</b>
1.1	Assembly overview - sump/oil pump	196
1.2	Removing and installing oil level and oil temperature sender G266	199
1.3	Removing and installing sump	200
1.4	Removing and installing oil pump	205
1.5	Engine oil	206
<b>2</b>	<b>Engine oil cooler</b>	<b>207</b>
<b>3</b>	<b>Oil filter/oil pressure switches</b>	<b>208</b>
3.1	Assembly overview - oil filter housing/oil pressure switch	208
3.2	Removing and installing oil filter housing	210
3.3	Removing and installing oil pressure switch F22	213
3.4	Removing and installing oil pressure switch for reduced oil pressure F378	215
3.5	Removing and installing valve for oil pressure control N428	216

3.6	Checking oil pressure	217
<b>19</b>	<b>Cooling</b>	<b>219</b>
1	<b>Cooling system/coolant</b>	<b>219</b>
1.1	Connection diagram - coolant hoses	219
1.2	Checking cooling system for leaks	220
1.3	Draining and filling cooling system without electric vacuum pump VAS 6096/2	224
1.4	Filling cooling system with electric vacuum pump VAS 6096/2	232
1.5	Checking filling quality of cooling system	240
1.6	Checking electric vacuum pump VAS 6096/2	242
1.7	Flushing cooling system	242
1.8	Flushing cooling system - quick reference guide	264
2	<b>Coolant pump/thermostat assembly</b>	<b>266</b>
2.1	Assembly overview - coolant pump/thermostat	266
2.2	Assembly overview - electric coolant pump	268
2.3	Assembly overview - coolant temperature senders	269
2.4	Removing and installing coolant pump	271
2.5	Removing and installing thermostat	272
2.6	Removing and installing coolant valve for cylinder head N489	274
2.7	Checking thermostat	275
2.8	Removing and installing coolant temperature sender G62	275
2.9	Removing and installing electric coolant pump	277
3	<b>Coolant pipes</b>	<b>282</b>
3.1	Assembly overview - coolant pipes	282
3.2	Removing and installing coolant pipes	284
4	<b>Radiators/radiator fans</b>	<b>301</b>
4.1	Assembly overview - radiators/radiator fans	301
4.2	Removing and installing radiator	304
4.3	Removing and installing radiator cowl	310
4.4	Removing and installing radiator fan V7	311
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>313</b>
1	<b>Turbocharger</b>	<b>313</b>
1.1	Assembly overview - turbocharger	313
1.2	Removing and installing turbocharger	316
1.3	Renewing vacuum unit for turbocharger	323
2	<b>Charge air system</b>	<b>329</b>
2.1	Assembly overview - charge air system	329
2.2	Assembly overview - hose connections for charge air system	331
2.3	Removing and installing charge pressure sender G31	332
2.4	Removing and installing charge air temperature sender	333
2.5	Checking charge air system for leaks	333
<b>23</b>	<b>Mixture preparation - injection</b>	<b>340</b>
1	<b>Injection system</b>	<b>340</b>
1.1	Overview of fitting locations - injection system	340
1.2	Overview - fuel system	348
1.3	Filling and bleeding fuel system	349
1.4	Checking fuel system for leaks	350
2	<b>Vacuum system</b>	<b>351</b>
2.1	Connection diagram - vacuum system	351
2.2	Checking vacuum system	352
3	<b>Air filter</b>	<b>353</b>
3.1	Assembly overview - air filter housing	353
3.2	Removing and installing air filter housing	355



<b>4</b>	<b>Intake manifold</b>	<b>357</b>
4.1	Assembly overview - intake manifold	357
4.2	Removing and installing throttle valve module J338	360
4.3	Removing and installing intake manifold	363
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>369</b>
5.1	Assembly overview - injectors	369
5.2	Assembly overview - high-pressure reservoir (rail)	371
5.3	Checking injectors	373
5.4	Performing adaption of correction values for injectors	373
5.5	Checking for injectors sticking open	374
5.6	Checking return flow rate of injectors with engine running	376
5.7	Checking return flow rate of injectors at starter cranking speed	380
5.8	Removing and installing injectors	381
5.9	Removing and installing high-pressure pipes	385
5.10	Removing and installing high-pressure reservoir (rail)	389
<b>6</b>	<b>High-pressure pump</b>	<b>391</b>
6.1	Assembly overview - high-pressure pump	391
6.2	Removing and installing high-pressure pump	392
<b>7</b>	<b>Senders and sensors</b>	<b>398</b>
7.1	Removing and installing fuel temperature sender G81	398
7.2	Removing and installing air mass meter G70	398
7.3	Checking fuel pressure regulating valve N276	400
7.4	Removing and installing fuel pressure regulating valve N276	402
7.5	Removing and installing fuel pressure sender G247	407
<b>8</b>	<b>Lambda probe</b>	<b>410</b>
8.1	Assembly overview - Lambda probe	410
8.2	Removing and installing Lambda probe	412
<b>9</b>	<b>Engine control unit</b>	<b>415</b>
9.1	Removing and installing engine control unit J623	415
<b>26</b>	<b>- Exhaust system</b>	<b>421</b>
<b>1</b>	<b>Exhaust pipes/silencer</b>	<b>421</b>
1.1	Assembly overview - silencer	421
1.2	Removing and installing front exhaust pipe	424
1.3	Removing and installing rear silencer	426
1.4	Stress-free alignment of exhaust system	426
1.5	Checking exhaust system for leaks	428
<b>2</b>	<b>Emission control system</b>	<b>429</b>
2.1	Assembly overview - emission control system	429
2.2	Removing and installing emission control module	433
2.3	Removing and installing pressure differential sender G505	442
2.4	Removing and installing exhaust gas pressure sensor 1 G450	443
2.5	Removing and installing exhaust flap control unit J883	445
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>447</b>
3.1	Assembly overview - exhaust gas temperature regulation	447
3.2	Removing and installing exhaust gas temperature sender	449
<b>4</b>	<b>Exhaust gas recirculation</b>	<b>455</b>
4.1	Assembly overview - exhaust gas recirculation system	455
4.2	Removing and installing exhaust gas recirculation control motor V338	458
4.3	Removing and installing exhaust gas recirculation control motor 2 V339	459
4.4	Removing and installing exhaust gas recirculation cooler	462
4.5	Checking exhaust gas recirculation cooler for leaks	466
<b>28</b>	<b>- Glow plug system</b>	<b>472</b>

<b>1</b>	<b>Glow plug system</b> .....	<b>472</b>
1.1	Assembly overview - glow plug system .....	472
1.2	Removing and installing glow plug .....	474
1.3	Removing and installing automatic glow period control unit J179 .....	478
1.4	Removing and installing Hall sender G40 .....	479
1.5	Removing and installing engine speed sender G28 .....	480