

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the fuel supply system	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	3
2.1 Rules for cleanliness	3
2.2 Test conditions	3
2.3 Bleeding fuel system	3
2.4 Contact corrosion	4
2.5 Routing and attachment of pipes, hoses and wiring	4
20 - Fuel supply system	5
1 Fuel tank	5
1.1 Exploded view - fuel tank	5
1.2 Draining fuel tank	12
1.3 Removing and installing fuel tank	14
2 Fuel delivery unit/fuel gauge senders	27
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	27
2.2 Removing and installing fuel delivery unit/fuel gauge senders	32
2.3 Removing and installing fuel gauge sender G	43
2.4 Removing and installing fuel gauge sender 2 G169	45
3 Plug-in connectors	49
3.1 Disconnecting plug-in connectors	49
4 Activated charcoal filter system	53
4.1 Connection diagram - activated charcoal filter system	53
4.2 Assembly overview - activated charcoal filter system	54
4.3 Removing and installing activated charcoal filter	58
4.4 Fuel tank leak detection	63
4.5 Checking fuel system for leaks - NAR, Korea and China versions	63
5 Accelerator mechanism	70
5.1 Assembly overview - accelerator pedal module	70
5.2 Removing and installing accelerator pedal module GX2	70
6 Fuel pump	72
6.1 Checking fuel system pressurisation pump G6	72
6.2 Removing and installing fuel pump control unit J538	84
6.3 Removing and installing suction-jet pump	86