

Contents

00	Technical data	1
1	Safety precautions	1
1.1	Safety precautions when working on the fuel system	1
1.2	Safety precautions when working on vehicles with start/stop system	2
1.3	Safety precautions when using testers and measuring instruments during a road test	3
1.4	Safety precautions when working on the SCR system	3
2	Repair instructions	5
2.1	Rules for cleanliness	5
2.2	Test conditions	5
2.3	Contact corrosion	5
20	Fuel supply system	7
1	Fuel tank	7
1.1	Exploded view - fuel tank	7
1.2	Routing and attachment of earth connection for electrostatic discharge	9
1.3	Draining fuel tank	10
1.4	Removing and installing fuel tank	12
1.5	Deactivating misfuelling prevention device	23
2	Fuel delivery unit/fuel gauge senders	24
2.1	Exploded view - fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	24
2.2	Exploded view - fuel delivery unit/fuel gauge senders, vehicles with four-wheel drive	26
2.3	Removing and installing fuel delivery unit/fuel gauge sender	27
2.4	Removing and installing fuel gauge sender G	32
2.5	Removing and installing fuel gauge sender 2 G169	33
2.6	Checking suction-jet pump	37
2.7	Removing and installing suction-jet pump	37
3	Plug-in connectors	44
3.1	Disconnecting plug-in connectors	44
4	Fuel filter	48
4.1	Exploded view - fuel filter	48
4.2	Removing and installing fuel filter	49
5	Fuel pump	51
5.1	Checking fuel system pressurisation pump G6	51
5.2	Removing and installing fuel pump control unit J538	57
6	Accelerator mechanism	60
6.1	Exploded view - accelerator pedal module	60
6.2	Removing and installing accelerator pedal module with accelerator position sender G79 / G185	61