

001 - Basic equipment	1-22
1. Basic equipment	1
2. Fuse holder A, Fuse holder B	2
3. Fuse holder B, Fuse holder C	3
4. Terminal 15 voltage supply relay, Fuse holder C, Heated rear window	4
5. Fuse holder C	5
6. Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit	6
7. Steering column electronics control unit	7
8. Control unit in dash panel insert	8
9. Onboard supply control unit	9
10. Onboard supply control unit, Data bus diagnostic interface	10
11. Light switch, Rain and light sensor, Airbag control unit, Onboard supply control unit, Front roof module	11
12. Centre switch module in dash panel, Glove compartment light switch, Engine sound generator button, Onboard supply control unit, Glove compartment light	12
13. Centre switch module in dash panel, Onboard supply control unit	13
14. Centre switch module in dash panel, Bonnet contact switch, Bonnet contact switch 2, Treble horn, Bass horn, Onboard supply control unit	14
15. Onboard supply control unit, Headlight washer system pump, Windscreen and rear window washer pump, Left washer jet heater element, Right washer jet heater element	15
16. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Onboard supply control unit	16
17. Onboard supply control unit, Tank filler flap locking motor	17
18. Onboard supply control unit, Rear lid lock unit, Rear lid central locking motor	18
19. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit	19
20. Ambient temperature sensor, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Driver door lock unit	20
21. Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb, Front passenger door lock unit	21
22. Brake pedal switch, Clutch position sender, Onboard supply control unit	22
002 - 2.0l petrol engine , CHHC,CNTC	23-51
1. 2.0l petrol engine , CHHC,CNTC	23
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Fuse holder C	24
3. Starter, Alternator	25
4. Suppression capacitor, Main relay, Engine/motor control unit	26
5. Brake pedal switch, Engine/motor control unit, Starter relay 1, Starter relay 2	27
6. Secondary air pump relay, Engine/motor control unit	28
7. Engine/motor control unit, Engine component power supply relay, Ignition coil 1 with output stage, Ignition coil 2 with output stage	29
8. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	30
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	31
10. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	32
11. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	33
12. Cam adjustment actuator 7, Cam adjustment actuator 8, Clutch position sender, Engine/motor control unit	34
13. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Coolant circulation pump	35
14. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	36
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Continued coolant circulation pump	37
16. Coolant temperature sender, Hall sender 3, Engine/motor control unit	38
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer, Engine/motor control unit	39
18. Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	40
19. Intake manifold sender, Engine speed sender, Intake manifold pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit, Actuator for engine temperature regulation	41
20. Accelerator pedal module, Knock sensor 1, Accelerator position sender 2, Gearbox neutral position sender. Engine/motor control unit	42

21. Throttle valve module, Charge pressure sender, Engine/motor control unit	43
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	44
23. Oil level and oil temperature sender, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	45
24. Engine/motor control unit, Control unit for fuel tank leak detection, Radiator fan	46
25. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	47
26. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	48
27. Engine/motor control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	49
28. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	50
29. Control unit in dash panel insert, Data bus diagnostic interface	51
003 - 2.0l diesel engine , CUNA	52-77
1. 2.0l diesel engine , CUNA	52
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Fuse holder C	53
3. Starter, Alternator	54
4. Suppression capacitor, Terminal 30 voltage supply relay, Engine/motor control unit	55
5. Brake light switch, High heat output relay, Engine/motor control unit	56
6. Engine/motor control unit, Starter relay 1, Starter relay 2	57
7. Automatic glow period control unit, Low heat output relay, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Auxiliary air heater element	58
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	59
9. Air mass meter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	60
10. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Charge pressure control solenoid valve	61
11. Engine/motor control unit, Heater element for crankcase breather, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	62
12. Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	63
13. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	64
14. Pressure differential sender, Engine/motor control unit, Exhaust flap control unit	65
15. Hall sender, Position sender for charge pressure positioner, Gearbox neutral position sender, Engine/motor control unit	66
16. Throttle valve module, Exhaust gas recirculation valve 2, Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Engine/motor control unit	67
17. Exhaust gas recirculation valve 1, Engine speed sender, Fuel pressure sender, Engine/motor control unit	68
18. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	69
19. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Lambda probe heater	70
20. Lambda probe 1 after catalytic converter, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	71
21. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit	72
22. Fuel gauge sender, Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	73
23. Charge pressure sender, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler, Engine/motor control unit	74
24. Water level sender, Engine/motor control unit	75
25. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	76
26. Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface	77
004 - Airbag systems for LHD vehicles , (L0L),(4UF)	78-90
1. Airbag systems for LHD vehicles , (L0L),(4UF)	78
2. Airbag control unit, Terminal 15 voltage supply relay, Fuse 3, Fuse holder C, Fuse 33 on fuse holder C	79
3. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Roof electronics control unit, Warning lamp for airbag deactivated on front passenger side, Diagnostic connection	80
4. Driver side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Driver side seat position sensor, Airbag control unit	81
5. Front passenger side belt switch. Seat occupied sensor. front passenger side. Front airbag crash	82

sensor for driver side, Front airbag crash sensor for front passenger side, Front passenger side seat position sensor, Airbag control unit	
6. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	83
7. Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	84
8. Centre crash sensor for pedestrian protection, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	85
9. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	86
10. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	87
11. Driver side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1	88
12. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1	89
13. Buzzer and gong, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	90
005 - Anti-lock brake system (ABS)	91-97
1. Anti-lock brake system (ABS)	91
2. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	92
3. Parking brake button, Button for TCS and electronic stabilisation program, Auto-hold button, Onboard supply control unit	93
4. ABS control unit, Front left ABS inlet valve	94
5. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit, ABS hydraulic pump	95
6. Rear right speed sensor, Rear left speed sensor, ABS control unit, Rear right ABS outlet valve, Left parking brake motor, Right parking brake motor	96
7. ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	97
006 - Garage door opener , (VC1),(VC2)	98-100
1. Garage door opener , (VC1),(VC2)	98
2. Terminal 15 voltage supply relay, Fuse 18 on fuse holder B, Fuse 34 on fuse holder C	99
3. Garage door operating unit, Garage door opener button 1, Garage door operation control unit	100
007 - All-wheel drive , (1X1)	101-103
1. All-wheel drive , (1X1)	101
2. All-wheel drive control unit, Fuse holder C	102
3. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface	103
008 - Automatic air conditioning system , (9AK)	104-117
1. Automatic air conditioning system , (9AK)	104
2. Terminal 15 voltage supply relay, Fuse holder C	105
3. Climatronic control unit, Data bus diagnostic interface	106
4. Climatronic control unit, Air conditioner compressor	107
5. Fresh air blower control unit, Climatronic control unit, Fresh air blower	108
6. Air quality sensor, Pressure sender for refrigerant circuit, Climatronic control unit	109
7. Sunlight penetration photosensor, Sunlight penetration photosensor 2, Left vent temperature sender, Right vent temperature sender, Climatronic control unit	110
8. Potentiometer for front right defroster and chest vent shut-off flap control motor, Potentiometer for front left defroster and chest vent shut-off flap control motor, Climatronic control unit, Control motor for left side window defroster flap, Control motor for right side window defroster flap	111
9. Heated rear window button, Defroster button, Climatronic control unit	112
10. Operating and display unit 2 for air conditioning system, Operating and display unit 3 for air conditioning system, Operating and display unit 4 for air conditioning system, Climatronic control unit	113
11. Operating and display unit 1 for air conditioning system, Operating and display unit 5 for air conditioning system, Climatronic control unit	114
12. Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	115
13. Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor	116
14. Potentiometer for defroster flap control motor, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Defroster flap control motor	117
009 - Air conditioning system with manual regulation . (9AC).(KH6)	118-128

1. Air conditioning system with manual regulation , (9AC),(KH6)	118
2. Terminal 15 voltage supply relay, Fuse holder C	119
3. Climatronic control unit, Data bus diagnostic interface	120
4. Climatronic control unit, Air conditioner compressor	121
5. Fresh air blower control unit, Climatronic control unit, Fresh air blower	122
6. Heated rear window button, Fresh air and air recirculation button, Pressure sender for refrigerant circuit, Climatronic control unit	123
7. Potentiometer for front right defroster and chest vent shut-off flap control motor, Potentiometer for front left defroster and chest vent shut-off flap control motor, Climatronic control unit, Control motor for left side window defroster flap, Control motor for right side window defroster flap	124
8. Operating and display unit 2 for air conditioning system, Operating and display unit 3 for air conditioning system, Operating and display unit 4 for air conditioning system, Climatronic control unit	125
9. Operating and display unit 1 for air conditioning system, Operating and display unit 5 for air conditioning system, Climatronic control unit	126
10. Potentiometer for temperature flap control motor, Evaporator output temperature sender, Potentiometer for air distribution flap control motor, Climatronic control unit, Temperature flap control motor, Air distribution flap control motor	127
11. Climatronic control unit, Air recirculation flap control motor	128
010 - Convenience system	129-149
1. Convenience system	129
2. Fuse holder C	130
3. Driver exterior door handle switch, Driver exterior door handle contact sensor, Driver door control unit	131
4. Driver door control unit, Driver side exterior mirror	132
5. Potentiometer for horizontal adjustment of driver side mirror, Driver door control unit, Driver side exterior mirror	133
6. Operating unit for window regulator in driver door, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	134
7. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver door control unit	135
8. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Driver side door warning lamp, Driver side entry light	136
9. Driver side central locking lock unit, Driver door control unit, Driver side window regulator motor	137
10. Front passenger exterior door handle switch, Front passenger exterior door handle contact sensor, Front passenger door control unit	138
11. Front passenger door control unit, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side	139
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Heated exterior mirror on passenger side	140
13. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit	141
14. Front passenger door control unit, Light for passenger side interior door handle illumination, Front passenger side door warning lamp, Passenger side entry light	142
15. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side window regulator motor	143
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit	144
17. Onboard supply control unit, Heated rear window, Rear window	145
18. Onboard supply control unit, Front left footwell illumination bulb, Light 1 for front centre console background lighting, Light 1 for contour lighting of multimedia system operating unit	146
19. Release button for rear lid lock cylinder, Onboard supply control unit, Rear lid lock unit	147
20. Centre switch module in dash panel, Adjustable rear spoiler switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	148
21. Onboard supply control unit, Rear spoiler	149
011 - LED headlights , (8IT)	150-163
1. LED headlights , (8IT)	150
2. Terminal 15 voltage supply relay, Fuse holder C	151
3. Headlight range control unit, Onboard supply control unit	152
4. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	153
5. Output module 1 for left LED headlight, Temperature sender 1 for left headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Current coding resistor 1 for left headlight	154
6. Output module 1 for left LED headlight. Temperature sender 2 for left headlight. Temperature	155

sender 3 for left headlight, Onboard supply control unit, Front left headlight, Left static cornering light	
7. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Front left headlight, Left headlight main beam bulb	156
8. Output module 2 for left LED headlight, Onboard supply control unit, Output module for left headlight, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor	157
9. Output module 2 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb	158
10. Output module 1 for right LED headlight, Temperature sender 1 for right headlight, Onboard supply control unit, Front right headlight, Right headlight dipped beam bulb	159
11. Output module 1 for right LED headlight, Temperature sender 2 for right headlight, Temperature sender 3 for right headlight, Onboard supply control unit, Front right headlight, Right static cornering light	160
12. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight, Front right headlight, Right headlight main beam bulb	161
13. Output module 2 for right LED headlight, Onboard supply control unit, Output module for right headlight, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control moto	162
14. Output module 2 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right side marker bulb	163
012 - Multifunction steering wheel , (2PU),(2PF)	164-168
1. Multifunction steering wheel , (2PU),(2PF)	164
2. Turn signal switch, Steering column electronics control unit, Airbag igniter on driver side, Fuse holder C	165
3. Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit	166
4. Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit, Steering column electronics control unit	167
5. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	168
013 - Fuse assignment	169-198
1. Fuse assignment	169
2. Battery, Airbag control unit, Battery monitor control unit, Data bus diagnostic interface, Battery isolation igniter, Wiring junction	170
3. Starter, Alternator, Voltage regulator, Fuse holder A, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Wiring junction, Radiator fan	171
4. Fuse holder B, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B, Fuse 21 on fuse holder B	172
5. Main relay, Terminal 30 voltage supply relay, Fuse holder B, Fuse 3 on fuse holder B	173
6. Fuse holder B, Fuse 4 on fuse holder B	174
7. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B	175
8. Fuse holder B, Fuse 7 on fuse holder B	176
9. Fuse holder B, Fuse 8 on fuse holder B	177
10. Fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	178
11. Starter relay 1, Starter relay 2, Fuse holder B, Fuse 13 on fuse holder B	179
12. Fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	180
13. Fuse holder B, Fuse 16 on fuse holder B	181
14. Secondary air pump relay, High heat output relay, Engine component power supply relay, Fuse holder B	182
15. Automatic glow period control unit, Low heat output relay, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B	183
16. Horn relay, Relay for reducing agent metering system, Fuse 1 on fuse holder C, Fuse 15 on fuse holder B, Fuse holder C	184
17. Fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C	185
18. Fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 9 on fuse holder C	186
19. Fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 31 on fuse holder C	187
20. Heated rear window relay, Fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C, Fuse 53 on fuse holder C	188
21. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C, Fuse 40 on fuse holder C	189

22. Fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	190
23. Air quality sensor, Fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Diagnostic connection	191
24. Fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	192
25. Fuse holder C, Fuse 3 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C	193
26. Fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	194
27. Fuse holder C, Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C, Fuse 28 on fuse holder C	195
28. Fuse holder C, Fuse 29 on fuse holder C, Fuse 43 on fuse holder C	196
29. Relay for neck heating, Fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Front passenger seat adjustment thermal fuse 1, Fuse 46 on fuse holder C	197
30. Heated rear window relay, Fuse holder D, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse holder F, Fuse 1 in fuse holder F, Fuse 2 in fuse holder F	198
014 - Automatic adaptive suspension, adjustable dampers , (1BL),(1BQ),(2MV)	199-203
1. Automatic adaptive suspension, adjustable dampers , (1BL),(1BQ),(2MV)	199
2. Electronically controlled damping control unit, Data bus diagnostic interface, Fuse holder C	200
3. Centre switch module in dash panel, Driving mode selection button, Electronically controlled damping control unit, Onboard supply control unit, Driving mode selection warning lamp	201
4. Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	202
5. Rear left vehicle level sender, Rear right vehicle level sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	203
015 - Parking aid (PDC) , (7X5)	204-212
1. Parking aid (PDC) , (7X5)	204
2. Terminal 15 voltage supply relay, Onboard supply control unit, Park assist steering control unit, Fuse holder C	205
3. Centre switch module in dash panel, Parking aid button, Park assist steering button, Data bus diagnostic interface, Park assist steering control unit, Parking aid warning lamp, Warning light for park assist steering	206
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Park assist steering control unit	207
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Park assist steering control unit	208
6. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Rear parking aid warning buzzer, Park assist steering control unit	209
7. Rear left parking aid sender, Rear centre left parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	210
8. Rear centre right parking aid sender, Rear right parking aid sender, Park assist steering control unit	211
9. Rear left parking aid sender, Rear centre left parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	212
016 - Parking aid (PDC) , (7X1),(7X2)	213-219
1. Parking aid (PDC) , (7X1),(7X2)	213
2. Terminal 15 voltage supply relay, Parking aid control unit, Onboard supply control unit, Fuse holder C	214
3. Centre switch module in dash panel, Parking aid button, Parking aid control unit, Data bus diagnostic interface, Parking aid warning lamp	215
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	216
5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	217
6. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Parking aid control unit	218
7. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Parking aid control unit	219
017 - Data bus diagnostic interface and diagnostic connector	220-234
1. Data bus diagnostic interface and diagnostic connector	220
2. Terminal 15 voltage supply relay, Fuse holder C, Fuse 3	221
3. Data bus diagnostic interface	222
4. Data bus diagnostic interface. Connection 1 (powertrain CAN bus. high). in main wiring harness.	223

Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (powertrain CAN bus, high), in engine wiring harness, Connection 1 (powertrain CAN bus, low), in engine wiring harness	
5. Data bus diagnostic interface, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness	224
6. Data bus diagnostic interface, Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 2 (running gear/dash panel insert CAN bus, low), in main wiring harness	225
7. Data bus diagnostic interface, Diagnostic connection	226
8. Data bus diagnostic interface, Connection 1 (infotainment CAN bus, high), in main wiring harness, Connection 1 (infotainment CAN bus, low), in main wiring harness	227
9. Data bus diagnostic interface, Connection 1 (CAN bus extended high), in main wiring harness, Connection 1 (CAN bus extended low), in main wiring harness	228
10. Connection 1 (CAN bus extended high), in main wiring harness, Connection 1 (CAN bus extended low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	229
11. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	230
12. Connection 1 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness, Connection (high bus), in engine compartment wiring harness, Connection (low bus), in engine compartment wiring harness	231
13. Wiper motor control unit, Onboard supply control unit, Connection 3 (LIN bus) in main wiring harness	232
14. Onboard supply control unit, Connection 1 (LIN bus) in main wiring harness, Connection 2 (LIN bus) in main wiring harness	233
15. Connection 5 (LIN bus) in main wiring harness, Connection 6 in engine compartment wiring harness	234
018 - Reversing camera (Rear Assist) , (KA2)	235-237
1. Reversing camera (Rear Assist) , (KA2)	235
2. Reversing camera system control unit, Reversing camera, Fuse holder C	236
3. Data bus diagnostic interface, Reversing camera system control unit	237
019 - Interface for special functions , (7G9)	238-239
1. Interface for special functions , (7G9)	238
2. Data bus diagnostic interface, Interface control unit for vehicle location system, Fuse holder C	239
020 - Lane change assist , (7Y1)	240-243
1. Lane change assist , (7Y1)	240
2. Terminal 15 voltage supply relay, Fuse holder C	241
3. Data bus diagnostic interface, Lane change assist control unit	242
4. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	243
021 - Entry and start authorisation	244-250
1. Entry and start authorisation	244
2. Fuse 2, Fuse holder C	245
3. Data bus diagnostic interface, Control unit for electronic steering column lock	246
4. Entry and start authorisation button, Entry and start authorisation control unit, Onboard supply control unit	247
5. Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	248
6. Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit	249
7. Immobiliser reader coil, Control unit in dash panel insert	250
022 - LED matrix beam headlights , (8G4)	251-266
1. LED matrix beam headlights , (8G4)	251
2. Terminal 15 voltage supply relay, Fuse holder C, Fuse 3	252
3. Headlight range control unit, Onboard supply control unit	253
4. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	254
5. Output module 1 for left LED headlight, Temperature sender 1 for left headlight, Temperature sender 2 for left headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Left static cornering light	255
6. Output module 1 for left LED headlight, Output module for left matrix headlight, Onboard supply control unit, Output module for left headlight, Front left headlight, Left headlight range control motor	256
7. Output module for left matrix headlight, Onboard supply control unit, Front left headlight, Left headlight fan	257
8. Output module for left matrix headlight, Onboard supply control unit, Front left headlight	258
9. Output module 2 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light. Front left headlight	259

10. Output module 2 for left LED headlight, Onboard supply control unit, Front left headlight, Front left turn signal bulb	260
11. Output module 1 for right LED headlight, Temperature sender 1 for right headlight, Temperature sender 2 for right headlight, Onboard supply control unit, Front right headlight, Right headlight dipped beam bulb, Right static cornering light	261
12. Output module 1 for right LED headlight, Output module for right matrix headlight, Onboard supply control unit, Output module for right headlight, Front right headlight, Right headlight range control motor	262
13. Output module for right matrix headlight, Onboard supply control unit, Front right headlight, Right headlight fan	263
14. Output module for right matrix headlight, Onboard supply control unit, Front right headlight	264
15. Output module 2 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight	265
16. Output module 2 for right LED headlight, Onboard supply control unit, Front right headlight, Front right turn signal bulb	266
023 - Gas discharge headlights with automatic headlight range control , (8IH)	267-273
1. Gas discharge headlights with automatic headlight range control , (8IH)	267
2. Terminal 15 voltage supply relay, Fuse 3, Fuse holder C	268
3. Headlight range control unit, Onboard supply control unit	269
4. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	270
5. Onboard supply control unit, Front left headlight, Left dip beam screen motor	271
6. Onboard supply control unit, Front left headlight, Front right headlight, Front right side marker bulb, Left headlight range control motor, Right headlight range control motor	272
7. Onboard supply control unit, Front right headlight, Right dip beam screen motor	273
024 - Dual clutch gearbox 0D9 , (0ES)	274-279
1. Dual clutch gearbox 0D9 , (0ES)	274
2. Mechatronic unit for dual clutch gearbox, Fuse 3	275
3. Selector lever, Gear selector movement sensor 1, Mechatronic unit for dual clutch gearbox, Solenoid valve 5, Valve 1 in gear train half 1	276
4. Selector lever, Selector lever locked in position P switch, Gearbox input speed sender 2, Gearbox input speed sender 1, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve, Selector lever position display	277
5. Gearbox oil temperature sender, Automatic gearbox hydraulic pressure sender 1, Automatic gearbox hydraulic pressure sender 2, Temperature sender in control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	278
6. Control unit in dash panel insert, Data bus diagnostic interface	279
025 - Seat heating , (4A3)	280-285
1. Seat heating , (4A3)	280
2. Front left seat temperature sender, Onboard supply control unit, Fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat	281
3. Onboard supply control unit, Heated seat extension for driver seat, Heated seat extension for front passenger seat, Left bolster heater for driver seat, Right bolster heater for driver seat, Left bolster heater for front passenger seat, Right bolster heater for front passenger seat	282
4. Onboard supply control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	283
5. Onboard supply control unit, Data bus diagnostic interface	284
6. Operating and display unit 1 for air conditioning system	285
026 - Adjustable driver and front passenger seats , (3L5)	286-291
1. Adjustable driver and front passenger seats , (3L5)	286
2. Driver seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C	287
3. Driver seat adjustment operating unit, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	288
4. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	289
5. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	290
6. Front passenger seat adjustment operating unit	291
027 - Adjustable lumbar support with no electric adjustable seat , (7P1),(3L3)	292-294
1. Adjustable lumbar support with no electric adjustable seat , (7P1),(3L3)	292
2. Driver seat lumbar support adjustment switch, Fuse 2, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	293
3. Front passenger seat lumbar support adjustment switch. Front passenger seat lumbar support	294

longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	
028 - MMI high with navigation system , (I8H)	295-312
1. MMI high with navigation system , (I8H)	295
2. Control unit 1 for information electronics, Fuse 3, Fuse holder C	296
3. Reversing camera system control unit, Control unit 1 for information electronics, Microphone unit in front roof module, Connection for external audio sources	297
4. Chip card reader control unit, Control unit 1 for information electronics, Connection for external audio sources	298
5. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial	299
6. Control unit 1 for information electronics, USB hub	300
7. Control unit 1 for information electronics, USB hub	301
8. Multimedia system operating unit, Control unit 1 for information electronics	302
9. Driver side volume regulator, Multimedia system operating unit, Data bus diagnostic interface, Control unit 1 for information electronics, Telephone bracket	303
10. Control unit 1 for information electronics, Telephone aerial, Aerial amplifier for mobile telephone, Telephone bracket	304
11. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	305
12. Control unit 1 for information electronics, Roof aerial, LTE aerial 1	306
13. Control unit 1 for information electronics, Aerial amplifier 4, Roof aerial	307
14. Control unit 1 for information electronics, Aerial amplifier 2	308
15. Control unit 1 for information electronics, Aerial amplifier 2	309
16. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3	310
17. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	311
18. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Centre loudspeaker	312
029 - MMI with radio , (I8E)	313-328
1. MMI with radio , (I8E)	313
2. Control unit 1 for information electronics, Fuse 3, Fuse holder C	314
3. Reversing camera system control unit, Control unit 1 for information electronics, Microphone unit in front roof module, Connection for external audio sources	315
4. Control unit 1 for information electronics, Connection for external audio sources	316
5. Control unit 1 for information electronics, USB hub	317
6. Control unit 1 for information electronics, USB hub	318
7. Multimedia system operating unit, Control unit 1 for information electronics	319
8. Driver side volume regulator, Multimedia system operating unit, Data bus diagnostic interface, Control unit 1 for information electronics, Telephone bracket	320
9. Control unit 1 for information electronics, Telephone aerial, Aerial amplifier for mobile telephone, Telephone bracket	321
10. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	322
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Centre loudspeaker	323
12. Control unit 1 for information electronics, GPS aerial, Roof aerial	324
13. Control unit 1 for information electronics, Aerial amplifier 4, Roof aerial	325
14. Control unit 1 for information electronics, Aerial amplifier 2	326
15. Control unit 1 for information electronics, Aerial amplifier 2	327
16. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3	328
030 - Radio	329-335
1. Radio	329
2. Control unit 1 for information electronics, Connection for external audio sources, Fuse holder C, Fuse 3	330
3. Multimedia system operating unit, Control unit 1 for information electronics	331
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	332
5. Data bus diagnostic interface, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	333
6. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 4	334
7. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2	335
031 - Bang & Olufsen sound system , (9VS)	336-340
1. Bang & Olufsen sound system , (9VS)	336
2. Digital sound package control unit, Telephone microphone, Microphone unit in front roof module, Fuse 3, Fuse holder C	337
3. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Internal microphone, Microphone unit in	338

front roof module	
4. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2	339
5. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	340
032 - Power operated convertible roof, electric windbreak, heated rear window	341-347
1. Power operated convertible roof, electric windbreak, heated rear window	341
2. Heated rear window relay, Fuse 2 on fuse holder D, Fuse 2 in fuse holder F, Fuse 3	342
3. Convertible roof stowed switch, Convertible roof front switch, Convertible roof actuation control unit, Convertible roof lock motor	343
4. Convertible roof latch open switch, Convertible roof actuation control unit, Heated rear window	344
5. Front latch switch for convertible roof, Convertible roof locking readiness switch, Convertible roof actuation control unit, Convertible roof actuation motor, Glove compartment locking motor, Convertible roof actuation motor 2	345
6. Convertible roof actuation button, Cabriolet windbreak switch, Convertible roof actuation control unit, Cabriolet windbreak motor	346
7. Convertible roof actuation control unit, Data bus diagnostic interface	347
033 - Tail light clusters with LEDs , (8SK),(8SP),(8SC)	348-352
1. Tail light clusters with LEDs , (8SK),(8SP),(8SC)	348
2. Onboard supply control unit, Fuse 3, Fuse holder C	349
3. Onboard supply control unit	350
4. Onboard supply control unit, Left tail light cluster	351
5. Onboard supply control unit, Right tail light cluster	352
034 - TV tuner , (QU1),(QV1)	353-356
1. TV tuner , (QU1),(QV1)	353
2. TV tuner, Fuse holder C	354
3. Aerial amplifier, TV tuner, Aerial amplifier 2	355
4. TV tuner, Aerial amplifier 2, Aerial amplifier 4	356
035 - Front camera for driver assist systems , (QK1)	357-359
1. Front camera for driver assist systems , (QK1)	357
2. Terminal 15 voltage supply relay, Front camera for driver assist systems, Fuse holder C	358
3. Front camera for driver assist systems, Coupling point for roof, centre, Windscreen heater for front sensors	359
036 - Neck heating , (9K1)	360-363
1. Neck heating , (9K1)	360
2. Terminal 15 voltage supply relay, Relay for neck heating, Fuse holder C	361
3. Control unit for left neck heating, Control unit for right neck heating, Blower for left neck heating, Blower for right neck heating	362
4. Climatronic control unit, Data bus diagnostic interface	363
037 - Infotainment MOST bus	364-367
1. Infotainment MOST bus	364
2. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner	365
3. Control unit in dash panel insert, Control unit 1 for information electronics, TV tuner	366
4. Digital sound package control unit, Control unit 1 for information electronics, TV tuner	367
038 - Adjustable lumbar support with electric adjustable seat , (3PK)	368-374
1. Adjustable lumbar support with electric adjustable seat , (3PK)	368
2. Front passenger seat adjustment thermal fuse 1, Fuse holder C	369
3. Driver seat adjustment operating unit	370
4. Driver seat adjustment operating unit, Switch module for driver seat, Control unit for driver multicontour seat	371
5. Front passenger seat adjustment operating unit	372
6. Front passenger seat adjustment operating unit, Control unit for front passenger multicontour seat	373
7. Switch module for front passenger seat, Control unit for front passenger multicontour seat	374
039 - Electromechanical steering	375-377
1. Electromechanical steering	375
2. Steering angle sender, Power steering control unit, Electromechanical power steering motor	376
3. Control unit in dash panel insert, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Electromechanical power steering warning lamp	377
040 - Automatic anti-dazzle interior mirror	378-380
1. Automatic anti-dazzle interior mirror	378
2. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse 3, Fuse holder C, Automatic anti-dazzle interior mirror	379
3. Driver door control unit, Front passenger door control unit, Data bus diagnostic interface, Automatic anti-dazzle interior mirror	380

041 - Cigarette lighter and 12 V sockets	381-383
1. Cigarette lighter and 12 V sockets	381
2. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	382
3. Cigarette lighter, 12 V socket, 12 V socket 2	383
042 - Airbag systems (US equipment) , (4UB)	384-394
1. Airbag systems (US equipment) , (4UB)	384
2. Airbag control unit, Terminal 15 voltage supply relay, Fuse holder C, Fuse 33 on fuse holder C, Fuse 3	385
3. Airbag control unit, Steering column electronics control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Diagnostic connection, Front roof module	386
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	387
5. Front passenger side belt switch, Seat occupied sensor, front passenger side, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit, Heated seat cushion for front passenger seat	388
6. Airbag control unit, Seat occupied recognition control unit	389
7. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter, Front passenger side knee airbag igniter	390
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	391
9. Airbag control unit, Front passenger airbag unit	392
10. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Data bus diagnostic interface, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter	393
11. Buzzer and gong, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	394
043 - Mobile telephone , (9ZE),(9ZV),(9ZX)	395-402
1. Mobile telephone , (9ZE),(9ZV),(9ZX)	395
2. Telephone bracket, Fuse 3, Fuse holder C	396
3. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Roof aerial, LTE aerial 2	397
4. Control unit 1 for information electronics, Telephone aerial, LTE aerial 1, LTE aerial 2	398
5. Multimedia system operating unit, Control unit 1 for information electronics	399
6. Data bus diagnostic interface, Control unit 1 for information electronics	400
7. Control unit for seat belt microphone, Microphone unit in front roof module	401
8. Control unit for seat belt microphone, Microphone 1 on driver side, Microphone 1 on front passenger side	402
044 - Tail light clusters with LEDs, only models with US equipment , (8SP),(8SC)	403-407
1. Tail light clusters with LEDs, only models with US equipment , (8SP),(8SC)	403
2. Onboard supply control unit, Battery isolation igniter, Fuse holder C	404
3. Onboard supply control unit	405
4. Onboard supply control unit, Left tail light cluster	406
5. Onboard supply control unit, Right tail light cluster	407
045 - 1.8l petrol engine , CJSA,CJSB	408-435
1. 1.8l petrol engine , CJSA,CJSB	408
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Fuse holder C	409
3. Starter, Alternator	410
4. Main relay	411
5. Engine component power supply relay, Starter relay 1, Starter relay 2	412
6. Suppression capacitor, Engine/motor control unit	413
7. Brake light switch, Engine/motor control unit	414
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	415
9. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	416
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	417
11. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	418
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit	419
13. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Clutch position sender, Engine/motor control unit	420
14. Engine/motor control unit. Coolant shut-off valve. Coolant valve for gearbox. Coolant	421

circulation pump	
15. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	422
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Continued coolant circulation pump	423
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer, Engine/motor control unit	424
18. Hall sender, Fuel pressure sender, Engine/motor control unit	425
19. Hall sender 3, Engine/motor control unit, Charge pressure positioner	426
20. Engine speed sender, Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	427
21. Throttle valve module, Coolant temperature sender, Engine/motor control unit	428
22. Accelerator pedal module, Charge pressure sender, Accelerator position sender 2, Engine/motor control unit	429
23. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Engine/motor control unit	430
24. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	431
25. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	432
26. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	433
27. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	434
28. Control unit in dash panel insert, Data bus diagnostic interface	435
046 - 2.0l petrol engine , CJXF,CJXG,CYFB,DLRA,DNUF	436-470
1. 2.0l petrol engine , CJXF,CJXG,CYFB,DLRA,DNUF	436
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Fuse holder C	437
3. Starter, Alternator	438
4. Main relay	439
5. Starter relay 1, Starter relay 2	440
6. Suppression capacitor, Engine/motor control unit, Engine component power supply relay	441
7. Brake pedal switch, Engine/motor control unit	442
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	443
9. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	444
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	445
11. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	446
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit	447
13. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Clutch position sender, Engine/motor control unit	448
14. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Coolant circulation pump	449
15. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	450
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Continued coolant circulation pump	451
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer, Engine/motor control unit	452
18. Hall sender, Fuel pressure sender, Engine/motor control unit	453
19. Coolant temperature sender, Hall sender 3, Engine/motor control unit	454
20. Engine speed sender, Fuel pressure sender for low pressure, Exhaust gas pressure sensor 1, Engine/motor control unit	455
21. Engine/motor control unit, Charge pressure positioner	456
22. Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	457
23. Throttle valve module, Engine/motor control unit	458
24. Accelerator pedal module, Knock sensor 1, Accelerator position sender 2, Engine/motor control unit	459
25. Lambda probe 1 before catalytic converter, Engine/motor control unit	460
26. Lambda probe 1 after catalytic converter, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	461
27. Charge pressure sender, Engine/motor control unit	462
28. Exhaust gas temperature sender 3. Exhaust gas temperature sender 4. Gearbox neutral position	463

sender, Engine/motor control unit	
29. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	464
30. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	465
31. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	466
32. Fuel tank leak detection module, Engine/motor control unit, Control unit for fuel tank leak detection	467
33. Engine/motor control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	468
34. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	469
35. Control unit in dash panel insert, Data bus diagnostic interface	470
047 - Tyre Pressure Monitoring System , (7K1),(7K6),(7K9)	471-472
1. Tyre Pressure Monitoring System , (7K1),(7K6),(7K9)	471
2. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit	472
048 - 2.5l petrol engine , DAZA	473-496
1. 2.5l petrol engine , DAZA	473
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder C	474
3. Starter, Alternator, Main relay, Fuse holder B	475
4. Fuse holder B	476
5. Suppression capacitor, Starter relay 1, Starter relay 2, Fuse holder B	477
6. Engine component power supply relay, Fuse holder B	478
7. Engine/motor control unit	479
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	480
9. Engine/motor control unit, Ignition coil 5 with output stage, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5, Spark plug 5, Coupling point on engine, top	481
10. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	482
11. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Intake manifold flap valve, Switch valve for mechanical coolant pump	483
12. Engine/motor control unit, Exhaust cam actuator for cylinder 1, Exhaust cam actuator for cylinder 2, Exhaust cam actuator for cylinder 3, Exhaust cam actuator for cylinder 4	484
13. Engine speed sender, Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator for cylinder 5	485
14. Intake manifold sender, Charge pressure sender, Hall sender, Coolant temperature sender, Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit	486
15. Oil pressure sender, Knock sensor 1, Knock sensor 2, Exhaust gas temperature sender 1, Engine/motor control unit	487
16. Intermediate shaft speed sender, Engine/motor control unit	488
17. Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Coolant shut-off valve, Turbocharger air recirculation valve, Valve for oil pressure control, Crankcase breather valve, Continued coolant circulation pump	489
18. Accelerator pedal module, Throttle valve module, Engine/motor control unit	490
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	491
20. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	492
21. Engine/motor control unit, Control unit for fuel tank leak detection	493
22. Brake pedal switch, Engine/motor control unit	494
23. Fuel pump control unit, Engine/motor control unit	495
24. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	496
049 - 7-speed dual clutch gearbox 0BH (S tronic) , DAZA,(0EX)	497-500
1. 7-speed dual clutch gearbox 0BH (S tronic) , DAZA,(0EX)	497
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	498
3. Gearbox oil temperature sender, Clutch temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2	499
4. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve. Main pressure valve	500

050 - Dual clutch gearbox 0CW , (0EG)	501-505
1. Dual clutch gearbox 0CW , (0EG)	501
2. Gearbox input speed sender 3, Mechatronic unit for dual clutch gearbox, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 1 in gear train half 2	502
3. Gearbox hydraulic pressure sender, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Temperature sender in control unit, Gearbox input speed sender 2, Clutch travel sender 1, Clutch travel sender 2, Gear ox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 2 in gear train half 2, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Hydraulic pump motor	503
4. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	504
5. Data bus diagnostic interface	505
051 - 7-speed dual clutch gearbox 0DE (S tronic) , (0IJ)	506-510
1. 7-speed dual clutch gearbox 0DE (S tronic) , (0IJ)	506
2. Gearbox oil temperature sender, Clutch temperature sender, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2	507
3. Gearbox input speed sender, Gear selector movement sensor 1, Gear selector movement sensor 3, Clutch travel sender 1, Clutch travel sender 2, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Cooling oil valve	508
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	509
5. Data bus diagnostic interface, Auxiliary hydraulic pump 1 for gearbox oil	510
052 - 2.0l diesel engine , CUNA	511-533
1. 2.0l diesel engine , CUNA	511
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder C	512
3. Starter, Alternator, Charge air cooling pump	513
4. Suppression capacitor, Terminal 30 voltage supply relay	514
5. High heat output relay, Starter relay 1	515
6. Automatic glow period control unit, Starter relay 2	516
7. Automatic glow period control unit, Low heat output relay, Engine/motor control unit, Auxiliary air heater element	517
8. Engine/motor control unit	518
9. Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	519
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	520
11. Accelerator pedal module, Air mass meter, Engine/motor control unit, Heater element for crankcase breather	521
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	522
13. Oil level and oil temperature sender, Pressure differential sender, Engine/motor control unit, Auxiliary pump for heating	523
14. Exhaust gas temperature sender 2, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	524
15. Brake light switch, Clutch position sender, Exhaust gas temperature sender 3, Engine/motor control unit	525
16. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	526
17. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Fuel temperature sender, Engine/motor control unit	527
18. Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	528
19. Lambda probe 1 before catalytic converter, Exhaust gas temperature sender 1, Pressure sender 2 for exhaust gas recirculation, Engine/motor control unit	529
20. Lambda probe 1 after catalytic converter, Engine/motor control unit	530
21. Radiator fan control unit, Engine/motor control unit, Radiator fan	531
22. Engine/motor control unit	532
23. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	533
053 - Multifunction steering wheel , (2ZC)	534-539
1. Multifunction steering wheel , (2ZC)	534
2. Steering column electronics control unit, Fuse holder C	535
3. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	536
4. Multifunction buttons on left in steering wheel. Tiptronic switch (shift down). Steering wheel.	537

Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit	538
6. Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	539
054 - 2.0l petrol engine , CHHC,CNTC	540-569
1. 2.0l petrol engine , CHHC,CNTC	540
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Fuse holder C	541
3. Starter, Alternator with voltage regulator, Battery isolation igniter	542
4. Suppression capacitor, Main relay	543
5. Starter relay 1, Starter relay 2	544
6. Secondary air pump relay	545
7. Engine/motor control unit, Engine component power supply relay	546
8. Brake pedal switch, Engine/motor control unit	547
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	548
10. Engine/motor control unit, Ignition coil 4 with output stage	549
11. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Coolant circulation pump	550
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	551
13. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	552
14. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit	553
15. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Clutch position sender, Engine/motor control unit	554
16. Engine/motor control unit, Secondary air inlet valve, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	555
17. Engine speed sender, Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	556
18. Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	557
19. Intake manifold sender, Knock sensor 1, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit, Actuator for engine temperature regulation	558
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Hall sender, Intake manifold flap potentiometer, Engine/motor control unit	559
21. Accelerator pedal module, Accelerator position sender 2, Fuel pressure sender, Gearbox neutral position sender, Engine/motor control unit	560
22. Charge pressure sender, Engine/motor control unit	561
23. Throttle valve module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	562
24. Radiator outlet coolant temperature sender, Engine/motor control unit, Control unit for fuel tank leak detection	563
25. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	564
26. Engine/motor control unit, Radiator fan	565
27. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump	566
28. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound, Actuator for structure-borne sound	567
29. Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	568
30. Control unit in dash panel insert	569
055 - 2.0l petrol engine , DKTB	570-595
1. 2.0l petrol engine , DKTB	570
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter, Fuse holder B	571
3. Alternator, Suppression capacitor, Fuse holder B	572
4. Main relay, Fuse holder B	573
5. Engine component power supply relay, Starter relay 1, Starter relay 2, Fuse holder B	574
6. Terminal 15 voltage supply relay, Fuse holder C	575
7. Engine/motor control unit	576
8. Accelerator pedal module, Engine/motor control unit	577
9. Oil level and oil temperature sender, Engine/motor control unit	578
10. Engine/motor control unit. Ignition coil 1 with output stage. Ignition coil 2 with output stage.	579

Ignition coil 3 with output stage, Ignition coil 4 with output stage	
11. Clutch position sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	580
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	581
13. Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	582
14. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Continued coolant circulation pump	583
15. Engine speed sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	584
16. Intake manifold sender, Knock sensor 1, Coolant temperature sender, Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit	585
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	586
18. Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Gearbox neutral position sender, Engine/motor control unit	587
19. Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	588
20. Throttle valve module, Engine/motor control unit, Coolant circulation pump	589
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	590
22. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Radiator fan	591
23. Brake light switch, Onboard supply control unit, Engine/motor control unit	592
24. Fuel delivery unit, Fuel pump control unit	593
25. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound, Actuator for structure-borne sound	594
26. Control unit in dash panel insert, Data bus diagnostic interface	595
056 - 2.0l petrol engine , DKZB	596-622
1. 2.0l petrol engine , DKZB	596
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter, Fuse holder B	597
3. Alternator, Suppression capacitor, Fuse holder B	598
4. Main relay, Fuse holder B	599
5. Engine component power supply relay, Starter relay 1, Fuse holder B	600
6. Terminal 15 voltage supply relay, Fuse holder C	601
7. Engine/motor control unit	602
8. Accelerator pedal module, Engine/motor control unit	603
9. Oil level and oil temperature sender, Engine/motor control unit	604
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	605
11. Clutch position sender, ABS control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	606
12. Cam adjustment actuator 1, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	607
13. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	608
14. Engine/motor control unit, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	609
15. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	610
16. Engine speed sender, Knock sensor 1, Hall sender 3, Engine/motor control unit, Actuator for engine temperature regulation	611
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	612
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit	613
19. Air mass meter, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Gearbox neutral position sender, Engine/motor control unit	614
20. Charge pressure sender, Engine/motor control unit	615
21. Throttle valve module, Engine/motor control unit	616
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	617
23. Entry and start authorisation control unit. Steering column electronics control unit.	618

Engine/motor control unit, Radiator fan	
24. Brake light switch, Onboard supply control unit, Engine/motor control unit	619
25. Fuel delivery unit, Fuel pump control unit	620
26. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound, Actuator for structure-borne sound	621
27. Control unit in dash panel insert, Data bus diagnostic interface	622
057 - 2.0l petrol engine , DHHA	623-649
1. 2.0l petrol engine , DHHA	623
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder B	624
3. Starter, Alternator, Fuse holder B	625
4. Main relay, Fuse holder B	626
5. Secondary air pump relay, Starter relay 1, Starter relay 2, Fuse holder B, Secondary air pump motor	627
6. Suppression capacitor, Engine component power supply relay, Fuse holder B, Fuse holder C	628
7. Terminal 15 voltage supply relay, Engine/motor control unit, Fuse holder C	629
8. Oil level and oil temperature sender, Engine/motor control unit	630
9. Engine/motor control unit	631
10. Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox, Coolant circulation pump	632
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	633
12. Cam adjustment actuator 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	634
13. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	635
14. Engine/motor control unit, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	636
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	637
16. Engine speed sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	638
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold sender, Hall sender 3, Engine/motor control unit	639
18. Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	640
19. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Sender 1 for secondary air pressure, Engine/motor control unit	641
20. Throttle valve module, Engine/motor control unit, Radiator fan	642
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	643
22. Brake pedal switch, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	644
23. Fuel tank leak detection module, Engine/motor control unit	645
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	646
25. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	647
26. Control unit for structure-borne sound, Actuator for structure-borne sound	648
27. Control unit in dash panel insert	649
058 - Fuse assignment	650-679
1. Fuse assignment	650
2. Battery, Airbag control unit, Battery monitor control unit, Data bus diagnostic interface, Battery isolation igniter, Wiring junction	651
3. Starter, Alternator, Voltage regulator, Fuse holder A, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Wiring junction, Radiator fan	652
4. Fuse holder B, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B, Fuse 21 on fuse holder B	653
5. Main relay, Terminal 30 voltage supply relay, Fuse holder B, Fuse 3 on fuse holder B	654
6. Fuse holder B, Fuse 4 on fuse holder B	655
7. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B	656
8. Fuse holder B, Fuse 7 on fuse holder B	657
9. Fuse holder B, Fuse 8 on fuse holder B	658
10. Fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	659
11. Starter relay 1, Starter relay 2, Fuse holder B, Fuse 13 on fuse holder B	660
12. Fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	661
13. Fuse holder B. Fuse 16 on fuse holder B	662

14. Secondary air pump relay, High heat output relay, Engine component power supply relay, Fuse holder B	663
15. Automatic glow period control unit, Low heat output relay, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B	664
16. Horn relay, Relay for reducing agent metering system, Fuse 1 on fuse holder C, Fuse 15 on fuse holder B, Fuse holder C	665
17. Fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C	666
18. Fuse holder C, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 9 on fuse holder C	667
19. Fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 31 on fuse holder C	668
20. Heated rear window relay, Fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C, Fuse 53 on fuse holder C	669
21. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C, Fuse 40 on fuse holder C	670
22. Fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	671
23. Air quality sensor, Fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Diagnostic connection	672
24. Fuse holder C, Fuse 48 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	673
25. Fuse holder C, Fuse 3 on fuse holder C, Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C	674
26. Fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C, Fuse 20 on fuse holder C	675
27. Fuse holder C, Fuse 21 on fuse holder C, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C, Fuse 28 on fuse holder C	676
28. Fuse holder C, Fuse 29 on fuse holder C, Fuse 43 on fuse holder C	677
29. Fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	678
30. Relay for neck heating, Front passenger seat adjustment thermal fuse 1, Fuse holder D, Fuse holder F	679
059 - Airbag systems for RHD vehicles , (L0R),(4UF)	680-692
1. Airbag systems for RHD vehicles , (L0R),(4UF)	680
2. Airbag control unit, Terminal 15 voltage supply relay, Fuse 3, Fuse holder C, Fuse 33 on fuse holder C	681
3. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Roof electronics control unit, Warning lamp for airbag deactivated on front passenger side, Diagnostic connection	682
4. Driver side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Driver side seat position sensor, Airbag control unit	683
5. Front passenger side belt switch, Seat occupied sensor, front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Front passenger side seat position sensor, Airbag control unit	684
6. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	685
7. Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	686
8. Centre crash sensor for pedestrian protection, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	687
9. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	688
10. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	689
11. Driver side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1	690
12. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1	691
13. Buzzer and gong, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	692
060 - 2.5l petrol engine , DNWA	693-719
1. 2.5l petrol engine , DNWA	693
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter	694
3. Alternator, Main relay, Fuse holder B	695
4. Suppression capacitor, Fuse holder B	696
5. Engine component power supply relay, Starter relay 1, Starter relay 2, Fuse holder B	697
6. Fuse holder B, Fuse holder C	698
7. ABS control unit, Engine/motor control unit	699
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	700
9. Engine/motor control unit. Ignition coil 5 with output stage. Injector 2. cylinder 1. Injector 2.	701

cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5, Spark plug 5, Coupling point on engine, top	
10. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	702
11. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Intake manifold flap valve, Switch valve for mechanical coolant pump	703
12. Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator for cylinder 1, Exhaust cam actuator for cylinder 2, Exhaust cam actuator for cylinder 3	704
13. Engine speed sender, Knock sensor 1, Knock sensor 2, Engine/motor control unit, Exhaust cam actuator for cylinder 4, Exhaust cam actuator for cylinder 5	705
14. Intake manifold sender, Charge pressure sender, Coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit	706
15. Oil pressure sender, Hall sender, Hall sender 3, Engine/motor control unit	707
16. Engine/motor control unit, Charge pressure control solenoid valve, Turbocharger air recirculation valve, Valve for oil pressure control, Crankcase breather valve	708
17. Oil level and oil temperature sender, Engine/motor control unit, Coolant shut-off valve, Continued coolant circulation pump	709
18. Intermediate shaft speed sender, Engine/motor control unit	710
19. Throttle valve module, Dual exhaust gas temperature sensor 1, Dual exhaust gas temperature sensor 2, Engine/motor control unit	711
20. Accelerator pedal module, Engine/motor control unit, Radiator fan, Radiator fan	712
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Power steering control unit, Engine/motor control unit	713
22. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	714
23. Brake pedal switch, Engine/motor control unit	715
24. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	716
25. Pressure differential sender for particulate filter, Pressure differential sender 2 for particulate filter, Fuel pump control unit	717
26. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	718
27. Control unit for structure-borne sound, Actuator for structure-borne sound	719
061 - 7-speed dual clutch gearbox 0BH (S tronic) , DNWA,(0EX)	720-723
1. 7-speed dual clutch gearbox 0BH (S tronic) , DNWA,(0EX)	720
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	721
3. Gearbox oil temperature sender, Clutch temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2	722
4. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	723
062 - 2.0l petrol engine , DNFD,DNPA	724-750
1. 2.0l petrol engine , DNFD,DNPA	724
2. Starter, Airbag control unit, Battery monitor control unit, Battery isolation igniter, Fuse holder B, Wiring junction	725
3. Alternator with voltage regulator, Suppression capacitor, Fuse holder B	726
4. Main relay, Fuse holder B	727
5. Engine component power supply relay, Starter relay 1, Starter relay 2, Fuse holder B	728
6. Terminal 15 voltage supply relay, Fuse holder C	729
7. Engine/motor control unit	730
8. Accelerator pedal module, Engine/motor control unit	731
9. Engine/motor control unit	732
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	733
11. Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox, Coolant circulation pump	734
12. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Valve for oil pressure control	735
13. Knock sensor 1, Coolant temperature sender, Sender 1 for turbocharger speed, Pressure differential sender for particulate filter, Engine/motor control unit, Intake manifold flap valve	736
14. Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Piston cooling jet control valve	737
15. Hall sender. Intake manifold flap potentiometer. Engine/motor control unit. Fuel metering valve	738

16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	739
17. Cam adjustment actuator 8, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	740
18. Throttle valve module, Engine speed sender, Hall sender 3, Engine/motor control unit	741
19. Charge pressure control module, Engine/motor control unit, Actuator for engine temperature regulation	742
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Intake manifold sender, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	743
21. Engine/motor control unit	744
22. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	745
23. Brake pedal switch, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	746
24. Brake fluid level warning contact, Clutch position sender, ABS control unit, Onboard supply control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	747
25. Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	748
26. Control unit in dash panel insert	749
27. Control unit for structure-borne sound, Actuator for structure-borne sound	750
063 - 2.0l petrol engine , DNNB	751-775
1. 2.0l petrol engine , DNNB	751
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter, Fuse holder B	752
3. Alternator, Suppression capacitor, Fuse holder B	753
4. Main relay, Fuse holder B	754
5. Engine component power supply relay, Starter relay 1, Fuse holder B	755
6. Terminal 15 voltage supply relay, Fuse holder C	756
7. Engine/motor control unit	757
8. Accelerator pedal module, Engine/motor control unit	758
9. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Continued coolant circulation pump	759
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	760
11. Clutch position sender, ABS control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	761
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	762
13. Cam adjustment actuator 8, Hall sender 3, Engine/motor control unit, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control	763
14. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	764
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	765
16. Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit, Actuator for engine temperature regulation	766
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Intake manifold sender, Charge pressure control module, Intake manifold pressure sender, Engine/motor control unit	767
18. Dual exhaust gas temperature sensor 1, Air mass meter, Exhaust gas temperature sender 3a, Gearbox neutral position sender, Engine/motor control unit	768
19. Throttle valve module, Charge pressure sender, Knock sensor 1, Engine/motor control unit	769
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	770
21. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Radiator fan	771
22. Brake pedal switch, Onboard supply control unit, Engine/motor control unit	772
23. Fuel delivery unit, Fuel pump control unit	773
24. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	774
25. Control unit in dash panel insert, Data bus diagnostic interface	775
064 - 7-speed dual clutch gearbox 0BH (S tronic) , DAZA,(0EX)	776-779
1. 7-speed dual clutch gearbox 0BH (S tronic) , DAZA,(0EX)	776
2. Selector lever, Onboard supply control unit, Selector lever position display	777
3. Gearbox oil temperature sender. Clutch temperature sender. Engine/motor control unit. Mechatronic	778

unit for dual clutch gearbox	
4. Centre switch module in dash panel, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Cooling oil valve, Main pressure valve	779
801 - -Fitting locations: Earth points - 1	780-792
1. Earth points	780-792
1.1 Earth points in front part of vehicle	780-788
1.1.1 Earth points, in engine compartment	780
1.1.2 2.0l petrol engine, except CHHC, CNTC, DNNB	781
1.1.3 2.0l petrol engine, CHHC, CNTC, up to September 2016	782
1.1.4 2.0l petrol engine, CHHC, CNTC, from October 2016	783
1.1.5 2.0l petrol engine, DNNB	784
1.1.6 2.5l petrol engine	785
1.1.7 Manual gearbox	786
1.1.8 Dual clutch gearbox, 0EG	787
1.1.9 Dual clutch gearbox, 0ES, 0EX, 0IJ	788
1.2 Earth points in middle part of vehicle	789
1.3 Earth points in rear part of vehicle	790-792
1.3.1 Earth points in rear part, view from left	790
1.3.2 Earth points in rear part, view from right	791-792
802 - -Fitting locations: Fuses - 1	793-817
1. Fuses	793-817
1.1 Overview of fuses	793
1.2 Fitting location fuse holder A -SA-	794
1.3 Fuse assignment on fuse holder A -SA-	794
1.3.1 Fuse assignment, fuse holder A -SA-, models up to model year 2018	795
1.3.2 Fuse assignment, fuse holder A -SA-, models from model year 2019	795
1.4 Fitting location, relay and fuse carrier 1 -SR1-	795
1.5 Fuse assignment on fuse holder B -SB-	796-804
1.5.1 Fuse assignment, fuse holder B -SB-, models up to model year 2018	796-799
1.5.2 Fuse assignment, fuse holder B -SB-, models from model year 2019	800-804
1.6 Fitting location, relay and fuse carrier 2 -SR2-	805-806
1.6.1 Fitting location, relay and fuse carrier 2 -SR2-, left-hand drive models	805
1.6.2 Fitting location, relay and fuse carrier 2 -SR2-, right-hand drive models	806
1.7 Fuse assignment, fuse holder C -SC-	807-809
1.8 Fitting location, relay and fuse carrier 3 -SR3-	810-811
1.8.1 Fitting location, relay and fuse carrier 3 -SR3-, left-hand drive models	810
1.8.2 Fitting location, relay and fuse carrier 3 -SR3-, right-hand drive models	811
1.9 Fitting location of main fuse carrier on the battery -A-	812-813
1.9.1 Fitting location of main fuse carrier on the battery -A-, models up to model year 2016	813
1.9.2 Fitting location of main fuse carrier on the battery -A-, models from model year 2017	813
1.10 Fitting location, jump start connection -TV32-/wiring junction -TV1-	814
1.11 Fitting location, relay and fuse carrier 4 -SR4-	815
1.12 Fuse assignment on fuse holder F -SF-	816
1.13 Fuse assignment on fuse holder D -SD-	817
803 - -Fitting locations: Relays - 1	818-825
1. Relays	818-825
1.1 Overview of relay carriers	818
1.2 Fitting location and relay slot assignment, relay and fuse carrier 1 -SR1-, on electronics box in engine compartment	819
1.3 Relay and fuse carrier 2 -SR2-, under dash panel on left	820-821
1.3.1 Fitting location and relay slot assignment, relay and fuse carrier 2 -SR2-, left-hand drive models	820
1.3.2 Fitting location and relay slot assignment, relay and fuse carrier 2 -SR2-, right-hand drive models	821
1.4 Fitting location and relay slot assignment, relay and fuse carrier 3 -SR3-, under dash panel, left	822-823
1.4.1 Fitting location and relay slot assignment, relay and fuse carrier 3 -SR3-, left-hand drive models	822
1.4.2 Fitting location and relay slot assignment, relay and fuse carrier 3 -SR3-, right-hand drive models	823
1.5 Fitting location and relay slot assignment, relay and fuse carrier 4 -SR4-, on left in luggage compartment	824-825
1.5.1 Fitting location and relay slot assignment, relay and fuse carrier 4 -SR4-, coup	824
1.5.2 Fitting location and relay slot assignment, relay and fuse carrier 4 -SR4-, roadster	825
804 - -Fitting locations: Control units in front part of vehicle - 1	826-852
1. Control units in front part of vehicle	826-852

1.1 Overview of control units in front part of vehicle	826
1.2 Fitting location, ABS control unit -J104-	827-828
1.3 Fitting location, control unit for structure-borne sound -J869-	829-830
1.4 Fitting location, control unit for wiper motor -J400-	831-832
1.5 Fitting location, power steering control unit -J500-	833-834
1.6 Fitting location, engine control unit -J623-	835-836
1.6.1 Engine control unit -J623-, 154-pin	835
1.6.2 Engine control unit -J623-, 196-pin	836
1.7 Fitting location, mechatronic unit for dual clutch gearbox -J743-	837-842
1.7.1 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox OEG	837-838
1.7.2 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox OES	839-840
1.7.3 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox OEX/OIJ	841-842
1.8 Fitting location, left headlight -MX1-/right headlight -MX2-	843-847
1.8.1 Fitting location, left headlight -MX1-/right headlight -MX2-, bi-xenon	843-844
1.8.2 Fitting location, left headlight -MX1-/right headlight -MX2-, LED, Matrix Beam	845-847
1.9 Fitting location, radiator fan control unit -J293-	848-849
1.10 Fitting location, garage door operation control unit -J530-	850-852
805 - - Fitting locations: Control units in middle part of vehicle - 1	853-932
1. Control units in middle part of vehicle	853-932
1.1 Overview of control units in middle part of vehicle	853-854
1.2 Overview of convertible roof control units, roadster	855
1.3 Fitting location, fresh air blower control unit -J126-	856
1.4 Fitting location, airbag control unit -J234-	857
1.5 Fitting location, electronically controlled damping control unit -J250-	858-859
1.6 Fitting location, Climatronic control unit -J255-	860-864
1.7 Fitting location, control unit in dash panel insert -J285-	865-867
1.8 Fitting location, driver door control unit -J386-	868-871
1.9 Fitting location, front passenger door control unit -J387-	872-876
1.10 Fitting location, headlight range control unit -J431-	877-881
1.10.1 Fitting location, headlight range control unit -J431-, left-hand drive models	877-878
1.10.2 Fitting location, headlight range control unit -J431-, right-hand drive models	879-881
1.11 Fitting location, parking aid control unit -J446-/park assist steering control unit -J791-	882-887
1.11.1 Fitting location, parking aid control unit -J446-/park assist steering control unit -J791-, left-hand drive models	882-884
1.11.2 Fitting location, parking aid control unit -J446-/park assist steering control unit -J791-, right-hand drive models	885-887
1.12 Fitting location, entry and start authorisation control unit -J518-	888-891
1.12.1 Fitting location, entry and start authorisation control unit -J518-, except USA	888-889
1.12.2 Fitting location, entry and start authorisation control unit -J518-, USA only	890-891
1.13 Fitting location, onboard supply control unit -J519-	892-897
1.14 Fitting location, digital sound package control unit -J525-	898-899
1.15 Fitting location, steering column electronics control unit -J527-	900
1.16 Fitting location, roof electronics control unit -J528-	901
1.17 Fitting location, data bus diagnostic interface -J533-	902-903
1.18 Fitting location, fuel pump control unit -J538-	904-905
1.19 Fitting location, chip card reader control unit -J676-	906-907
1.20 Fitting location, seat occupied recognition control unit -J706-	908-909
1.21 Fitting location, control unit for electronic steering column lock -J764-	910-911
1.22 Fitting location, control unit 1 for information electronics -J794-	912-914
1.23 Fitting location Main beam assist control unit -J844-	915-916
1.24 Fitting location, exhaust flap control unit -J883-	917-918
1.25 Fitting location, control unit for seat belt microphone -J886-	919-920
1.26 Fitting location, front camera for driver assist systems -R242-	921-922
1.27 Fitting location, convertible roof actuation motor -V82-/convertible roof actuation motor 2 -V576-	923-924
1.28 Fitting location, cabriolet windbreak motor -V186-	925-926
1.29 Fitting location, convertible roof lock motor -V223-	927
1.30 Fitting location, selector lever -E313-	928-929
1.31 Installation position of telephone bracket -R126-	930-932
806 - - Fitting locations: Control units in rear part of vehicle - 1	933-955
1. Control units in rear part of vehicle	933-955
1.1 Overview of control units in rear part of vehicle	933
1.2 Fitting location, convertible roof actuation control unit -J256-	934-936
1.3 Fitting location, battery monitor control unit -J367-	937-938
1.4 Fitting location, all-wheel drive control unit -J492-	939-940
1.5 Fitting location, Tyre Pressure Monitoring System control unit -J502-	941-942

1.6 Fitting location, lane change assist control unit -J769-	943-944
1.7 Fitting location, lane change assist control unit 2 -J770-	945-946
1.8 Fitting location Reversing camera system control unit -J772-	947-948
1.9 Fitting location, interface control unit for vehicle location system -J843-	949-950
1.10 Fitting location TV tuner -R78-	951-952
1.11 Fitting location, aerial amplifier for mobile telephone -R86-	953-955
807 - -Fitting locations: Coupling points - 1	956-984
1. Coupling points	956-984
1.1 Coupling point on left in engine compartment -TML-	956
1.2 Coupling point on engine, top -TMO-	956-961
1.2.1 1.8/2.0 l petrol engine	957
1.2.2 2.5 l petrol engine, part 1	958-959
1.2.3 2.5 l petrol engine, part 2	960-961
1.3 Coupling point for gearbox oil cooling -TGOK-	962
1.4 Coupling point on front left door -TTVL-	962
1.5 Coupling point on front right door -TTVR-	963
1.6 Coupling point on left A-pillar, bottom -TALU-	964
1.7 Coupling point right A-pillar, bottom -TARU-	965
1.8 Coupling point for roof, centre -THM-	966-967
1.9 Coupling point for front left seat -TSVL-	968
1.10 Coupling point for front right seat -TSVR-	968
1.11 Diagnostic connection -U31-	969
1.12 Coupling point in interior, below left -TIUL-	970
1.13 Coupling point in luggage compartment, centre -THRM-	971
1.14 Coupling point for fuel tank -TAK-	972
1.15 Coupling point on front left bumper -TSFVL-	973
1.16 Coupling point on rear left bumper -TSFHL-	974
1.17 Coupling point in left of luggage compartment -THRL-	975
1.18 Coupling point for rear lid -THK-	976
1.19 Coupling point on front cross member, left -TQVL-	977
1.20 Coupling point on engine, bottom left -TMUL-	978-979
1.21 Coupling point on engine, bottom right -TMUR-	980-981
1.22 Coupling point in luggage compartment, right -THRR-	982-984