

## Contents

<b>00 Technical data, Repair instructions</b>	<b>Page</b>
Identification of gearbox	00- 1
– Code letters, assignment, ratios, capacities	00- 3
Identification of rear final drive	00- 5
– Code letters, assignment, ratios, capacities	00- 7
Power transmission table	00- 8
Calculation of transmission ratio	00- 9
Instructions regarding engine output test, brake test and towing vehicle	00-10
General repair instructions	00-11
<b>30 Clutch</b>	<b>Page</b>
Servicing clutch mechanism	30- 1
– Summary of operations, pedal cluster (3.6 ltr. engine)	30- 1
– Removing and installing over-centre spring	30- 8
– Summary of operations, pedal cluster (4.2 ltr. engine)	30- 9
– Removing and installing over-centre spring	30-17
– Servicing hydraulic clutch mechanism	30-18
– Bleeding clutch system	30-21
Servicing clutch release mechanism	30-23
Servicing clutch	30-29
<b>34 Controls, Housing</b>	<b>Page</b>
Servicing selector mechanism	34- 1
– Dismantling and assembling selector mechanism	34- 2
– Servicing selector rods and front torque rod	34- 3
– Servicing gearshift lever and rear torque rod	34- 5
– Removing and installing selector rods	34- 9
– Removing and installing torque rods	34-10
– Removing and installing boot	34-11
– Removing and installing seal for selector seal with gearbox removed but not dismantled	34-12
Adjusting and checking selector mechanism	34-13
– Basic adjustment (adjustment instructions)	34-13
– Checking gearshift adjustment	34-16
– Fine adjustment instructions	34-16
Removing and installing gearbox	34-17
– Removal	34-17
– Installation	34-29
Dismantling and assembling gearbox	34-33
– Removing and installing bearing housing, Torsen differential and end cover	34-35
– Removing and installing gearbox and selector shaft	34-38
– Removing and installing 5th and 6th gear (6-speed gearbox)	34-41

<b>34 Controls, Housing</b>	<b>Page</b>
– Removing and installing input shaft, drive pinion, hollow shaft and inner selector mechanism from bearing plate	34– 46
Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft drive pinion and hollow shaft (summary of operations)	34– 49
– Removal	34– 49
– Installation	34– 62
Dismantling and assembling bearing housing	34– 81
Servicing bearings for Torsen differential	34– 89
Servicing end cover	34– 94
– Determining circlip for taper roller bearing/input shaft	34– 97
Servicing bearing plate	34–101
– Re-determining shim "S4"	34–109
Servicing gearbox housing	34–114
– Dismantling and assembling selector shaft complete	34–129
Removing and installing oil pump	34–133
– Removal	34–133
– Installation	34–136
Servicing oil pump	34–138
Removing and installing oil pressure pipes	34–140
<b>35 Gears, Shafts</b>	<b>Page</b>
Dismantling and assembling input shaft	35– 1
Dismantling and assembling drive pinion and hollow shaft	35–11
<b>39 Front final drive, Differential</b>	<b>Page</b>
Renewing oil seal for flanged shaft	39– 1
Renewing speedometer sender and speedometer gear for electronic speedometer	39– 2
Replacing oil seal and grooved ball bearing for flange/propshaft at gearbox	39– 4
– Summary of operations	39– 6
Removing and installing differential	39–12
Dismantling and assembling differential	39–14
Adjusting drive pinion and crown wheel	39–30
– General instructions	39–30
– Adjustment and inscription of final drives	39–31
– List of adjustments	39–33
Determining fitting location of drive pinion (actual measurement)	39–35
Recommended summary of operations when re-adjusting final drive	39–36
Adjusting drive pinion	39–38
– Determining total shim thickness "Stot" (S3 + S4)	39–38
– Determining size "e"	39–41
– Arrangement of measuring instruments when determining size "e"	39–43
– Determining thickness of shim "S3"	39–44
– Determining thickness of shim "S4"	39–45
– Performing check measurements	39–47

<b>39 Front final drive, Differential</b>	<b>Page</b>
Adjusting crown wheel	39-48
- Determining total shim thickness "Stot" (S1 + S2)	39-48
- Adjusting torsion backlash	39-52
- Determining average torsion backlash	39-54
- Determining shim thickness "S2"	39-54
- Determining shim thickness "S1"	39-55
- Performing check measurement	39-57
- Re-determining shim "S2" only	39-58
Removing and installing propshaft	39-59
- Summary of operations	39-62
- Adjusting propshaft	39-67
<b>39 Rear final drive, Differential</b>	<b>Page</b>
Replacing oil seal and grooved ball bearing for flange/propshaft at rear final drive	39- 71
- Summary of operations	39- 73
Replacing oil seal for right flanged shaft	39- 87
Replacing oil seal for left flanged shaft	39- 91
Removing and installing rear final drive	39- 97
- Removal	39- 97
- Installation	39-108
Rear final drive with Torsen differential	39-110
- Summary of operations	39-110
Dismantling and assembling final drive	39-112
Removing and installing Torsen differential	39-112
Dismantling and assembling crown wheel and bearing for Torsen differential	39-117
Removing and installing drive pinion	39-125
- Dismantling and assembling drive pinion	39-125
Adjusting drive pinion and crown wheel	39-137
- General instructions	39-137
- Adjustment and inscription of final drives	39-138
- List of adjustments	39-140
<b>39 Rear final drive, Differential</b>	<b>Page</b>
Determining fitting location of drive pinion (actual measurement)	39-141
Recommended summary of operations when re-adjusting final drive	39-142
Adjusting drive pinion	39-144
- Determining size "e"	39-144
- Determining thickness of shim "S3"	39-150
- Performing check measurements	39-152
Adjusting crown wheel	39-153
- Determining total shim thickness "Stot" (S1 + S2)	39-153
- Adjusting torsion backlash	39-156
- Determining average torsion backlash	39-157
- Determining shim thickness "S1"	39-158
- Determining shim thickness "S2"	39-161
- Performing check measurement	39-162