

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
27 - Starter, current supply, CCS	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Battery	5
2.1 Assembly overview – battery	5
2.2 Removing and installing battery [A]	5
2.3 Disconnecting and connecting battery	10
2.4 Removing and installing battery tray	12
2.5 Removing and installing earth wire with battery monitor control unit [J367]	13
2.6 Commissioning battery monitor control unit [J367]	14
90 - Gauges, instruments	15
1 Safety information and repair notes	15
1.1 Safety information	15
1.2 Repair instructions	15
2 Dash panel insert	16
2.1 Assembly overview – control unit with display unit for driver information system	16
2.2 Assembly overview – head-up display	16
2.3 Removing and installing control unit with display unit for driver information system [J1254]	17
2.4 Removing and installing control unit for head-up display [J898]	18
2.5 Calibrating control unit for head-up display [J898]	21
3 Horn	24
3.1 Assembly overview – horn	24
3.2 Removing and installing horn or dual tone horn [H1]	24
92 - Windscreen wash/wipe system	26
1 Safety information and repair notes	26
1.1 Safety information	26
1.2 Repair instructions	26
2 Windscreen wiper system	27
2.1 Assembly overview – windscreen wiper system	27
2.2 Moving wipers to service position	28
2.3 Removing and installing wiper blade	28
2.4 Removing and installing wiper arms	29
2.5 Adjusting wiper arms	31
2.6 Removing and installing wiper motor	33
2.7 Deactivating APP function	34
2.8 Removing and installing rain and light sensor [G397]	35
3 Windscreen washer system	39
3.1 Assembly overview – windscreen washer system	39
3.2 Removing and installing washer fluid reservoir	41
3.3 Removing and installing washer pump [V59]	42
3.4 Removing and installing washer jets	43
3.5 Adjusting spray jets	44

4	Rear window wiper system	45
4.1	Assembly overview – rear window wiper system	45
4.2	Removing and installing wiper blade	45
4.3	Removing and installing wiper arm	46
4.4	Adjusting wiper arm	47
4.5	Removing and installing rear window wiper motor [V12]	48
5	Rear window washer system	50
5.1	Assembly overview – rear window washer system	50
5.2	Removing and installing spray jet, rear window washer system	50
94	Lights, bulbs, switches - exterior	52
1	Safety information and repair notes	52
1.1	Safety information	52
1.2	Repair instructions	52
2	Headlights	53
2.1	Assembly overview - headlight, LED	53
2.2	Assembly overview - repair kit for headlight housing	54
2.3	Removing and installing headlight	55
2.4	Adjusting headlights	56
2.5	Installing repair kit for headlight housing	56
2.6	Removing and installing headlight range control motor [V48]/[V49]	57
2.7	Removing and installing output module 1 for LED headlight [A27]/[A31]	60
2.8	Removing and installing LED module for daytime running light and side light [L176]/[L177]	61
2.9	Removing and installing output module 1 for LED headlight [A27]/[A31]	63
3	Tail lights	65
3.1	Assembly overview – tail light cluster in body	65
3.2	Assembly overview - tail light cluster on rear lid	66
3.3	Removing and installing tail light cluster [MX3]/[MX4]	66
3.4	Removing and installing tail light cluster in rear lid	67
4	LED module for charging socket	69
4.1	Removing and installing LED module for charging socket 1 [L263]	69
5	High-level brake light	70
5.1	Assembly overview – high-level brake light	70
5.2	Removing and installing high-level brake light bulb [M25]	70
6	Entry and start authorisation system	72
6.1	Overview of fitting locations ? entry and start authorisation system	72
6.2	Overview of fitting locations ? keyless entry system	73
6.3	Assembly overview – control unit for break-in protection	77
6.4	Removing and installing front control unit for break-in protection	78
6.5	Removing and installing rear control unit for break-in protection	79
6.6	Removing and installing entry and start authorisation control unit [J518]	80
6.7	Removing and installing interior aerial 1 for entry and start system [R138]	82
6.8	Removing and installing luggage compartment aerial for entry and start system [R137]	83
6.9	Removing and installing contact sensor for front left exterior door handle [G605]	84
6.10	Removing and installing contact sensor for front right exterior door handle [G606]	84
6.11	Removing and installing entry and start authorisation aerials	84
6.12	Breath-alcohol-controlled immobiliser	85
7	Steering column switch module	96
7.1	Assembly overview – steering column switch module	96
7.2	Removing and installing steering column electronics control unit [J527]	97
8	Automatic headlight range control	99
8.1	Assembly overview - automatic headlight range control	99
9	Additional exterior lights	100
9.1	Removing and installing number plate light [X4]/[X5]	100

9.2	Assembly overview - lights in exterior mirror	100
9.3	Removing and installing turn signal repeater bulb [L131]/[L132]	102
9.4	Removing and installing entry light in exterior mirror [W52]/[W53]	103
9.5	Assembly overview – lights in exterior door handle	103
9.6	Removing and installing bulb for exterior door handle illumination	104
10	Towing bracket	106
10.1	Removing and installing trailer detector control unit [J345]	106
96 - Lights, bulbs, switches - interior		108
1	Safety information and repair notes	108
1.1	Safety information	108
1.2	Repair instructions	108
2	Lights	109
2.1	Overview of fitting locations – lights in dash panel	109
2.2	Overview of fitting locations - lights in centre console	109
2.3	Overview of fitting locations – lights in luggage compartment	110
2.4	Overview of fitting locations – lights in roof trim	111
2.5	Removing and installing central locking SAFELOCK function warning lamp [K133]	112
2.6	Removing and installing luggage compartment light [W3]	113
2.7	Removing and installing footwell light	114
2.8	Removing and installing rear illuminated vanity mirror [W49]/[W50]	114
2.9	Removing and installing dynamic light strip 3 for information in dash panel [L385]	115
2.10	Removing and installing light 1 for front centre console background lighting [L193]	116
3	Controls	118
3.1	Overview of fitting locations – controls in dash panel	118
3.2	Overview of fitting locations – controls in front doors	120
3.3	Overview of fitting locations – controls in rear doors	121
3.4	Overview of fitting locations – controls in luggage compartment	121
3.5	Overview of fitting locations ? controls in roof trim	122
3.6	Removing and installing hazard warning light switch E3	124
3.7	Removing and installing operating unit for lighting [EX59]	125
3.8	Removing and installing centre switch module in dash panel [EX22]	126
3.9	Removing and installing operating unit for window regulator in driver door [EX36]	127
3.10	Removing and installing window regulator switch/door operating unit	128
3.11	Removing and installing operating unit in rear door, driver side/passenger side [EX60]/[EX61]	129
3.12	Removing and installing starter button [E378]	130
3.13	Removing and installing rear lid closure button	131
3.14	Removing and installing rear lid warning buzzer [H32]	132
3.15	Removing and installing front roof module [WX3]	132
3.16	Removing and installing rear interior light/reading light	133
4	Anti-theft alarm system	135
4.1	Assembly overview – interior monitoring	135
4.2	Assembly overview - interior monitoring, RHD vehicles	135
4.3	Removing and installing alarm horn [H12]	136
4.4	Removing and installing anti-theft alarm sensor [G578]	137
5	Cigarette lighter, socket	139
5.1	Removing and installing 12 V socket [U5]/[U19]	139
97 - Wiring		140
1	Safety information and repair notes	140
1.1	Safety information	140
1.2	Repair instructions	140
2	Relay carriers, fuse holders, electronics boxes	141
2.1	Overview of fitting locations - relay carriers, fuse carriers	141

2.2	Overview of fitting locations – relay carriers, fuse carriers, electronics boxes, right-hand drive vehicles	141
2.3	Assembly overview ? relay carriers, fuse holders, electronics boxes	142
2.4	Overview of fitting locations - relay carriers, fuse carriers	144
2.5	Removing and installing electronics box	145
2.6	Removing and installing fuse holder A [SA]	146
2.7	Removing and installing fuse holder B [SB]	148
2.8	Removing and installing fuse holder C [SC]	150
3	Control units	154
3.1	Overview of fitting locations ? control units	154
3.2	Removing and installing onboard supply control unit [J519]	155
3.3	Removing and installing bracket for onboard supply control unit [J519]	157
3.4	Removing and installing data bus diagnostic interface [J533]	160
3.5	Removing and installing fan for control unit [V274]	161