



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system .....	1
1.2 Safety precautions when using testing and measuring instruments during a road test .....	2
1.3 Safety measures when working with pyrotechnic components .....	2
1.4 Safety instructions for airbag .....	3
1.5 Deactivating the airbag .....	4
1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components) .....	4
1.7 Additional safety regulations for side airbag .....	5
1.8 Additional safety instructions for curtain airbag .....	5
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags .....	6
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident .....	6
1.11 Checking airbag securing parts after an accident .....	8
1.12 Accident without airbag triggering .....	9
1.13 Checking seat belts .....	9
1.14 Check belt webbing .....	9
1.15 Checking inertia reel (locking mechanism) .....	10
1.16 Visually checking belt buckle .....	11
1.17 Check operation of belt buckle .....	11
1.18 Checking belt relays, and buckle tongues .....	11
1.19 Checking securing parts and anchorage points after an accident .....	12
1.20 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific .....	12
1.21 Safety precautions when working in the vicinity of high-voltage components .....	12
1.22 Safety precautions when working on high-voltage system .....	13
<b>2 Hazard classification for the high-voltage system</b> .....	<b>14</b>
<b>3 Repair notes</b> .....	<b>21</b>
3.1 General repair instructions .....	21
3.2 Contact corrosion .....	21
3.3 Pipe/wire routing and attachment .....	21
3.4 Explanatory notes on production control numbers (PR no.) .....	22
<b>68 - Interior equipment</b> .....	<b>23</b>
<b>1 Compartments/covers</b> .....	<b>23</b>
1.1 Overview of fitting locations - storage compartments/covers .....	23
1.2 Assembly overview - driver side dash panel cover .....	25
1.3 Assembly overview - front passenger side dash panel cover .....	26
1.4 Assembly overview - steering column trim .....	27
1.5 Assembly overview - glove compartment .....	28
1.6 Assembly overview - storage compartment in roof headliner .....	30
1.7 Assembly overview - handbrake lever boot .....	32
1.8 Removing and installing dash panel cover on driver side .....	32
1.9 Removing and installing dash panel insert trim .....	33
1.10 Removing and installing dash panel cover on front passenger side .....	34
1.11 Removing and installing upper steering column trim .....	34
1.12 Removing and installing lower steering column trim .....	35
1.13 Removing and installing glove compartment opener .....	36
1.14 Removing and installing glove compartment .....	37
1.15 Removing and installing glove compartment cover .....	38
1.16 Removing and installing damper element for glove compartment lid .....	38
1.17 Service position for glove compartment lid .....	38



1.18	Removing and installing headliner storage compartment . . . . .	40
1.19	Removing and installing handbrake lever boot . . . . .	49
1.20	Removing and installing cover for central electrics . . . . .	50
1.21	Removing and installing dash panel compartment . . . . .	50
1.22	Removing and installing information electronics mounting frame . . . . .	52
1.23	Removing and installing footwell cover . . . . .	53
1.24	Removing and installing cover of windscreen heater for lane departure warning Z67 . . . . .	53
<b>2</b>	<b>Equipment . . . . .</b>	<b>55</b>
2.1	Assembly overview - sun visors . . . . .	55
2.2	Assembly overview - grab handle . . . . .	58
2.3	Assembly overview - partition panel . . . . .	61
2.4	Assembly overview - tie rails . . . . .	65
2.5	Assembly overview - seat rail systems . . . . .	67
2.6	Removing and installing sun visor . . . . .	67
2.7	Removing and installing sun visor centre mount . . . . .	71
2.8	Removing and installing grab handle . . . . .	73
2.9	Removing and installing tool kit storage compartment . . . . .	76
2.10	Removing and installing partition panel . . . . .	78
2.11	Removing and installing tie rail . . . . .	83
2.12	Removing and installing coat hook . . . . .	86
2.13	Removing and installing retaining plate . . . . .	86
2.14	Removing and installing seat rail system . . . . .	87
2.15	Assembly overview - chock holder . . . . .	89
2.16	Removing and installing chock holder . . . . .	90
<b>3</b>	<b>Centre console . . . . .</b>	<b>92</b>
3.1	Assembly overview - centre console . . . . .	92
3.2	Removing and installing cover for centre console . . . . .	93
3.3	Removing and installing front ashtray . . . . .	93
3.4	Removing and installing centre console front storage compartment . . . . .	94
3.5	Removing and installing centre console trim in front footwell . . . . .	95
3.6	Removing and installing centre console . . . . .	95
3.7	Removing and installing trim for operating and display unit . . . . .	96
3.8	Removing and installing coin holder . . . . .	97
<b>4</b>	<b>On inside . . . . .</b>	<b>98</b>
4.1	Assembly overview - interior mirror . . . . .	98
4.2	Removing and installing interior mirror . . . . .	99
<b>69</b>	<b>Passenger protection . . . . .</b>	<b>101</b>
<b>1</b>	<b>Seat belts . . . . .</b>	<b>101</b>
1.1	Overview of fitting locations - seat belts and anchorage points . . . . .	101
1.2	Assembly overview - front three-point seat belt . . . . .	106
1.3	Assembly overview - rear outer three-point seat belt . . . . .	108
1.4	Assembly overview - rear centre three-point seat belt . . . . .	109
1.5	Assembly overview - rear three-point seat belt, single seat passenger compartment . . . . .	110
1.6	Assembly overview - front belt buckle . . . . .	111
1.7	Assembly overview - rear belt buckle . . . . .	112
1.8	Removing and installing front three-point seat belt . . . . .	113
1.9	Removing and installing rear three-point seat belt . . . . .	119
1.10	Removing and installing rear belt guide . . . . .	125
1.11	Removing and installing front belt guide . . . . .	128
1.12	Removing and installing front belt end fitting . . . . .	130
1.13	Removing and installing rear outer belt end fitting . . . . .	131
1.14	Removing and installing belt height adjuster . . . . .	133
1.15	Removing and installing front belt buckle . . . . .	134
1.16	Removing and installing rear belt buckle . . . . .	135



<b>2</b>	<b>Airbag system</b>	<b>138</b>
2.1	Overview of fitting locations - airbag system	138
<b>3</b>	<b>Airbag control unit</b>	<b>139</b>
3.1	Assembly overview - airbag control unit	139
3.2	Removing and installing airbag control unit J234	139
<b>4</b>	<b>Battery isolator igniter</b>	<b>144</b>
4.1	Removing and installing battery isolator igniter	144
<b>5</b>	<b>Driver's airbag</b>	<b>145</b>
5.1	Assembly overview - driver side airbag	145
5.2	Removing and installing airbag unit with igniter	145
5.3	Removing and installing return spring with slip ring (coil connector)	148
5.4	Renewing connector on airbag	149
<b>6</b>	<b>Front passenger side airbag</b>	<b>150</b>
6.1	Assembly overview - front passenger side airbag	150
6.2	Removing and installing front passenger side airbag unit with igniter	151
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag E224	153
6.4	Removing and installing front passenger side airbag deactivated warning lamp K145	153
<b>7</b>	<b>Side airbags</b>	<b>154</b>
7.1	Assembly overview - front side airbag	154
7.2	Removing and installing front side airbag with igniter	154
<b>8</b>	<b>Curtain airbags</b>	<b>157</b>
8.1	Assembly overview - curtain airbag	157
8.2	Removing and installing curtain airbag with igniter	157
<b>9</b>	<b>Airbag crash sensors</b>	<b>161</b>
9.1	Overview of fitting locations - airbag crash sensors	161
9.2	Removing and installing front airbag crash sensor for driver side G283 or front airbag crash sensor for front passenger side G284	161
9.3	Removing and installing front side airbag crash sensor G179 / G180	165
9.4	Removing and installing rear side airbag crash sensor G256 / G257	166
<b>10</b>	<b>Seat belt verification</b>	<b>169</b>
10.1	Removing and installing seat belt verification	169
<b>11</b>	<b>Seat occupied recognition</b>	<b>170</b>
11.1	Removing and installing seat occupied recognition	170
<b>12</b>	<b>Roll-over bar</b>	<b>171</b>
12.1	Assembly overview - roll-over bar	171
12.2	Removing and installing roll-over bar	172
<b>70</b>	<b>Trim, insulation</b>	<b>180</b>
<b>1</b>	<b>Front door trims</b>	<b>180</b>
1.1	Assembly overview - front door trim	180
1.2	Removing and installing trim for mid-range loudspeaker	182
1.3	Removing and installing treble loudspeaker trim	182
1.4	Removing and installing trim	182
1.5	Removing and installing front door trim	182
1.6	Removing and installing front door puller	185
1.7	Removing and installing button trim panel	185
1.8	Removing and installing interior door handle	186
<b>2</b>	<b>Rear door trims</b>	<b>187</b>
2.1	Assembly overview - rear door trim	187
2.2	Removing and installing trim	190
2.3	Removing and installing interior door handle	191
2.4	Removing and installing rear door trim	192
2.5	Removing and installing rear door puller	194



2.6	Removing and installing rear ashtray .....	195
<b>3</b>	<b>Dash panel .....</b>	<b>197</b>
3.1	Assembly overview - dash panel .....	197
3.2	Assembly overview - additional instruments .....	200
3.3	Removing and installing dash panel end cover .....	200
3.4	Removing and installing dash panel trim .....	201
3.5	Removing and installing dash panel insert trim .....	201
3.6	Removing and installing loudspeaker trim .....	202
3.7	Removing and installing light switch trim .....	203
3.8	Removing and installing radio/navigation system blanking plate .....	203
3.9	Removing and installing retaining frame for dash panel insert .....	203
3.10	Removing and installing dash panel .....	203
3.11	Removing and installing additional instruments .....	209
3.12	Removing and installing loudspeaker mounting .....	211
3.13	Removing and installing outer dash panel vents .....	211
3.14	Removing and installing centre vent .....	212
3.15	Removing and installing front centre defroster vent .....	214
3.16	Removing and installing side defroster vent .....	214
<b>4</b>	<b>Central tube for dash panel .....</b>	<b>216</b>
4.1	Assembly overview - central tube for dash panel .....	216
4.2	Removing and installing central tube for dash panel .....	219
<b>5</b>	<b>Interior trims .....</b>	<b>231</b>
5.1	Overview of fitting locations - interior trims .....	231
5.2	Assembly overview - step .....	241
5.3	Assembly overview - A-pillar trim .....	244
5.4	Assembly overview - B-pillar trim .....	246
5.5	Assembly overview - C-pillar trim .....	248
5.6	Assembly overview - side trim .....	250
5.7	Assembly overview - foot rest and floor covering .....	260
5.8	Removing and installing step .....	264
5.9	Removing and installing A-pillar trim .....	268
5.10	Removing and installing A-pillar gap cover .....	269
5.11	Removing and installing B-pillar trim .....	270
5.12	Removing and installing C-pillar trim .....	277
5.13	Removing and installing side trim .....	279
5.14	Removing and installing foot rest .....	282
5.15	Removing and installing floor covering .....	283
5.16	Removing and installing loudspeaker trim .....	288
5.17	Removing and installing cap .....	289
5.18	Removing and installing vents .....	292
5.19	Removing and installing partition panel trim .....	293
5.20	Removing and installing retaining strip .....	294
5.21	Removing and installing fastening rings .....	295
5.22	Removing and installing lock carrier trim .....	297
5.23	Removing and installing wheel housing lining .....	298
5.24	Removing and installing gap cover .....	299
<b>6</b>	<b>Roof trims .....</b>	<b>301</b>
6.1	Overview of fitting locations - roof trim .....	301
6.2	Assembly overview - roof end strip .....	302
6.3	Assembly overview - moulded headliner .....	303
6.4	Removing and installing roof end strip .....	306
6.5	Removing and installing moulded headlining .....	308
<b>72</b>	<b>Seat frames .....</b>	<b>317</b>
<b>1</b>	<b>Overview of seat variants .....</b>	<b>317</b>



1.1	Overview of fitting locations - seat variants .....	317
1.2	Mounting front seat on seat repair stand .....	321
<b>2</b>	<b>Front seats .....</b>	<b>322</b>
2.1	Overview of fitting locations - electrical and electronic components .....	322
2.2	Assembly overview - front seat .....	324
2.3	Assembly overview - front backrest .....	333
2.4	Assembly overview - seat pan .....	338
2.5	Assembly overview - seat depth adjustment .....	343
2.6	Removing and installing front seat .....	343
2.7	Connecting and disconnecting airbag adapter .....	350
2.8	Removing and installing handle for seat height adjustment .....	352
2.9	Removing and installing seat height adjustment unit .....	352
2.10	Removing and installing seat rake adjustment unit .....	353
2.11	Removing and installing lumbar support adjustment unit .....	354
2.12	Removing and installing front backrest .....	355
2.13	Removing and installing seat armrest .....	360
2.14	Removing and installing head restraint .....	361
2.15	Removing and installing head restraint guide .....	361
2.16	Removing and installing lumbar support adjustment switch E176 / E177 .....	362
2.17	Removing and installing massage function button E670 / E671 .....	362
2.18	Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 ..	363
2.19	Removing and installing massage control unit J740 .....	364
2.20	Removing and installing cover .....	365
2.21	Removing and handle for installing backrest adjustment .....	366
2.22	Removing and installing seat trim .....	368
2.23	Removing and installing seat depth adjustment unit .....	377
<b>3</b>	<b>Rear seats .....</b>	<b>379</b>
3.1	Assembly overview - bench seat / individual seats .....	379
3.2	Assembly overview - head restraint and head restraint guide .....	382
3.3	Assembly overview - rear seat backrest .....	383
3.4	Assembly overview - seat frame .....	385
3.5	Assembly overview - centre armrest .....	387
3.6	Removing and installing bench seat / individual seats .....	387
3.7	Removing and installing head restraint .....	392
3.8	Removing and installing head restraint guide .....	393
3.9	Removing and installing rear seat backrest .....	394
3.10	Removing and installing seat trim, single seat passenger compartment .....	395
3.11	Removing and installing seat armrest, single seat passenger compartment .....	398
<b>74 - Seat - padding, covers .....</b>	<b>399</b>	<b>399</b>
<b>1</b>	<b>Front seat covers and padding .....</b>	<b>399</b>
1.1	Assembly overview - cover and padding for seat pan .....	399
1.2	Assembly overview - cover and padding for backrest .....	403
1.3	Assembly overview - seat heating element .....	405
1.4	Assembly overview - backrest heater element .....	406
1.5	Removing and installing cover and padding for seat pan .....	406
1.6	Removing and installing backrest cover and backrest padding .....	411
1.7	Separating cover and padding on seat pan .....	416
1.8	Separating cover and padding on backrest .....	417
1.9	Separating centre cover and padding on backrest, fixed bench seat .....	420
1.10	Removing and installing head restraint cover and padding .....	421
1.11	Removing and installing seat heating element Z6 / Z8 .....	422
1.12	Removing and installing backrest heating element Z7 / Z9 .....	422
<b>2</b>	<b>Rear seat covers and padding .....</b>	<b>424</b>
2.1	Assembly overview - cover and padding .....	424



2.2	Removing and installing covers and padding .....	426
2.3	Separating cover and padding .....	431
2.4	Removing and installing cover and padding of head restraint .....	431