



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
1.3 Safety precautions when working on high-voltage system	1
1.4 Safety precautions when working in the vicinity of high-voltage components	2
1.5 Safety precautions when tow-starting and towing	2
<b>2 General information</b>	<b>3</b>
2.1 General notes on tyre pressure indicator	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 General information	4
3.2 General repair instructions	4
3.3 Rules for cleanliness	5
3.4 Rules for cleanliness when working on high-voltage system	5
3.5 Leaks at shock absorbers	6
3.6 Noises from shock absorbers	6
3.7 Checking shock absorbers when removed	7
3.8 Steering rack	7
3.9 Gaskets and seals	8
3.10 Nuts and bolts	8
3.11 Routing and attachment of lines	8
3.12 Raising wheel suspension to unladen position	8
<b>4 Evaluating accident vehicles</b>	<b>11</b>
4.1 Check list for evaluating running gear on accident vehicles	11
<b>5 Waste disposal</b>	<b>13</b>
5.1 Releasing gas and draining front gas-filled shock absorbers	13
5.2 Releasing gas and draining rear gas-filled shock absorbers	14
<b>6 Classification of dangers of the high-voltage system</b>	<b>15</b>
<b>40 - Front suspension</b>	<b>22</b>
<b>1 Front axle</b>	<b>22</b>
1.1 Overview of fitting locations - front axle	22
<b>2 Subframe</b>	<b>23</b>
2.1 Assembly overview - subframe	23
2.2 Removing and installing subframe with steering rack	29
2.3 Repairing subframe	37
2.4 Removing and installing anti-roll bar	49
2.5 Renewing anti-roll bar bushes	50
2.6 Removing and installing coupling rod	51
2.7 Fixing position of subframe	51
<b>3 Suspension strut, upper suspension link</b>	<b>59</b>
3.1 Assembly overview - suspension strut, upper suspension link	59
3.2 Removing and installing suspension strut	59
3.3 Repairing suspension strut	62
<b>4 Lower suspension link, swivel joint</b>	<b>65</b>
4.1 Assembly overview - lower suspension link, swivel joint	65
4.2 Removing and installing lower suspension link	65
4.3 Checking swivel joint	67
4.4 Removing and installing swivel joint	67
4.5 Renewing bonded rubber bush for lower suspension link	69
<b>5 Wheel bearing</b>	<b>75</b>



5.1	Assembly overview - wheel bearing	75
5.2	Removing and installing wheel bearing housing	75
5.3	Removing and installing wheel bearing unit	79
<b>6</b>	<b>Drive shaft</b>	<b>84</b>
6.1	Assembly overview - drive shaft	84
6.2	Removing and installing drive shaft	85
6.3	Dismantling and assembling drive shaft	90
6.4	Loosening and tightening threaded connections of drive shaft	95
6.5	Checking outer constant velocity joint	97
6.6	Repairing intermediate shaft	98
<b>42</b>	<b>Rear suspension</b>	<b>101</b>
<b>1</b>	<b>Rear axle</b>	<b>101</b>
1.1	Overview - rear axle	101
1.2	Removing and installing rear axle	102
<b>2</b>	<b>Anti-roll bar</b>	<b>108</b>
2.1	Assembly overview - anti-roll bar	108
2.2	Removing and installing anti-roll bar	109
2.3	Renewing anti-roll bar bushes	112
2.4	Removing and installing coupling rod	113
<b>3</b>	<b>Suspension strut, shock absorber, spring</b>	<b>115</b>
3.1	Assembly overview - suspension strut, shock absorber, spring	115
3.2	Removing and installing shock absorbers	120
3.3	Removing and installing leaf spring	121
3.4	Removing and installing bonded rubber bushes for leaf spring	125
3.5	Removing and installing axle beam stop buffer	131
3.6	Removing and installing spring hanger for leaf spring	131
3.7	Removing and installing support spring	132
<b>4</b>	<b>Wheel bearing assembly, trailing arm</b>	<b>133</b>
4.1	Assembly overview - wheel bearing	133
4.2	Removing and installing wheel bearing housing	136
4.3	Removing and installing wheel bearing unit	137
<b>43</b>	<b>Self-levelling suspension</b>	<b>145</b>
<b>1</b>	<b>Vehicle level sender</b>	<b>145</b>
1.1	Assembly overview - front vehicle level senders	145
1.2	Assembly overview - rear vehicle level senders	146
1.3	Removing and installing front right vehicle level sender G289	147
1.4	Removing and installing rear right vehicle level sender G77	147
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>149</b>
<b>1</b>	<b>Wheels, tyres</b>	<b>149</b>
1.1	Removing tyre from wheel	149
1.2	Fitting tyres	149
1.3	Wheel change	150
1.4	Specified torques for wheel bolts	154
1.5	Pressing tyre off wheel rim	154
1.6	Tyre sealant disposal	155
1.7	Models with breakdown set	155
<b>2</b>	<b>Tyre Pressure Monitoring System</b>	<b>157</b>
2.1	System description – Tyre Pressure Monitoring System	157
2.2	Overview of fitting locations - tyre pressure monitoring system	157
2.3	Assembly overview - tyre pressure sensor	159
2.4	Removing and installing tyre pressure monitoring system control unit J502	160
2.5	Removing and installing tyre pressure sensors G222 / G223 / G224 / G225	160



<b>3</b>	<b>Wheel alignment</b> .....	<b>162</b>
3.1	Notes for wheel alignment .....	162
3.2	Conditions for testing .....	163
3.3	Test preparations .....	164
3.4	Specifications for wheel alignment .....	170
3.5	Wheel alignment procedure .....	175
3.6	Necessity of wheel alignment .....	186
3.7	Explanatory notes on production control numbers (PR no.) .....	187
3.8	Adjusting camber at front wheels .....	188
3.9	Adjusting camber on rear axle .....	188
3.10	Adjusting toe at rear axle .....	188
3.11	Adjusting front axle toe .....	188
3.12	Wheel runout compensation .....	189
3.13	Vehicle data sticker .....	189
3.14	Checking maximum wheel lock .....	190
3.15	Setting steering rack to zero position .....	190
<b>4</b>	<b>Vibration due to wheels/tyres - causes and rectification</b> .....	<b>192</b>
4.1	Causes of rough running .....	192
4.2	Conducting a road test before balancing wheels .....	192
4.3	Balancing wheel .....	193
4.4	Vibration control system .....	197
4.5	Checking radial and lateral runout of wheels and tyres .....	197
4.6	Checking radial and lateral run-out on wheel rim .....	198
4.7	Matching wheels and tyres .....	199
4.8	Determining flat spots on tyres .....	200
<b>5</b>	<b>Adaptive cruise control</b> .....	<b>202</b>
5.1	Calibrating adaptive cruise control, Crafter .....	202
5.2	Calibrating adaptive cruise control, MAN TGE .....	205
<b>6</b>	<b>Front camera for assist systems</b> .....	<b>209</b>
6.1	Calibrating front camera for assist systems, Crafter .....	209
6.2	Calibrating front camera for assist systems, MAN TGE .....	214
<b>48 - Steering</b> .....		<b>220</b>
<b>1</b>	<b>Steering wheel</b> .....	<b>220</b>
1.1	Assembly overview - steering wheel .....	220
1.2	Removing and installing steering wheel .....	220
<b>2</b>	<b>Steering column</b> .....	<b>223</b>
2.1	Assembly overview - steering column .....	223
2.2	Checking steering column for damage .....	224
2.3	Handling and transporting steering column .....	224
2.4	Removing and installing steering column .....	225
2.5	Removing and installing intermediate steering shaft .....	227
<b>3</b>	<b>Steering rack</b> .....	<b>229</b>
3.1	Assembly overview - steering rack .....	229
3.2	Checking steering rack for damage .....	230
3.3	Handling and transporting steering rack .....	230
3.4	Removing and installing steering rack .....	230
3.5	Removing and installing bellows .....	237
3.6	Removing and installing track rod .....	238
3.7	Removing and installing track rod ball joint .....	240
3.8	Repairing steering rack .....	242
3.9	Removing and installing steering rack mountings .....	242
<b>4</b>	<b>Sensors</b> .....	<b>246</b>
4.1	Removing and installing steering angle sender G85 .....	246