



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 General repair instructions	2
2.2 Gaskets and seals	3
2.3 Nuts and bolts	3
3 Technical data	4
3.1 Capacities	4
3.2 Allocation gearbox - engine	4
39 - Final drive - differential	6
1 Final drive	6
1.1 Assembly overview - final drive	6
1.2 Removing and installing final drive	9
2 Gear oil	10
2.1 Checking gear oil level	10
2.2 Draining and filling gear oil	10
3 Differential	12
3.1 Removing and installing stub shaft, twin tyres	12
4 All-wheel drive coupling	13
4.1 Assembly overview - all-wheel drive coupling	13
4.2 Checking function	14
4.3 Check fluid level	14
4.4 Removing and installing all-wheel drive coupling pump V181	15
4.5 Removing and installing all-wheel drive coupling	18
4.6 Removing and installing control unit	21
4.7 Draining and filling high performance fluid for all-wheel drive coupling	22
4.8 Removing and installing axle differential lock Hall sender 1 G460	25
5 Propshaft	26
5.1 Assembly overview - propshaft	26
5.2 Removing and installing propshaft	28
5.3 Removing and installing propshaft	39
5.4 Dismantling and assembling propshaft	41
6 Components of bevel box	46
6.1 Assembly overview - components of bevel box	46
6.2 Removing and installing bevel box	47
6.3 Dismantling and assembling bevel box	49
6.4 Adjusting bevel box	49
6.5 Renewing bevel box seals	49
6.6 Securing bevel box to engine and gearbox support	60
6.7 Checking gear oil level in bevel box	60
6.8 Fitting repair kit for stub shaft	62