



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Gearbox identification	2
2.2 Identification of bevel box	3
3 Repair notes	4
3.1 General repair instructions	4
3.2 Gaskets and seals	5
3.3 Nuts and bolts	5
4 Technical data	6
4.1 Capacities	6
4.2 Allocation gearbox - engine	6
30 - Clutch	8
1 Clutch operation	8
1.1 Assembly overview - clutch mechanism	8
1.2 Assembly overview - clutch release mechanism	10
1.3 Removing and installing clutch pedal	10
1.4 Removing and installing over-centre spring	12
1.5 Removing and installing mounting bracket	12
1.6 Removing and installing clutch master cylinder	12
1.7 Removing and installing clutch slave cylinder together with release bearing	13
1.8 Removing and installing bleeder	14
1.9 Removing and installing bearing bush	15
1.10 Bleeding clutch mechanism	15
1.11 Checking clutch master cylinder and clutch slave cylinder	16
1.12 Removing and installing clutch position sender G476	17
2 Clutch	18
2.1 Assembly overview - clutch	18
2.2 Removing and installing clutch	18
34 - Controls, housing	22
1 Bevel box	22
1.1 Assembly overview - bevel box	22
1.2 Removing bevel box	23
1.3 Installing bevel box	25
1.4 Bevel box - checking gear oil level	25
1.5 Fitting repair kit for stub shaft	27
2 Selector mechanism	30
2.1 Installation position - selector mechanism	30
2.2 Assembly overview - selector mechanism	31
2.3 Removing and installing mounting for cable support bracket	32
2.4 Removing and installing selector mechanism	32
2.5 Adjusting selector mechanism	33
2.6 Checking selector mechanism	36
2.7 Removing and installing gear selector cable	36
2.8 Removing and installing selector lever handle	39
2.9 Renewing selector shaft seal	40
3 Removing and installing gearbox	43
3.1 Specified torques for gearbox	43



3.2	Removing gearbox	45
3.3	Installing gearbox	57
4	Assembly mountings	58
4.1	Assembly overview - assembly mountings	58
4.2	Removing and installing centre bonded rubber mounting	59
5	Transporting gearbox	60
6	Dismantling and assembling gearbox	61
6.1	Schematic overview - gearbox	61
6.2	Differentiating between gearboxes	63
6.3	Assembly overview - gearbox housing and selector mechanism	64
6.4	Assembly overview - selector unit	68
6.5	Assembly overview - input shaft, output shafts, differential, selector rods	69
6.6	Assembly overview - selector forks	70
6.7	Dismantling and assembling gearbox	71
7	Gearbox housing, clutch housing	101
7.1	Assembly overview - gearbox housing	101
7.2	Assembly overview - clutch housing	103
7.3	Repairing gearbox housing	105
7.4	Repairing clutch housing	107
8	Securing to engine and gearbox support	110
9	Gear oil	111
9.1	Draining and filling gear oil	111
35 - Gears, shafts		113
1	Input shaft	113
1.1	Assembly overview - input shaft	113
1.2	Dismantling and assembling input shaft	117
2	Output shaft	129
2.1	Assembly overview - output shaft	129
2.2	Dismantling and assembling output shaft	136
2.3	Adjusting output shaft	164
39 - Final drive - differential		165
1	Oil seals	165
1.1	Overview of fitting locations - seals	165
1.2	Renewing input shaft seal	166
1.3	Renewing left seal	167
1.4	Renewing right oil seal	169
2	Differential	173
2.1	Assembly overview - differential	173
2.2	Dismantling and assembling differential	175
2.3	Adjusting differential	181