



Contents

00 - Technical data	1
1 Safety information	1
1.1 Rules for safety when working on the gearbox	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
2 Repair notes	3
2.1 Rules for cleanliness	3
2.2 General repair instructions	3
2.3 Contact corrosion	4
2.4 Gaskets and seals	4
2.5 Nuts and bolts	4
3 Technical data	5
3.1 Capacities	5
3.2 Allocation gearbox - engine	5
4 Identification	7
4.1 Gearbox identification	7
4.2 Identification of torque converter	7
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
32 - Torque converter	10
1 Torque converter	10
1.1 Assembly overview - torque converter	10
1.2 Removing and installing torque converter	10
1.3 Draining torque converter	12
1.4 Checking torque converter	12
1.5 Removing and installing torque converter oil seal	13
1.6 Securing torque converter to prevent it from falling out	14
37 - Controls, housing	15
1 ATF circuit	15
1.1 Assembly overview - ATF circuit	15
1.2 Removing and installing ATF cooler	15
1.3 Removing and installing ATF pipes	17
2 ATF	21
2.1 Checking ATF level	21
2.2 Draining and filling ATF	24
2.3 Purging ATF circuit	25
3 Removing and installing gearbox	29
3.1 Specified torques for gearbox	29
3.2 Removing gearbox	29
3.3 Installing gearbox	34
4 Assembly mountings	37
4.1 Assembly overview - assembly mountings	37
5 Transporting gearbox	39
6 Securing to engine and gearbox support	41
7 Bevel box	42
7.1 Assembly overview - bevel box	42
7.2 Removing bevel box	42
7.3 Installing bevel box	44



8	Selector mechanism	46
8.1	Assembly overview - selector mechanism	46
8.2	Checking selector mechanism	47
8.3	Emergency release from position P	48
8.4	Removing and installing selector mechanism	48
8.5	Removing and installing selector lever handle	50
8.6	Removing and installing gear selector cable	51
8.7	Checking and adjusting selector lever cable	53
8.8	Removing and installing multifunction switch F125	54
8.9	Adjusting multifunction switch F125	56
8.10	Renewing selector shaft seal	58
38	- Gears, control	60
1	Currently, no repairs can be made to gears and shafts	60
2	ATF system	61
2.1	Assembly overview - sump/oil strainer	61
2.2	Removing and installing sump	61
2.3	Removing and installing ATF strainer	62
3	Oil seals in gearbox	63
3.1	Renewing seals in gearbox	63
4	Valve body	64
4.1	Overview - valve body	64
4.2	Removing and installing valve body	66
39	- Final drive - front differential	71
1	Gear oil	71
1.1	Checking gear oil level	71
1.2	Draining and filling gear oil	72
2	Oil seals	75
2.1	Overview of fitting locations - seals	75
2.2	Renewing left seal	75
2.3	Renewing right oil seal	78
3	Gearbox control system	84
3.1	Removing and installing automatic gearbox control unit J217	84