



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety measures for working on vehicles with high voltage system	1
1.2 Safety measures when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with a start/stop system	2
1.4 Safety precautions during road tests in which testing and measuring equipment is used	3
2 Identification	4
2.1 PR number assignment – brake	4
3 Technical data	5
3.1 Technical data for brakes	5
4 Brake inspection	8
4.1 General points	8
4.2 Checking vehicles with front-wheel drive	8
45 - Anti-lock brake system	9
1 General points	9
1.1 Repair instructions for repair work on ABS	9
2 Installation location overview	12
2.1 ABS/ESP installation location overview	12
3 Control unit and hydraulic unit	15
3.1 Exploded view – control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104/ABS hydraulic unit N55	19
3.3 Connecting brake lines to hydraulic unit	28
4 Sensors	31
4.1 Assembly overview - speed sensor on front axle	31
4.2 Assembly overview - speed sensor on rear axle	32
4.3 Removing and installing wheel speed sensor on the front axle	33
4.4 Removing and installing wheel speed sensor on the rear axle	34
4.5 Removing and installing steering angle sender	35
4.6 Removing and installing yaw rate sender and lateral acceleration sender	36
46 - Brakes - mechanism	37
1 Front brakes	37
1.1 Assembly overview - front brakes	37
1.2 Removing and installing brake pads	39
1.3 Removing and installing brake calliper	42
2 Rear brakes	46
2.1 Assembly overview - rear brakes	46
2.2 Resetting drum brakes	47
2.3 Removing and installing brake shoes	48
3 Handbrake	54
3.1 Assembly overview - parking brake	54
3.2 Removing and installing the rear handbrake cable	56
3.3 Adjusting parking brake	60
4 Brake pedal	62
4.1 Summary of components - brake pedal	62
4.2 Removing and installing bearing bracket	64
4.3 Separating brake pedal from brake servo	66
4.4 Clipping the brake pedal onto the brake servo unit	67
4.5 Removing and installing brake pedal	67
47 - Brakes - hydraulics	70



1	Front brake callipers	70
1.1	Summary of components - front brake calliper	70
1.2	Removing and installing brake calliper piston	71
2	Brake servo unit and master brake cylinder	75
2.1	Summary of components - brake servo unit and master brake cylinder	75
2.2	Overview of components - Accumulator for braking system	79
2.3	Removing and installing the Accumulator for braking system VX70	80
2.4	Removing and installing brake servo	83
2.5	Removing and installing master brake cylinder	94
3	Brake lines	100
3.1	Repairing brake lines	100
4	Hydraulic system	106
4.1	General notes on brake fluid	106
4.2	Bleeding hydraulic system following standard procedure	106
4.3	Subsequent bleeding of hydraulic system	111
4.4	Pre-bleed the Accumulator for braking system VX70	112
4.5	Testing leak-tightness	113