



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety measures for working on vehicles with high voltage system	1
1.2 Safety measures when working in the vicinity of high-voltage components	1
1.3 Safety precautions during road tests in which testing and measuring equipment is used	2
2 Repair instructions	3
2.1 Contact corrosion	3
2.2 Cable routing and securing	3
3 Notes on installing and operating mobile telephones and two-way radios	5
3.1 Operating mobile telephones, remote controls and portable radios in the vehicle interior	5
3.2 Instructions for performing assembly	5
3.3 Overview of connecting the battery, transceiver, fuses, and wiring looms	6
3.4 Transmitting powers and fitting position of the aerials	7
4 Interference suppression measures	9
4.1 Implementation of interference suppression measures	9
5 Battery	10
5.1 Battery types	10
5.2 Basic topics	10
27 - Starter, current supply, CCS	11
1 Batteries	11
1.1 Assembly overview - battery	11
1.2 Disconnecting and reconnecting battery	13
1.3 Removing and installing battery	16
1.4 Removing and installing earth lead with battery monitoring control unit J367	18
1.5 Adapt the battery monitoring control unit J367	19
1.6 Removing and installing battery tray	19
1.7 Checking battery	20
1.8 Charging battery	20
90 - Gauges, instruments	21
1 Dash panel insert	21
1.1 Removing and installing dash panel insert KX2	21
1.2 Contact assignment to multi-pin connectors of dash panel insert	22
2 Horn	23
2.1 Summary of components - horn	23
2.2 Removing and installing treble horn H2/ and low-tone horn H7	23
91 - Radio, telephone, navigation	25
1 Infotainment system	25
1.1 Installation – Infotainment system	25
1.2 Infotainment system set overview of fitting locations	26
1.3 Removing and installing the control unit for front display and information control panel	27
2 Aerial systems	30
2.1 Structure - Antenna systems	30
2.2 Removing and installing roof antenna	31
2.3 Removing and installing the aerial module	32
3 Sound system	34
3.1 Overview of locations where sound system is fitted	34
3.2 Removing and installing the front midrange speaker	35
3.3 Removing and installing the rear midrange speaker	37
3.4 Remove and install front tweeters R20/R22	38



3.5	Removing and installing the front woofers R21/R23	39
3.6	Removing and installing subwoofer R211	39
3.7	Removing and installing digital sound package control unit/amplifier	39
4	Multi-functional steering wheel	41
4.1	Removing and installing the multi-function buttons on the steering wheel E440	41
5	Mobile services online	43
5.1	General description - mobile services online	43
5.2	Installation location overview - mobile online services	43
5.3	Removing and installing control unit for emergency call module and communication unit J949	44
92	Windscreen wash/wipe system	46
1	Windscreen wiper and washer system	46
1.1	Assembly overview - windscreen wiper system	46
1.2	Bring windscreen wipers into the service position	47
1.3	Removing and installing wiper blade	48
1.4	Removing and installing windscreen wiper arms	49
1.5	Adjusting windscreen wiper arms	51
1.6	Removing and installing windscreen wiper motor V	52
1.7	Renewing windscreen wiper motor	54
1.8	Removing and installing Sensor for rain and light detection	56
2	Windscreen washer system	61
2.1	Assembly overview - windscreen washer system	61
2.2	Removing and installing washer fluid container	62
2.3	Removing and installing windscreen washer pump	64
2.4	Removing and installing washer jets	65
2.5	Adjusting spray jets	66
3	Rear window wiper system	67
3.1	Assembly overview - rear window wiper system	67
3.2	Removing and installing wiper blade	67
3.3	Removing and installing windscreen wiper arm	68
3.4	Removing and installing rear window wiper motor V12	69
4	Rear window washer system	71
4.1	Assembly overview - rear window washer system	71
4.2	Removing and installing washer jet	71
4.3	Adjusting spray jet	72
5	Washer fluid lines	73
5.1	Repairing washer fluid lines	73
94	Lights, bulbs, switches - exterior	74
1	Headlights	74
1.1	Assembly overview - headlight	74
1.2	Removing and installing headlight	77
1.3	Setting the headlight beam	78
1.4	Adjusting headlight installation position	78
1.5	Removing and installing the light bulb for the low beam light	80
1.6	Removing and installing the side light bulb M1/M3	82
1.7	Removing and installing daytime driving light bulb L174/L175	83
1.8	Removing and installing the front left turn signal bulb M5/M7	84
1.9	Removing and installing bulb for headlight M30/M32	85
1.10	Switching headlights over from driving on right to driving on left	86
1.11	Switching headlights over from driving on left to driving on right	87
1.12	Removing and installing the control motor for headlamp range controlV48/V49	89
1.13	Removing and installing the LED module for daytime running light and parking light	93
1.14	Installing repair kit for headlight housing	94

2	Fog lights	96
2.1	Removing and installing fog light	96
2.2	Removing and installing fog light bulb L22/L23	97
2.3	Adjusting the fog light	97
3	Lights in the exterior mirror	98
3.1	Removing and installing turn signal	98
3.2	Removing and installing signal bulb in exterior mirror L131/L132	99
4	Tail light cluster	100
4.1	Installation overview - tail lamps	100
4.2	Removing and installing bulb carrier	101
4.3	Removing and installing tail light	102
5	High-level brake light	104
5.1	Removing and installing high level brake light	104
6	Registration number lighting	107
6.1	Removing and installing licence plate carrier X4/X5	107
6.2	Removing and installing bulb for number plate light X4/X5	108
7	Switch module on the steering column	109
7.1	Summary of components - switch module on the steering column	109
7.2	Removing and installing steering column combination switch	110
7.3	Removing and installing steering column electronics control unit J527	113
7.4	Removing and installing ignition/starter switch	114
7.5	Checking ignition/starter switch	116
7.6	Removing and installing lock cylinder	116
7.7	Removing and installing steering lock housing	118
8	Parking aid	120
8.1	Assembly overview - parking aid	120
8.2	Removing and installing the parking aid control unit J446	121
8.3	Removing and installing the rear parking aid warning buzzer H15	122
8.4	Removing and installing rear parking aid senders	123
96	Lights, bulbs, switches - interior	126
1	Lamps	126
1.1	Replace front light bulbs for interior light W1/W13/W19	126
1.2	Removing and installing W3 luggage compartment light	128
1.3	Removing and installing indicator lamp for central locking SAFELOCK function K133	129
1.4	Removing and installing the warning light for passenger side airbag off K145	130
2	Controls	131
2.1	Removing and installing the controls for the electric windows in the driver's door E512	131
2.2	Removing and installing window regulator switch in front passenger door E107	132
2.3	Removing and installing mirror adjuster switch E43/ E168	132
2.4	Removing and installing driver side interior locking button for central locking system E308	133
2.5	Removing and installing light switches EX1	133
2.6	Removing and installing headlight range control regulator E102	134
2.7	Removing and installing buttons in the dash panel	135
2.8	Removing and installing the cover of the centre console	136
2.9	Removing and installing buttons for sunroof E325	137
2.10	Removing and installing the front interior light/reading light	138
3	Immobiliser	141
3.1	Removing and installing immobiliser control unit	141
3.2	Removing and installing immobiliser reading coil	142
4	Front camera for driver assistance systems	143
4.1	Assembly overview: front camera for driver assistance systems	143
4.2	Removing and installing front camera for driver assistance systems R242	143
4.3	Calibrate front camera for driver assistance systems	145



5	Cigarette lighter, socket	154
5.1	Removing and installing cigarette lighter U1	154
5.2	Removing and installing 12-V socket 3 U19	154
97 - Wiring	155
1	Relay carrier, fuse holder, E-boxes	155
1.1	Removing and installing electronics box (E-box)	155
1.2	Removing and installing relay and fuse holder in E-box	157
1.3	Removing and installing relay and fuse holder behind dash panel on the driver's side	159
2	Control units	164
2.1	Removing and installing the vehicle voltage control unit J519	164
2.2	Removing and installing data bus diagnostic interface J533	165
3	Plug connections	166
3.1	Repair the electric wiring harness and connectors	166
4	Unlocking and disassembling the socket housing	167
5	Clean the contact surfaces	168
6	Vehicle diagnosis, testing and information systems	169