



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Basic instructions	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	2
2.3 Vehicle data sticker	5
3 Safety measures	7
4 Foam moulds	8
5 Galvanised body parts, high/ultra high-strength and hot-formed body panels	9
5.1 Body	9
5.2 Overview	10
6 Anti-corrosion measures	17
7 Gap sizes	18
7.1 Front body	18
7.2 Middle body	18
7.3 Rear body	21
8 Vehicle body dimensions	23
8.1 Front body	23
8.2 Middle body	24
8.3 Rear body	32
8.4 Body platform at the front	33
8.5 Body platform in the middle	35
8.6 Body platform at the rear	37
9 Tools	40
10 Straightening bench	41
10.1 Overview	41
11 Portal gauge	43
50 - Body - front	44
1 Replacing console - right	44
1.1 Removing	44
1.2 Preparing the new part	47
1.3 Part welding	49
2 Replacing console - left	52
2.1 Removing	52
2.2 Install	53
3 Replacing support block (for assembly carrier)	56
3.1 Removing	56
3.2 Preparing the new part	62
3.3 Part welding	63
4 Replacing the front bumper holder	68
4.1 Removing	68
4.2 Install	69
5 Replacing the wheelhouse frame side rail at the top	72
5.1 Removing	72
5.2 Install	77
6 Replacing the front wheelhouse	81
6.1 Removing	81
6.2 Install	84



7	Replacing the front frame side rail	89
7.1	Summary of components	89
7.2	Removing	90
7.3	Preparing the new part	98
7.4	Part welding	100
8	Repairing the thread for the attachment of the assembly carrier	107
8.1	Contents of the thread repair set	108
8.2	Repairing thread	109
51 - Body - centre	113
1	Replacing the roof ▶ vehicle without sliding/tilting roof Open Sky	113
1.1	Tools	113
1.2	Removing	114
1.3	Install	116
2	Replacing the roof - vehicle with sliding/tilting roof Open Sky	127
2.1	Tools	127
2.2	Removing	127
2.3	Install	129
3	Replacing the roof rail ▶ 3-door	142
3.1	Removing	142
3.2	Install	145
4	Replacing the roof rail ▶ 5-door	153
4.1	Removing	153
4.2	Install	156
5	Replacing the front roof cross member	165
5.1	Removing	165
5.2	Install	167
6	Replacing the front roof cross member ▶ Vehicle with sliding/tilting roof Open Sky	169
6.1	Removing	170
6.2	Install	171
7	Replacing the roof reinforcement ▶ Vehicle without sliding/tilting roof Open Sky	174
7.1	Removing	175
7.2	Install	176
8	Replacing the rear roof cross member	178
8.1	Removing	179
8.2	Install	180
9	Replacing the A-pillar	182
9.1	Removing	182
9.2	Install	185
10	Replacing reinforcement of A-pillar - cutoff part	191
10.1	Removing	192
10.2	Install	195
11	Replacing B-pillar ▶ 5-door	203
11.1	Removing	204
11.2	Install	206
12	Replacing the reinforcement of the B-pillar ▶ 3-door	213
12.1	Removing	214
12.2	Install	216
13	Replacing the reinforcement of the B-pillar ▶ 5-door	225
13.1	Removing	226
13.2	Install	228
14	Replacing the outside bottom side rail ▶ 3-door	239
14.1	Removing	241



14.2	Install	242
15	Replacing reinforcement of bottom side rail- centre cutoff part	245
15.1	Removing	245
15.2	Install	247
16	Replacing the front bottom side rail ► 3-door vehicle	251
16.1	Removing	251
16.2	Install	253
53 - Body - rear		257
1	Replacing rear cover plate	257
1.1	Removing	257
1.2	Install	259
2	Replacing the reinforcement of the sealing channel	262
2.1	Removing	262
2.2	Install	265
3	Replacing front cover plate	269
3.1	Removing	269
3.2	Install	271
4	Replace mounting for tail light cluster	273
4.1	Removing	273
4.2	Install	275
5	Replacing the luggage compartment floor	279
5.1	Removing	279
5.2	Install	281
6	Replacing reinforcement of C-pillar - cutoff part	286
6.1	Removing	286
6.2	Install	288
7	Replacing top part of rear frame side rail	291
7.1	Removing	291
7.2	Install	293
8	Replacing the bracket for the rear axle	298
8.1	Removing	298
8.2	Install	300
9	Replacing rear frame side rail - cutoff part	303
9.1	Removing	303
9.2	Install	305
10	Replace rear side panel ► 3-door vehicle	308
10.1	Removing	308
10.2	Install	311
11	Replace rear side panel ► 5-door vehicle	318
11.1	Removing	318
11.2	Install	321
12	Replacing the outer wheelhouse liner	326
12.1	Removing	326
12.2	Install	328