

Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety measures when working on the high-voltage system	1
1.2 Safety measures when working near high-voltage components	1
1.3 Safety precautions during road tests in which testing and measuring equipment is used	2
1.4 Safety precautions when working on cooling system	2
2 Repair notes	3
2.1 Contact corrosion	3
2.2 Cable routing and securing	3
2.3 Rules of cleanliness	3
3 Hazard classification of the high-voltage system	5
93 - Electric drive systems	13
1 Warning stickers	13
1.1 Checking the warning stickers	13
2 High-voltage components	18
2.1 Installation location overview - high-voltage components	18
2.2 Checking the high-voltage components	20
3 High-voltage battery unit	21
3.1 Overview of components - High-voltage battery	21
3.2 Visual inspection of the high-voltage battery 1 AX2	26
3.3 High-voltage battery 1 AX2 diagnostics	27
3.4 Removing and installing high-voltage battery 1 AX2	27
3.5 Raise the high-voltage battery 1 AX2	34
3.6 Leak test for the high-voltage battery 1 AX2	37
3.7 Detecting leaks in the high-voltage battery	38
3.8 Open the high-voltage battery 1 AX2	38
3.9 Measuring the voltage and insulation	44
3.10 Interrupting the circuit	48
3.11 Seal the high-voltage battery 1 AX2	51
3.12 Removing and installing the battery module monitoring control unit J497	55
3.13 Removing and installing high-voltage battery switch box SX6	57
3.14 Removing and installing the battery regulation control unit J840	61
3.15 Removing and installing the control unit for the high-voltage battery charging voltage J966	64
3.16 Removing and installing the cable guide for the high-voltage battery 1 AX2	64
3.17 Carrying out a visual inspection of the wiring harness	67
3.18 Removing and installing the wiring loom for high-voltage battery 1 AX2	67
3.19 Removing and installing high-voltage battery 1 AX2 measurement line.	68
3.20 Discharging and charging the capacitor	69
3.21 Removing and installing the capacitor	71
3.22 Charging and discharging battery modules	72
3.23 Removing and installing battery module	73
4 Power and control electronics for electric drive	113
4.1 Summary of components - power and control electronics for electric drive	113
4.2 Removing and installing power and control electronics for electric drive	115
4.3 Removing and installing power and control electronics for electric drive JX1	121
4.4 Remove and install Fuse 3 for high-voltage system S353	122
5 Electric drive motor	126
5.1 General description - Traction motor for electric drive	126
5.2 Overview of components - Traction motor for electric drive	126
5.3 Removing and installing engine trim panel	131
5.4 Removing and installing the three-phase drive VX54	132



5.5	Replace the three-phase drive VX54	142
5.6	Calibrating the three-phase current drive VX54	142
5.7	Removing and installing the gearbox	143
5.8	Removing and installing the drive motor temperature encoder G712	143
5.9	Removing and installing charge air cooler coolant position encoder 1 G713	146
6	Engine control unit	149
6.1	Summary of components - engine control unit	149
6.2	Removing and installing engine control unit J623	150
6.3	Removing and installing the engine control unit J623 bracket	153
7	High-voltage lines	155
7.1	General description - High-voltage lines	155
7.2	Installation location overview - High-voltage cables	155
7.3	Removing and installing high-voltage cable set for traction motor	157
8	Cooling system, coolant	162
8.1	Installation location overview - cooling system	162
8.2	Connection diagram for coolant hoses	164
8.3	Check cooling system for leaks	166
8.4	Draining and filling coolant	169
9	Coolant pump, regulation of cooling system	174
9.1	Summary of components - coolant temperature control system	174
9.2	Removing and installing the coolant circulation pump before power and control electronics for electric drive V508	176
9.3	Removing and installing coolant pump for the high-temperature circuit V467	177
9.4	Removing and installing the temperature sensor downstream of the traction motor for electric drive G788	178
10	Radiator, radiator fan	180
10.1	Summary of components - radiator / radiator fan	180
10.2	Removing and installing radiator	182
10.3	Removing and installing radiator cowling with radiator fan	186
10.4	Removing and installing radiator fan V7	187
11	Removing and installing high voltage heating (PTC)	188
12	Electrical air conditioner compressor	189
13	Ensuring that the high-voltage system is de-energised	190
14	Recommissioning the high-voltage system	192
15	Potential equalisation lines	193
15.1	Installation location overview - Potential equalisation lines	193
15.2	Potential equalisation lines - High-voltage battery 1 AX2	195
15.3	Potential equalisation line for power and control electronics for electric drive JX1	196
15.4	Potential equalisation line for charger 1 for high-voltage battery AX4	196
15.5	Potential compensation line for three-phase drive VX54	197
15.6	Potential equalisation line for high-voltage heater (PTC) Z115	197
15.7	Potential compensation line for electric air conditioning compressor V470	198
16	Charging socket	199
16.1	Overview of components - Charging socket	199
16.2	Removing and installing charging socket 1 for high-voltage battery charging UX4	202
16.3	Removing and installing the actuator for high-voltage charging plug lock 1 F498	207
16.4	Emergency release for charging socket	210
17	Charger for high-voltage battery	212
17.1	Overview of components - Charger for high-voltage battery	212
17.2	Removing and installing charging unit 1 for high-voltage battery AX4	213
17.3	Removing and installing the charger 1 console for the high-voltage battery AX4	217
18	Driving noise/engine noise	219
18.1	Installation location overview - Driving noise/engine noise	219
18.2	Removing and installing engine noise generation control unit J943	220



18.3	Removing and installing actuator 1 for engine noise generation R257	221
19	Accelerator control	224
19.1	Assembly overview - accelerator module	224
19.2	Removing and installing accelerator pedal module GX2	224