



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety instructions</b>	<b>1</b>
1.1 Safety measures for working on vehicles with high voltage system	1
1.2 Safety measures when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with a start/stop system	2
1.4 Safety precautions during road tests in which testing and measuring equipment is used	3
1.5 Safety precautions when working on the assembly carrier	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Leaks on shock absorbers	4
2.2 Noises on shock absorbers	4
2.3 Inspecting the removed shock absorber	5
2.4 Steering gear	6
2.5 Seals and sealing rings	6
2.6 Screws, nuts	6
2.7 Electrical components	6
2.8 Raise wheel bearing in unladen state on vehicles with coil springs	6
<b>3 Accident vehicle assessment</b>	<b>9</b>
3.1 Checklist for assessing the chassis of accident vehicles	9
<b>4 Disposal</b>	<b>11</b>
4.1 Degas front gas-filled shock absorber, and empty.	11
4.2 Degas rear gas-filled shock absorber, and empty.	11
<b>40 - Front suspension</b>	<b>13</b>
<b>1 Front axle</b>	<b>13</b>
1.1 Installation overview - front axle	13
<b>2 Assembly carrier</b>	<b>14</b>
2.1 Summary of components- assembly carrier	14
2.2 Removing and installing assembly carrier without steering gear	16
2.3 Fixing the assembly carrier	18
2.4 Lower assembly carrier	21
<b>3 Anti-roll bar</b>	<b>24</b>
3.1 Summary of components - anti-roll bar	24
3.2 Removing and installing the anti-roll bar	26
<b>4 Suspension strut, upper suspension link</b>	<b>30</b>
4.1 Assembly overview - suspension strut, upper suspension link	30
4.2 Removing and installing the suspension strut	32
4.3 Repairing suspension strut	39
<b>5 Bottom track control arm, suspension link</b>	<b>43</b>
5.1 Summary of components - Lower track control arm. suspension link	43
5.2 Removing and installing the lower track control arm	45
5.3 Inspecting the suspension link	47
5.4 Removing and installing the suspension link	48
5.5 Replacing the rubber-metal bearing for lower track control arm	51
<b>6 Wheel bearing</b>	<b>56</b>
6.1 Summary of components - Wheel bearing	56
6.2 Removing and installing wheel bearing housing	57
6.3 Removing and installing wheel-bearing unit	62
<b>7 Drive shaft</b>	<b>73</b>
7.1 Summary of components - cardan shaft	73
7.2 Removing and installing cardan shaft	75
7.3 Disassembling and assembling cardan shaft	81



7.4	Check outer joint .....	86
<b>42</b>	<b>- Rear suspension .....</b>	<b>89</b>
<b>1</b>	<b>Rear axle .....</b>	<b>89</b>
1.1	Overview - rear axle .....	89
1.2	Removing and installing rear suspension .....	89
1.3	Lowering rear axle .....	97
<b>2</b>	<b>Axle beam .....</b>	<b>100</b>
2.1	Summary of components- axle beam .....	100
2.2	Replacing rubber-metal bearing for axle beam .....	102
<b>3</b>	<b>Suspension strut/shock absorber, spring .....</b>	<b>106</b>
3.1	Summary of components - Suspension strut/shock absorber, spring .....	106
3.2	Removing and installing shock absorber .....	107
3.3	Repairing the shock absorber .....	110
3.4	Removing and installing spring .....	113
<b>4</b>	<b>Wheel bearing, trailing arm .....</b>	<b>115</b>
4.1	Summary of components - Wheel bearing .....	115
4.2	Removing and installing wheel-bearing unit .....	116
<b>44</b>	<b>- Wheels, tyres, vehicle geometry .....</b>	<b>120</b>
<b>1</b>	<b>Wheels, Tyres .....</b>	<b>120</b>
1.1	Wheel change .....	120
1.2	Tightening torque of the wheel screws .....	124
1.3	Breakdown set .....	124
1.4	Tyre sealant .....	125
1.5	Disposing of tyre sealant .....	125
<b>2</b>	<b>Carry out axle alignment .....</b>	<b>126</b>
2.1	Notes on axle alignment .....	126
2.2	Test conditions .....	127
2.3	Nominal values for the axle alignment .....	128
2.4	Need for axle alignment .....	131
2.5	Explanation of the consecutive number (PR No.) .....	132
2.6	Overview of the work sequence for the axle alignment .....	133
2.7	Camber correction on the front axle .....	134
2.8	Checking the camber on the rear axle .....	135
2.9	Checking the track on the rear axle .....	136
2.10	Adjust the track on the front axle .....	136
2.11	Checking the left and right steering angle .....	136
2.12	Check position of steering wheel, align if necessary .....	138
<b>48</b>	<b>- Steering .....</b>	<b>141</b>
<b>1</b>	<b>Steering wheel .....</b>	<b>141</b>
1.1	Steering wheel - Summary of components .....	141
1.2	Removing and installing the steering wheel .....	142
<b>2</b>	<b>Steering column .....</b>	<b>144</b>
2.1	Summary of components - steering column .....	144
2.2	Observe handling and transportation of the steering column .....	151
2.3	Removing and installing steering column .....	153
2.4	Installing and removing intermediate shaft of steering column .....	188
2.5	Removing and installing J500steering column electronics control unit .....	189
<b>3</b>	<b>Steering gear .....</b>	<b>204</b>
3.1	Summary of components - steering gear .....	204
3.2	Removing and installing steering gear .....	205
3.3	Removing and installing track rod .....	209
3.4	Removing and installing track rod ends .....	212



---

3.5	Repairing steering box .....	213
3.6	Adjusting steering box .....	215