



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety instructions</b>	<b>1</b>
1.1 Safety precautions when working on air Conditioning systems	1
1.2 Safety measures for working on vehicles with start-stop system	1
1.3 Safety precautions when working on cooling system	1
<b>2 General points</b>	<b>2</b>
2.1 Identification plates	2
2.2 Notes concerning odours in air conditioned vehicles	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Working on refrigerant circuit	4
3.2 Cable routing and securing	5
3.3 Seals and sealing rings	5
<b>4 Technical data</b>	<b>7</b>
4.1 Filling capacities for refrigerant	7
4.2 Filling capacities for refrigerant oil	7
<b>80 - Heating</b>	<b>9</b>
<b>1 Fitting location overview - heating</b>	<b>9</b>
1.1 Fitting location overview - components outside of vehicle interior	9
1.2 Fitting location overview - components inside of vehicle interior	9
<b>2 Heating and air conditioning unit</b>	<b>11</b>
2.1 Assembly overview – heater unit	11
2.2 Removing and installing heater unit	13
2.3 Disassembling and assembling the heater unit	13
2.4 Removing and installing flex shafts	13
<b>3 Air duct</b>	<b>17</b>
3.1 Summary of components - air duct and air distribution in vehicle interior	17
<b>4 Control and display unit</b>	<b>18</b>
4.1 Overview - control and display unit	18
4.2 Removing and installing control and display unit	18
<b>87 - Air conditioning system</b>	<b>19</b>
<b>1 Fitting location overview - air conditioning system</b>	<b>19</b>
1.1 Fitting location overview - components outside of passenger compartment	19
1.2 Fitting location overview - Components inside the passenger compartment	21
<b>2 Refrigerant circuit</b>	<b>23</b>
2.1 Removing and installing high-pressure sender G65	23
2.2 Removing and installing the expansion valve	24
2.3 Removing and installing the condenser	26
2.4 Removing and installing desiccator bag/desiccator cartridge	27
2.5 Removing and installing suction and filling valve, low and high pressure side	29
2.6 Removing and installing refrigerant line of the capacitor to the evaporator	30
2.7 Removing and installing refrigerant line from air conditioner compressor to the condenser	31
2.8 Removing and installing refrigerant line of condenser to the air conditioner compressor	32
2.9 Commissioning of air conditioning system after filling refrigerant circuit	34
<b>3 AC compressor</b>	<b>35</b>
3.1 Summary of components - AC compressor	35
3.2 Assembly overview - belt pulley	35
3.3 Removing and installing AC compressor	36
3.4 Removing and installing air conditioning system magnetic clutch N25	40
<b>4 Control motors</b>	<b>42</b>



4.1	Installation overview: front control motors	42
4.2	Removing and installing the control motor of temperature flap V68	44
4.3	Removing and installing the control motor of central flap V70	47
4.4	Removing and installing the dynamic pressure flap control motor V71	49
4.5	Removing and installing the defroster flap control motor V107	52
4.6	Removing and installing the actuator element for temperature flap	54
4.7	Removing and installing the actuator for the air distribution flap	58
4.8	Removing and installing the actuator for fresh air and re-circulating air/air flow flap	59
<b>5</b>	<b>Heater and air conditioning unit, front</b>	<b>62</b>
5.1	Summary of components - parts of the heating and air conditioning units and air intake box	62
5.2	Summary of components - evaporator housing	70
5.3	Removing and installing evaporator	72
5.4	Removing and installing heater and air conditioning unit	73
5.5	Removing and installing evaporator temperature sensor G308	79
5.6	Removing and installing dust pollen filter	80
5.7	Removing and installing the fresh air blower V2	81
5.8	Removing and installing fresh air blower control unit J126	83
5.9	Removing and installing series resistor for fresh air blower with overheating fuse N24	85
5.10	Removing and installing heat exchanger	87
5.11	Removing and installing condensate water drain	87
5.12	Check condensation water drain	87
<b>6</b>	<b>Air deflector</b>	<b>89</b>
6.1	Summary of components - air duct and air distribution in passenger compartment	89
6.2	Removing and installing air guide for defroster air vent	90
6.3	Removing and installing air duct for the dash panel vents in the centre	91
6.4	Checking exhaust ventilation for passenger compartment	92
6.5	Removing and installing exhaust ventilation for passenger compartment	92
6.6	Removing and installing fresh air intake	93
<b>7</b>	<b>Control and display unit</b>	<b>95</b>
7.1	Overview - control and display unit	95
7.2	Removing and installing front control and display unit	97
<b>8</b>	<b>Other control components</b>	<b>101</b>
8.1	removing and installing ambient temperature sensor G17	101
8.2	Removing and installing sunlight penetration photosensor G107	101
8.3	Removing and installing the ambient humidity sensor for air conditioning system G260	102
8.4	Removing and installing the middle vent temperature sender G191	102
8.5	Removing and installing the Footwell vent temperature sender G192	103