



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety instructions</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start-stop system	1
1.2 Safety precautions during test drives in which testing and measuring equipment is used	1
1.3 General safety instructions	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules of cleanliness	5
3.2 General repair instructions	5
3.3 Contact corrosion	11
3.4 Seals and sealing rings	11
3.5 Screws, nuts	12
<b>4 Technical data</b>	<b>13</b>
4.1 Filling capacity	13
4.2 Allocation gearbox - engine	13
4.3 Calculation of gear ratios	13
<b>5 Overview of Transmission System</b>	<b>14</b>
5.1 Overview of power transmission - front-wheel drive	14
<b>6 Electrical components</b>	<b>16</b>
6.1 Fitting location summary - electrical components	16
<b>30 - Clutch</b>	<b>18</b>
<b>1 Clutch operation</b>	<b>18</b>
1.1 Fitting location overview - clutch control	18
1.2 Summary of components - Foot controls	19
1.3 Assembly overview - clutch hydraulics	21
1.4 Assembly overview - clutch release mechanism	23
1.5 Removing and installing bearing bush	25
1.6 Removing and installing tension spring	25
1.7 Removing and installing clutch pedal switch	27
1.8 Removing and installing clutch position sensor G476	28
1.9 Removing and installing clutch pedal	28
1.10 Removing and installing bearing bracket	29
1.11 Removing and installing the master cylinder	37
1.12 Removing and installing the slave cylinder	38
1.13 Checking the master and slave cylinder	41
1.14 Removing and installing cables for clutch control	42
1.15 Bleeding the clutch control	46
1.16 Repairing the clutch release mechanism	49
<b>2 Clutch</b>	<b>51</b>
2.1 Assembly overview - clutch	51
2.2 Removing and installing clutch	51
<b>34 - Controls, housing</b>	<b>57</b>
<b>1 Shift mechanism</b>	<b>57</b>
1.1 Fitting location of shift mechanism	57
1.2 Overview - shift mechanism	58
1.3 Summary of components - gearshift knob and cover	59
1.4 Summary of components - shift lever and shift housing	60
1.5 Summary of components - control cables	62
1.6 Removing and installing gearshift knob	64



1.7	Removing and installing selector mechanism	66
1.8	Repairing shift mechanism	69
1.9	Removing and installing control cables	74
1.10	Dismantling and assembling selector mechanism	76
1.11	Setting the shift mechanism	82
1.12	Inspecting the gearshift mechanism	84
1.13	Replacing the sealing ring for the gearshift shaft	84
<b>2</b>	<b>Removing and installing the gearbox</b>	<b>88</b>
2.1	Tightening torques for gearbox	88
2.2	Removing the gearbox	88
2.3	Installing the gearbox	101
<b>3</b>	<b>Assembly bracket</b>	<b>107</b>
3.1	Assembly overview - assembly mountings	107
<b>4</b>	<b>Transporting the gearbox</b>	<b>108</b>
<b>5</b>	<b>Disassembling and assembling the gearbox</b>	<b>110</b>
5.1	Schematic overview - Gearbox	110
5.2	Summary of components - Gearbox	110
5.3	Summary of components - Gearshift unit	111
5.4	Summary of components - input shaft, output shafts, differential gear and shift rods	112
5.5	Disassembling and assembling the gearbox	114
<b>6</b>	<b>Gearbox housing, clutch housing</b>	<b>122</b>
6.1	Summary of components - Clutch housing	122
6.2	Summary of components - Gearbox housing and clutch housing	122
6.3	Repairing gearbox housing	124
<b>7</b>	<b>Attachment at engine and gearbox mount</b>	<b>126</b>
<b>8</b>	<b>Gear oil</b>	<b>128</b>
8.1	Checking gear oil level	128
8.2	Draining and filling gearbox oil	128
<b>35 - Gears, shafts</b>		<b>131</b>
<b>1</b>	<b>Drive shaft</b>	<b>131</b>
1.1	Summary of components - Drive shaft	131
1.2	Disassembling and assembling the drive shaft	133
1.3	Setting drive shaft	142
1.4	Replacing input shaft sealing ring	147
<b>2</b>	<b>Output shaft</b>	<b>149</b>
2.1	Summary of components - Output shaft	149
2.2	Disassembling and assembling the output shaft	152
2.3	Setting output shaft	167
<b>3</b>	<b>Reverse shaft</b>	<b>172</b>
3.1	Removing and installing reverse gear shaft	172
<b>39 - Final drive - differential</b>		<b>173</b>
<b>1</b>	<b>Sealing rings</b>	<b>173</b>
1.1	Installation overview - sealing rings	173
1.2	Replacing left sealing ring	173
1.3	Replacing right sealing ring	176
<b>2</b>	<b>Differential</b>	<b>177</b>
2.1	Summary of components - Differential	177
2.2	Disassembling and assembling differential gear	179
2.3	Adjusting the differential	187
<b>3</b>	<b>Setting overview</b>	<b>193</b>