

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	3
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions during road tests in which testing and measuring equipment is used	3
2.4 Safety precautions when working on cooling system	4
2.5 Safety precautions when working on ignition system	4
2.6 Safety precautions when working on vehicles with a compressed natural gas (CNG) system	4
3 Repair notes	7
3.1 Rules of cleanliness	7
3.2 Foreign bodies in the engine	7
3.3 Contact corrosion	7
3.4 Cable laying and fastening	7
3.5 Assembly of radiators and condensers	8
3.6 Checking the vacuum system	8
3.7 General repair instructions	9
4 CNG - General	11
4.1 Valid instructions, regulations, standards and recommendations for the service, assembly and repair work on the natural gas system (LPG)	11
10 - Removing and installing engine	13
1 Removing and installing engine	13
1.1 Removing engine	13
1.2 Disconnecting engine and gearbox	22
1.3 Attach engine attached to engine and gearbox mount	23
1.4 Installing engine	25
2 Assembly bracket	29
2.1 Overview of components- assembly bracket	29
2.2 Support the engine in its installed position	31
2.3 Removing and installing engine mount	40
2.4 Removing and installing gearbox mount	41
2.5 Removing and installing pendulum support	42
2.6 Check assembly bracket setting	43
2.7 Adjusting the unit mounting	43
13 - Crankshaft group	45
1 Cylinder block (pulley end)	45
1.1 Summary of components - V-ribbed belt drive	45
1.2 Assembly overview - cylinder block (pulley end)	46
1.3 Removing and installing V-ribbed belt	48
1.4 Removing and installing engine support	51
1.5 Replacing crankshaft sealing ring on the belt pulley side	53
2 Cylinder block, gearbox end	56
2.1 Summary of components - cylinder block on gearbox side	56
2.2 Removing and installing flywheel	57
2.3 Removing and installing sealing flange on gearbox side	58
3 Crankshaft	70
3.1 Crankshaft dimensions	70
4 Pistons and conrods	71



4.1	Summary of components - piston and conrod	71
4.2	Check piston and cylinder bore	73
4.3	Separating new connecting rod	75
4.4	Set the piston to top dead centre	76
15	Cylinder head, valve gear	81
1	Cylinder head	81
1.1	Summary of components - cylinder head	81
1.2	Removing and installing camshaft housing	85
1.3	Removing and installing cylinder head	94
1.4	Checking compression	101
2	Toothed belt drive	105
2.1	Summary of components - toothed belt guard	105
2.2	Summary of components - toothed belt	106
2.3	Overview of components - Timing tool	109
2.4	Checking valve timing	119
2.5	Setting the timing	127
2.6	Remove the toothed belt from the camshaft	146
2.7	Removing and installing toothed belt	153
3	Valve gear	175
3.1	Summary of components - valve gear	175
3.2	Measuring axial play of camshaft	176
3.3	Removing and installing camshaft control	178
3.4	Removing and installing toothed belt wheel	183
3.5	Removing and installing gasket ring for camshaft	186
3.6	Removing and installing valve stem seals	194
4	Inlet and exhaust valves	206
4.1	inspecting valve guides	206
17	Lubrication	208
1	Sump, oil pump	208
1.1	Summary of components - pan/oil pump	208
1.2	Removing and installing oil pan	212
1.3	Removing and installing oil pump	216
2	Crankcase ventilation	220
2.1	Summary of components - crankcase ventilation	220
2.2	Removing and installing oil separator	221
3	Oil filter, oil pressure switch	225
3.1	Removing and installing oil filter housing	225
3.2	Removing and installing oil pressure switch F1	226
3.3	Testing oil pressure and oil pressure switch	227
19	Cooling	230
1	Cooling system, coolant	230
1.1	Connection diagram - coolant hoses	230
1.2	Check cooling system for leaks	231
1.3	Draining and filling coolant	235
2	Coolant pump, regulation of cooling system	239
2.1	Assembly overview - coolant pump	239
2.2	Assembly overview - thermostat	242
2.3	Removing and installing coolant pump	245
2.4	Removing and installing coolant regulator	249
2.5	Removing and installing toothed belt for coolant pump	254
2.6	Removing and installing coolant temperature transmitter G62	255
2.7	Removing and installing radiator fan thermal switch F18	256

3	Radiator, radiator fan	258
3.1	Summary of components - radiator / radiator fan	258
3.2	Removing and installing radiator	260
3.3	Removing and installing radiator cowling with radiator fan	263
3.4	Removing and installing radiator fan V7	264
20	Fuel supply system	266
1	Fuel system	266
1.1	Fitting location overview - fuel system	266
2	Fuel tank	270
2.1	Assembly overview - fuel tank	270
2.2	Assembly overview - natural gas fuel tank	273
3	Petrol fuel system	283
3.1	Assembly overview - fuel delivery unit, fuel gauge sender	283
3.2	Removing and installing fuel pump	287
3.3	Removing and installing the fuel gauge sender G	295
3.4	Removing and installing the fuel tank	297
3.5	Checking the fuel system pressurisation pump G6	309
3.6	Drain the fuel tank	334
4	Quick couplings	346
4.1	Separating push-on couplings	346
5	Fuel filter	352
6	Natural gas fuel system (CNG)	353
6.1	Summary of components - tank shut-off valve	353
6.2	Summary of components - filler neck	355
6.3	Mechanically sealing valve for tank shut-off N361 / N362	356
6.4	Reduce fuel pressure	358
6.5	Removing and installing natural gas fuel tank	359
6.6	Removing and installing solenoid coil of tank shut-off valve N361/N362	378
6.7	Emptying natural gas fuel tank	380
6.8	Aligning protection pads	391
6.9	Sticking on protective foils for natural gas fuel tanks	392
6.10	Determining the residual pressure in the natural gas fuel tank	400
6.11	Removing and installing tank shut-off valve	412
6.12	Removing and installing filling connection	419
7	Accelerator control	425
7.1	Assembly overview - accelerator module	425
7.2	Removing and installing accelerator pedal module GX2	425
8	Activated charcoal filter system	428
8.1	Assembly overview - activated charcoal filter system	428
8.2	Checking the fuel tank venting	431
8.3	Removing and installing activated charcoal filter	440
24	Mixture preparation - injection	445
1	Injection system	445
1.1	Installation location overview - fuel injection system	445
1.2	Assembly overview - fuel system	448
2	Injection valves	451
2.1	Summary of components - fuel distributor with injectors	451
2.2	Removing and installing injectors	452
2.3	Testing injection valves	455
2.4	Clean injectors	458
3	Inspecting the liquefied petroleum gas system (LPG) for leak tightness	461
3.1	Identify the pressure ranges and assign leak test	461



3.2	Determine the pressure in the natural gas system	463
3.3	Determining the operating mode of natural gas vehicles	464
3.4	Deactivating/activating natural gas mode	464
3.5	Inspecting the liquefied petroleum gas system (LPG) for leak tightness	465
4	Gas pressure regulator	471
4.1	Summary of components - gas pressure regulator	471
4.2	Removing and installing gas pressure regulator	472
4.3	Removing and installing the tank pressure sensor G400	475
5	Gas inlet valves	477
5.1	Assembly overview - gas distributor line	477
5.2	Gas distributor line with gas injection valve N366 / N367 / N368 to be removed and installed	479
5.3	Removing and installing the gas distribution line sensor G401	482
6	Air filter	483
6.1	Summary of components - air filter housing	483
6.2	Removing and installing air filter housing	484
7	Intake manifold	486
7.1	Summary of components - intake manifold	486
7.2	Removing and installing intake manifold	488
7.3	Removing and installing the throttle valve control unit GX3	492
7.4	Cleaning throttle valve control unit GX3	493
8	Senders and sensors	495
8.1	Removing and installing intake manifold pressure sender GX9	495
9	Engine control unit	497
9.1	Summary of components - engine control unit	497
9.2	Removing and installing engine control unit J623	499
10	Lambda probe	505
10.1	Summary of components - lambda probe	505
10.2	Removing and installing Lambda probe	511
26 - Exhaust system		516
1	Exhaust pipes/silencers	516
1.1	Summary of components - silencers	516
1.2	Separating exhaust pipes/silencers	518
1.3	Removing and installing silencers	520
1.4	Installation position of clamping sleeve	522
2	Cleansing exhaust emissions	526
2.1	Summary of components - exhaust gas cleaning	526
2.2	Removing and installing catalytic converter	534
28 - Ignition system		538
1	Ignition system	538
1.1	Summary of components - ignition system	538
1.2	Removing and installing ignition coil with output stage	540
1.3	Removing and installing knock sensor 1 G61	543
1.4	Removing and installing Hall sender	543
1.5	Removing and installing the engine speed transmitter G28	544