

001 - Basic equipment	1-15
1. Basic equipment	1
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	2
3. Terminal 15 voltage supply relay, Onboard supply control unit	3
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	4
5. Steering column combination switch, Onboard supply control unit	5
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	6
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit, Front interior light	7
8. Rotary light switch, Onboard supply control unit	8
9. Rotary light switch, Hazard warning lights button, Heated rear window button, Onboard supply control unit	9
10. Main and dip beam relay, Onboard supply control unit, Front left headlight	10
11. Onboard supply control unit, Front right headlight	11
12. Reversing light switch, Onboard supply control unit, Left tail light, Right tail light	12
13. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	13
14. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	14
15. Control unit in dash panel insert, Dash panel insert	15
002 - Convenience system, 2-door vehicle	16-21
1. Convenience system, 2-door vehicle	16
2. Driver side central locking lock unit, Onboard supply control unit	17
3. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	18
4. Mirror adjustment switch, Onboard supply control unit	19
5. Front right window regulator switch, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger side exterior mirror	20
6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	21
003 - Fuse assignment	22-42
1. Fuse assignment	22
2. Fuse holder A	23
3. Fuse holder A, Fuse holder B	24
4. Fuse holder B	25
5. Air conditioning system relay, Main relay, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	26
6. Fuse 3 on fuse holder C, Fuse 4 on fuse holder C	27
7. Steering column combination switch, Steering angle sender, Fuse 5 on fuse holder C	28
8. Fuse 6 on fuse holder C	29
9. Terminal 15 voltage supply relay, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C	30
10. Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	31
11. Main and dip beam relay, Terminal 75 voltage supply relay 1, Emergency braking function sensor unit, Relay for emergency braking function, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C	32
12. Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C	33
13. Fuse 20 on fuse holder C, Fuse 21 on fuse holder C	34
14. Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C	35
15. Fuse 27 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C	36
16. Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 36 on fuse holder C	37
17. Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	38-39
18. Fuel pump relay, Fuse 42 on fuse holder C, Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C	40
19. Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 50 on fuse holder C	41
20. Voltage converter, Start/Stop operation button, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse 3 on fuse holder D, Fuse 4 on fuse holder D, Fuse 51 on fuse holder C	42
004 - 1.0l petrol engine . CHYA.CHYB	43-56

1. 1.0l petrol engine , CHYA,CHYB	43
2. Fuse holder C	44
3. Fuse holder C	45
4. Main relay, Engine/motor control unit, Terminal 75 voltage supply relay 1, Fuse holder C	46
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit	47
6. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	48
7. High-pressure sender, Air conditioning system relay, Radiator fan control unit, Air conditioning system control unit, Onboard supply control unit, Engine/motor control unit	49
8. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	50
9. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	51
10. Lambda probe, Lambda probe after catalytic converter, Throttle valve module, Onboard supply control unit, Engine/motor control unit	52
11. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	53
12. Brake light switch, Clutch pedal switch, Engine speed sender, Knock sensor 1, Onboard supply control unit, Engine/motor control unit, Camshaft control valve 1	54
13. Oil pressure switch, Fuel delivery unit, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, Dash panel insert	55
14. Starter, Alternator, Starter inhibitor relay, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	56
005 - Power assisted steering	57-58
1. Power assisted steering	57
2. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Electromechanical power steering warning lamp, Fuse holder C, Electromechanical power steering motor	58
006 - Anti-lock brake system (ABS)	59-61
1. Anti-lock brake system (ABS)	59
2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Fuse holder C	60
3. Brake fluid level warning contact, Parking brake contact switch, ABS control unit, Brake fluid level warning lamp, ABS warning lamp, Traction control system warning lamp, Brake system warning lamp	61
007 - Air conditioning system with manual regulation , (9AB)	62-65
1. Air conditioning system with manual regulation , (9AB)	62
2. Rotary light switch, High-pressure sender, Air conditioning system relay, Air conditioning system control unit, Fuse holder C, Fuse 2 on fuse holder C, Air conditioner compressor	63
3. Air conditioning system relay, Air conditioning system control unit	64
4. Fresh air blower switch, Evaporator temperature sensor, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fuse 37 on fuse holder C	65
008 - Manually controlled heater , (9AA)	66-67
1. Manually controlled heater , (9AA)	66
2. Rotary light switch, Heater control unit, Fresh air blower series resistor with overheating fuse, Fuse holder C, Fresh air blower	67
009 - Panoramic sliding sunroof	68-69
1. Panoramic sliding sunroof	68
2. Sliding sunroof adjustment, Sliding sunroof adjustment control unit, Onboard supply control unit, Fuse holder C, Sliding sunroof motor	69
010 - Rear parking aid (PDC) , (7X1)	70-71
1. Rear parking aid (PDC) , (7X1)	70
2. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	71
011 - Radio system , (8AU),(8UB)	72-76
1. Radio system , (8AU),(8UB)	72
2. Onboard supply control unit, Data bus diagnostic interface, Radio, Front left treble loudspeaker, Fuse holder C	73
3. Radio, Front left loudspeaker, Front right loudspeaker, Rear left loudspeaker, Front right treble loudspeaker	74
4. Radio, Roof aerial, Rear right loudspeaker, Aerial, Aerial filter, Digital radio aerial	75
5. Portable navigation and infotainment system, Interface for portable navigation and infotainment system, Radio	76
012 - Heated seats	77-79
1. Heated seats	77
2. Rotary light switch. Onboard supply control unit. Data bus diagnostic interface. Heated front	78

seats control unit, Fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	
3. Centre switch module in dash panel, Centre switch module 2 in dash panel, Button for left seat heating, Button for right seat heating, Heated front seats control unit	79
013 - Airbag systems	80-85
1. Airbag systems	80
2. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Fuse holder C	81
3. Steering column combination switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	82
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Seat occupied sensor, front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	83
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	84
6. Front airbag crash sensor for driver side, Airbag control unit, Dash panel insert, Airbag warning lamp, Diagnostic connection	85
014 - Radiator fan with air conditioning system	86-87
1. Radiator fan with air conditioning system	86
2. Radiator fan control unit, Engine control unit, Radiator fan	87
015 - Radiator fan with no air conditioning system , (9AA),(9AZ)	88-89
1. Radiator fan with no air conditioning system , (9AA),(9AZ)	88
2. Radiator fan thermal switch, Radiator fan	89
016 - Data bus network	90-94
1. Data bus network	90
2. ABS control unit, Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Diagnostic connection	91
3. Selector lever, Parking aid control unit, Power steering control unit, Automated manual gearbox control unit, Onboard supply control unit, Engine/motor control unit	92
4. Steering column combination switch, Steering angle sender, Climatronic control unit, Onboard supply control unit, Emergency braking function sensor unit, Portable navigation and infotainment system, Radio, Amplifier	93
5. Alternator, Rain and light sensor, Sliding sunroof adjustment control unit, Battery monitor control unit, Onboard supply control unit	94
017 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AT)	95-100
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AT)	95
2. Front left speed sensor, ABS control unit, Fuse holder C	96
3. Steering column combination switch, Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Steering angle sender, ABS control unit	97
4. Parking brake contact switch, Steering angle sender, Power steering control unit, Dash panel insert, ABS warning lamp, Brake system warning lamp	98
5. Brake fluid level warning contact, Emergency braking function sensor unit, Relay for emergency braking function, Dash panel insert, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS	99
6. Tyre Pressure Monitoring System button, Button for emergency braking function, Onboard supply control unit	100
018 - 1.0l petrol engine with start/stop system , CHYA,CHYB	101-116
1. 1.0l petrol engine with start/stop system , CHYA,CHYB	101
2. Fuse holder C	102
3. Fuse holder C	103
4. Fuse holder C	104
5. Air conditioning system relay, Main relay, Air conditioning system control unit, Engine/motor control unit, Terminal 75 voltage supply relay 1, Fuse holder B	105
6. Ignition/starter switch, Radiator fan control unit, Engine/motor control unit	106
7. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	107
8. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	108
9. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	109
10. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	110
11. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Throttle valve module, Onboard supply control unit, Engine/motor control unit	111
12. Brake light switch, Engine speed sender, Knock sensor 1, Clutch position sender, Onboard supply control unit. Engine/motor control unit. Camshaft control valve 1	112

13. Oil pressure switch, Fuel delivery unit, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, Dash panel insert	113
14. Brake servo pressure sensor, Gearbox neutral position sender, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	114
15. Voltage converter, Bonnet contact switch, Onboard supply control unit	115
16. Starter, Alternator, Start/Stop operation button, Battery monitor control unit, Onboard supply control unit, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	116
019 - Convenience system, 4-door vehicle	117-123
1. Convenience system, 4-door vehicle	117
2. Driver side central locking lock unit, Onboard supply control unit	118
3. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	119
4. Mirror adjustment switch, Onboard supply control unit	120
5. Front right window regulator switch, Front passenger side central locking lock unit, Onboard supply control unit, Passenger side exterior mirror	121
6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	122
7. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	123
020 - Automated manual gearbox	124-127
1. Automated manual gearbox	124
2. Rotary light switch, Selector lever, Automated manual gearbox control unit, Parking lock solenoid, Fuse holder C	125
3. Gearbox input speed sender, Automated manual gearbox control unit, Onboard supply control unit, Clutch actuator, Clutch actuator motor	126
4. Automated manual gearbox control unit, Gear actuator, Gear actuator motor 1, Gear actuator motor 2	127
021 - 1.0l natural gas engine EcoFuel , CPGA	128-147
1. 1.0l natural gas engine EcoFuel , CPGA	128
2. Fuse holder C	129
3. Fuse holder C	130
4. Fuse holder C	131
5. Main relay, Engine/motor control unit, Fuse holder B	132
6. Ignition/starter switch, Engine/motor control unit	133
7. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	134
8. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine/motor control unit	135
9. Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	136
10. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	137
11. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	138
12. High-pressure sender, Air conditioning system relay, Air conditioning system control unit, Onboard supply control unit, Engine/motor control unit	139
13. Engine speed sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Onboard supply control unit, Engine/motor control unit	140
14. Hall sender, Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine/motor control unit	141
15. Brake light switch, Clutch position sender, Onboard supply control unit, Engine/motor control unit, Camshaft control valve 1	142
16. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, High-pressure valve for gas mode	143
17. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	144
18. Starter, Alternator, Start/Stop operation button, Bonnet contact switch, Battery monitor control unit, Onboard supply control unit, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	145
19. Voltage converter, Onboard supply control unit	146
20. Oil pressure switch, Fuel delivery unit, Relay for gas shut-off valves, Dash panel insert, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2	147
022 - Radiator fan with air conditioning system	148-149
1. Radiator fan with air conditioning system	148
2. Engine/motor control unit, Fuse holder B, Fuse holder C, Radiator fan, Radiator fan	149
023 - Airbag systems for RHD vehicles , (L0R)	150-156
1. Airbag systems for RHD vehicles , (L0R)	150
2. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter 1. Side airbag igniter on driver side. Side airbag igniter on front	151

passenger side, Fuse holder C	
3. Steering column combination switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Driver seat belt tensioner igniter 1	152
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Seat occupied sensor, front passenger side, Airbag control unit, Front passenger seat belt tensioner igniter 1	153
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Front passenger side airbag deactivated warning lamp	154
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	155
7. Front airbag crash sensor for driver side, Airbag control unit, Dash panel insert, Airbag warning lamp, Diagnostic connection	156
024 - Sound system , (8RU),(9VG)	157-160
1. Sound system , (8RU),(9VG)	157
2. Amplifier, Fuse holder C	158
3. Front left loudspeaker, Front right loudspeaker, Amplifier, Front left treble loudspeaker, Front right treble loudspeaker	159
4. Rear left loudspeaker, Rear right loudspeaker, Amplifier, Subwoofer	160
025 - Basic equipment	161-176
1. Basic equipment	161
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	162
3. Terminal 15 voltage supply relay, Onboard supply control unit	163
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	164
5. Steering column combination switch, Onboard supply control unit	165
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	166
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit, Front interior light	167
8. Rotary light switch, Onboard supply control unit	168
9. Rotary light switch, Onboard supply control unit	169
10. Hazard warning lights button, Heated rear window button, Onboard supply control unit	170
11. Main and dip beam relay, Onboard supply control unit, Front left headlight	171
12. Onboard supply control unit, Front right headlight	172
13. Reversing light switch, Onboard supply control unit, Left tail light, Right tail light	173
14. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	174
15. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	175
16. Control unit in dash panel insert, Dash panel insert	176
026 - Convenience system	177-190
1. Convenience system	177
2. Onboard supply control unit, Fuse holder C	178
3. Onboard supply control unit	179
4. Onboard supply control unit	180
5. Onboard supply control unit	181
6. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp	182
7. Onboard supply control unit, Driver side exterior mirror	183
8. Mirror adjustment switch, Onboard supply control unit	184
9. Onboard supply control unit, Passenger side exterior mirror	185
10. Front right window regulator switch, Onboard supply control unit	186
11. Front passenger side central locking lock unit, Onboard supply control unit	187
12. Front passenger side central locking lock unit, Onboard supply control unit	188
13. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	189
14. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	190
027 - Basic equipment	191-206
1. Basic equipment	191
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	192
3. Terminal 15 voltage supply relay, Onboard supply control unit, Heated rear window	193
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor	194
5. Steering column combination switch. Onboard supply control unit. Windscreen and rear window	195

washer pump	
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	196
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit	197
8. Rotary light switch, Light switch, Onboard supply control unit	198
9. Rotary light switch, Onboard supply control unit, Front interior light	199
10. Hazard warning lights button, Heated rear window button, Onboard supply control unit	200
11. Main and dip beam relay, Onboard supply control unit, Left daytime running light bulb, Front left headlight	201
12. Onboard supply control unit, Right daytime running light bulb, Front right headlight	202
13. Reversing light switch, Onboard supply control unit, Left tail light, Right tail light	203
14. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	204
15. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	205
16. Control unit in dash panel insert, Dash panel insert	206
028 - Fuse assignment	207-226
1. Fuse assignment	207
2. Fuse holder A	208
3. Fuse holder A, Fuse holder B	209
4. Fuse holder B	210
5. Rotary light switch, Air conditioning system relay, Main relay, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	211
6. Rotary light switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C	212
7. Rotary light switch, Steering column combination switch, Fuse 5 on fuse holder C	213
8. Rotary light switch, Fuse 6 on fuse holder C	214
9. Rotary light switch, Terminal 15 voltage supply relay, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C	215
10. Rotary light switch, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	216
11. Rotary light switch, Main and dip beam relay, Terminal 75 voltage supply relay 1, Emergency braking function sensor unit, Relay for emergency braking function, Fuse 15 on fuse holder C	217
12. Rotary light switch, Fuse 14 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C	218
13. Rotary light switch, Fuse 20 on fuse holder C, Fuse 21 on fuse holder C	219
14. Rotary light switch, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C	220
15. Rotary light switch, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C	221
16. Rotary light switch, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 36 on fuse holder C	222
17. Rotary light switch, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	223
18. Rotary light switch, Fuel pump relay, Fuse 42 on fuse holder C, Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	224
19. Rotary light switch, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	225
20. Voltage converter, Start/Stop operation button, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse 3 on fuse holder D, Fuse 4 on fuse holder D	226
029 - Basic equipment	227-254
1. Basic equipment	227
2. Fuse holder A, Fuse holder B, Fuse holder C	228
3. Fuse holder C	229
4. Fuse holder C	230
5. Fuse holder C	231
6. Fuse holder C	232
7. Fuse holder C	233
8. Terminal 15 voltage supply relay, Fuse holder C	234
9. Main and dip beam relay, Side light relay, Relay and fuse carrier 1	235
10. Onboard supply control unit	236
11. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	237
12. Onboard supply control unit, Front left headlight	238
13. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	239

14. Onboard supply control unit, Front right headlight	240
15. Turn signal switch, Steering column combination switch, Onboard supply control unit	241
16. Steering column combination switch, Onboard supply control unit	242
17. Steering column combination switch, Onboard supply control unit	243
18. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine control unit	244
19. Rotary light switch, Onboard supply control unit	245
20. Rotary light switch, Onboard supply control unit, Cigarette lighter	246
21. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	247
22. Onboard supply control unit, Left tail light, Driver door lock unit	248
23. Reversing light switch, Onboard supply control unit, Right tail light	249
24. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	250
25. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Front interior light, Luggage compartment light	251
26. Onboard supply control unit, Diagnostic connection, Number plate light	252
27. Control unit in dash panel insert, Dash panel insert	253
28. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	254
030 - Fuse assignment	255-286
1. Fuse assignment	255
2. Fuse holder A	256
3. Fuse holder B	257
4. Fuse holder C	258
5. Fuse holder C	259
6. Fuse holder C	260
7. Fuse holder C	261
8. Fuse holder C	262
9. Fuse holder C	263
10. Fuse holder C	264
11. Fuse holder C	265
12. Fuse holder C	266
13. Fuse holder C	267
14. Fuse holder C	268
15. Fuse holder C	269
16. Fuse holder C	270
17. Fuse holder C	271
18. Fuse holder C	272
19. Fuse holder C	273
20. Fuse holder C	274
21. Fuel pump relay, Main and dip beam relay, Relay for emergency braking function, Relay and fuse carrier 1	275
22. Main relay, Side light relay, Relay and fuse carrier 1	276
23. Starter inhibitor relay, Relay for gas shut-off valves, Relay and fuse carrier 1	277
24. Air conditioning system relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	278
25. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Relay and fuse carrier 1	279
26. Voltage converter	280
27. Steering column combination switch	281
28. Steering column combination switch, Engine control unit	282
29. Onboard supply control unit, Engine control unit	283
30. Onboard supply control unit	284
31. Onboard supply control unit	285
32. Onboard supply control unit, Left daytime running light bulb, Right daytime running light bulb	286
031 - Radio system , (I6U),(I6V),(8UB)	287-292
1. Radio system , (I6U),(I6V),(8UB)	287
2. Onboard supply control unit, Radio, Fuse holder C	288
3. Radio, Internal microphone, USB connection 1	289
4. Radio, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker	290
5. Radio, Rear left loudspeaker, Rear right loudspeaker	291
6. Radio, Roof aerial, Radio aerial 2, Left aerial module	292
032 - Reversing camera (Rear Assist) , (KA1)	293-294
1. Reversing camera (Rear Assist) , (KA1)	293
2. Reversing light switch. Onboard supply control unit. Control unit 1 for information electronics.	294

Reversing camera, Fuse holder C	
033 - Climatronic , (9AK)	295-300
1. Climatronic , (9AK)	295
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fuse holder B, Fuse holder C, Fresh air blower	296
3. Air conditioning system relay, Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve	297
4. High-pressure sender, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Temperature flap	298
5. Climatronic control unit, Centre flap, Defroster flap	299
6. Climatronic control unit, Air flow flap	300
034 - Seat heating , (4A3)	301-304
1. Seat heating , (4A3)	301
2. Rotary light switch, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	302
3. Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	303
4. Centre switch module in dash panel, Centre switch module 2 in dash panel, Button for left seat heating, Heated front seats control unit	304
035 - Anti-lock brake system (ABS) , (1AT)	305-310
1. Anti-lock brake system (ABS) , (1AT)	305
2. Front left speed sensor, ABS control unit, Fuse holder C	306
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit	307
4. Brake fluid level warning contact, Parking brake contact switch, Emergency braking function sensor unit, Relay for emergency braking function, Dash panel insert, ABS warning lamp, Brake system warning lamp, Handbrake warning lamp, Warning lamp for electronic stabilisation program and TCS	308-309
5. Tyre Pressure Monitoring System button, Button for emergency braking function, Onboard supply control unit	310
036 - Basic equipment	311-339
1. Basic equipment	311
2. Fuse holder A, Fuse holder B, Fuse holder C	312
3. Fuse holder C	313
4. Fuse holder C	314
5. Fuse holder C	315
6. Fuse holder C	316
7. Fuse holder C	317
8. Terminal 15 voltage supply relay, Fuse holder C	318
9. Main and dip beam relay, Side light relay, Relay and fuse carrier 1	319
10. Onboard supply control unit	320
11. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	321
12. Onboard supply control unit, Front left headlight	322
13. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	323
14. Onboard supply control unit, Front right headlight	324
15. Turn signal switch, Steering column combination switch, Onboard supply control unit	325
16. Steering column combination switch, Onboard supply control unit	326
17. Steering column combination switch, Onboard supply control unit	327
18. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	328
19. Rotary light switch, Onboard supply control unit	329
20. Rotary light switch, Onboard supply control unit, Cigarette lighter	330
21. Rotary light switch, Onboard supply control unit	331
22. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	332
23. Onboard supply control unit, Left tail light, Driver door lock unit	333
24. Reversing light switch, Onboard supply control unit, Right tail light	334
25. Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	335
26. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Front interior light, Luggage compartment light	336
27. Onboard supply control unit, Diagnostic connection, Number plate light	337
28. Control unit in dash panel insert, Dash panel insert	338
29. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	339
037 - Fuse assignment	340-372
1. Fuse assignment	340

2. Fuse holder A	341
3. Fuse holder B	342
4. Fuse holder C	343
5. Fuse holder C	344
6. Fuse holder C	345
7. Fuse holder C	346
8. Fuse holder C	347
9. Fuse holder C	348
10. Fuse holder C	349
11. Fuse holder C, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	350
12. Fuse holder C	351
13. Fuse holder C	352
14. Fuse holder C	353
15. Fuse holder C	354
16. Fuse holder C	355
17. Fuse holder C	356
18. Fuse holder C	357
19. Fuse holder C	358
20. Fuse holder C	359
21. Voltage converter, Rotary light switch	360
22. Fuel pump relay, Relay for emergency braking function, Relay and fuse carrier 1	361
23. Main relay, Side light relay, Relay and fuse carrier 1	362
24. Starter inhibitor relay, Relay for gas shut-off valves, Relay and fuse carrier 1	363
25. Air conditioning system relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	364
26. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Relay and fuse carrier 1	365
27. Steering column combination switch	366
28. Steering column combination switch	367
29. Onboard supply control unit, Engine/motor control unit	368
30. Onboard supply control unit	369
31. Onboard supply control unit	370
32. Onboard supply control unit	371
33. Onboard supply control unit	372
038 - Fuse assignment	373-404
1. Fuse assignment	373
2. Fuse holder A	374
3. Fuse holder B	375
4. Fuse holder C	376
5. Fuse holder C	377
6. Fuse holder C	378
7. Fuse holder C	379
8. Fuse holder C	380
9. Fuse holder C	381
10. Fuse holder C, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	382
11. Fuse holder C	383
12. Fuse holder C	384
13. Fuse holder C	385
14. Fuse holder C	386
15. Fuse holder C	387
16. Fuse holder C	388
17. Fuse holder C	389
18. Fuse holder C	390
19. Fuse holder C	391
20. Rotary light switch, Fuel pump relay, Relay and fuse carrier 1	392
21. Main and dip beam relay, Main relay, Relay for emergency braking function, Relay and fuse carrier 1	393
22. Side light relay, Relay and fuse carrier 1	394
23. Starter inhibitor relay, Relay for gas shut-off valves, Relay and fuse carrier 1	395
24. Air conditioning system relay, Terminal 75 voltage supply relay 1, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	396
25. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Relay and fuse carrier 1	397
26. Voltage converter	398
27. Steering column combination switch	399

28. Steering column combination switch, Engine/motor control unit	400
29. Onboard supply control unit, Engine/motor control unit	401
30. Onboard supply control unit	402
31. Onboard supply control unit	403
32. Onboard supply control unit	404
039 - 1.0l natural gas engine EcoFuel , CPGA	405-423
1. 1.0l natural gas engine EcoFuel , CPGA	405
2. Fuse holder B, Fuse holder C	406
3. Fuse holder C	407
4. Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	408
5. Main relay, Onboard supply control unit	409
6. Steering column electronics control unit, Engine/motor control unit	410
7. High-pressure sender, Air conditioning system control unit, Steering column electronics control unit, Engine/motor control unit	411
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	412
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	413
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	414
11. Accelerator pedal module, Engine/motor control unit	415
12. Engine speed sender, Coolant temperature sender, Throttle valve module, Engine/motor control unit	416
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit	417
14. Brake light switch, Knock sensor 1, Clutch position sender, Engine/motor control unit, Camshaft control valve 1	418
15. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Engine/motor control unit, High-pressure valve for gas mode	419
16. Engine/motor control unit	420
17. Starter, Alternator, Bonnet contact switch, Battery monitor control unit, Starter relay 1, Starter relay 2	421
18. Voltage converter, Start/Stop operation button, Relay for gas shut-off valves, Start/Stop operation warning lamp, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2	422
19. Oil pressure switch, Fuel delivery unit, Dash panel insert	423
040 - 1.0l petrol engine , CHYA,CHYB,(7L3),(7L6)	424-439
1. 1.0l petrol engine , CHYA,CHYB,(7L3),(7L6)	424
2. Fuse holder B, Fuse holder C	425
3. Fuse holder C	426
4. Onboard supply control unit, Data bus diagnostic interface	427
5. Onboard supply control unit, Engine/motor control unit	428
6. Air conditioning system control unit, Engine/motor control unit	429
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	430
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	431
9. Accelerator pedal module, Engine/motor control unit	432
10. Intake manifold sender, Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, High-pressure sender, Engine/motor control unit	433
11. Knock sensor 1, Clutch position sender, Throttle valve module, Engine/motor control unit	434
12. Brake light switch, Fuel pump relay, Engine/motor control unit, Camshaft control valve 1	435
13. Oil pressure switch, Fuel delivery unit, Engine/motor control unit, Dash panel insert	436
14. Brake servo pressure sensor, Gearbox neutral position sender, Main relay, Engine/motor control unit, Terminal 75 voltage supply relay 1	437
15. Voltage converter, Alternator, Bonnet contact switch, Battery monitor control unit	438
16. Starter, Start/Stop operation button, Starter inhibitor relay, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	439
041 - 1.0l petrol engine , CHZA	440-459
1. 1.0l petrol engine , CHZA	440
2. Starter, Battery monitor control unit, Fuse holder B	441
3. Voltage converter, Fuse holder C	442
4. Fuse holder C	443
5. Main relay, Terminal 75 voltage supply relay 1, Starter relay 1, Starter relay 2, Fuse and relay carrier	444
6. Onboard supply control unit, Data bus diagnostic interface	445
7. Engine/motor control unit	446

8. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	447
9. Brake light switch, Clutch pedal switch, Clutch position sender, Engine/motor control unit	448
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air conditioning system control unit, Engine/motor control unit	449
11. Radiator outlet coolant temperature sender, Engine/motor control unit	450
12. Alternator, Oil pressure sender, High-pressure sender, Engine/motor control unit	451
13. Start/Stop operation button, Air conditioning system relay, Engine/motor control unit, Start/Stop operation warning lamp, Vacuum pump for brakes	452
14. Hall sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	453
15. Intake manifold sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	454
16. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	455
17. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	456
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	457
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	458
20. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	459
042 - Multifunction steering wheel , (2PP),(2ZH)	460-462
1. Multifunction steering wheel , (2PP),(2ZH)	460
2. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Driver side airbag igniter, Fuse holder C	461
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	462
043 - Ambient lighting , (QQ3)	463-464
1. Ambient lighting , (QQ3)	463
2. Rotary light switch, Onboard supply control unit, Fuse holder C, Light conductor for front centre console ambient lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	464
044 - Dual headlight , (8IE)	465-480
1. Dual headlight , (8IE)	465
2. Fuse holder A, Fuse holder C	466
3. Fuse holder C	467
4. Fuse holder C	468
5. Fuse holder C	469
6. Fuse holder C	470
7. Main and dip beam relay, Relay and fuse carrier 1	471
8. Onboard supply control unit	472
9. Headlight range control regulator, Onboard supply control unit, Front left headlight, Left headlight range control motor	473
10. Onboard supply control unit, Front right headlight, Right headlight range control motor	474
11. Turn signal switch, Steering column combination switch, Onboard supply control unit	475
12. Rotary light switch, Onboard supply control unit	476
13. Rotary light switch, Onboard supply control unit	477
14. Rotary light switch, Onboard supply control unit	478
15. Onboard supply control unit	479
16. Control unit in dash panel insert, Dash panel insert	480
045 - Basic equipment	481-510
1. Basic equipment	481
2. Fuse holder A, Fuse holder B, Fuse holder C	482
3. Fuse holder C	483
4. Fuse holder C	484
5. Fuse holder C	485
6. Fuse holder C	486
7. Terminal 15 voltage supply relay, Fuse holder C	487
8. Main and dip beam relay, Fuse holder C, Relay and fuse carrier 1	488
9. Side light relay, Relay and fuse carrier 1	489
10. Onboard supply control unit	490
11. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	491
12. Onboard supply control unit, Front left headlight	492
13. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	493
14. Onboard supply control unit, Front right headlight	494
15. Turn signal switch. Steering column combination switch. Onboard supply control unit	495

16. Steering column combination switch, Onboard supply control unit	496
17. Steering column combination switch, Onboard supply control unit	497
18. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	498
19. Rotary light switch, Onboard supply control unit	499
20. Rotary light switch, Onboard supply control unit, Cigarette lighter	500
21. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	501
22. Onboard supply control unit, Left tail light, Driver door lock unit	502
23. Reversing light switch, Onboard supply control unit, Right tail light	503
24. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	504
25. Onboard supply control unit, High-level brake light bulb, Heated rear window	505
26. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	506
27. Onboard supply control unit, Front interior light, Luggage compartment light	507
28. Onboard supply control unit, Diagnostic connection, Number plate light	508
29. Control unit in dash panel insert, Dash panel insert	509
30. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	510
046 - 1.0l petrol engine , DKRA	511-530
1. 1.0l petrol engine , DKRA	511
2. Starter, Battery monitor control unit, Fuse holder B	512
3. Voltage converter, Fuse holder C	513
4. Fuse holder C	514
5. Main relay, Starter relay 1, Starter relay 2, Fuse and relay carrier	515
6. Onboard supply control unit, Data bus diagnostic interface	516
7. Engine/motor control unit	517
8. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	518
9. Brake light switch, Clutch position sender, Engine/motor control unit	519
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air conditioning system control unit, Engine/motor control unit	520
11. Radiator outlet coolant temperature sender, Engine/motor control unit	521
12. High-pressure sender, Air conditioning system relay, Engine/motor control unit, Vacuum pump for brakes	522
13. Alternator with voltage regulator, Start/Stop operation button, Engine/motor control unit, Start/Stop operation warning lamp	523
14. Charge pressure sender, Engine/motor control unit, Charge pressure positioner	524
15. Intake manifold sender, Hall sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	525
16. Throttle valve module, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	526
17. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	527
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump, Air conditioner compressor	528
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	529
20. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	530
047 - Dual headlight , (8IE)	531-546
1. Dual headlight , (8IE)	531
2. Fuse holder A, Fuse holder C	532
3. Fuse holder C	533
4. Fuse holder C	534
5. Fuse holder C	535
6. Fuse holder C	536
7. Relay and fuse carrier 1	537
8. Onboard supply control unit	538
9. Headlight range control regulator, Onboard supply control unit, Front left headlight, Left headlight range control motor	539
10. Onboard supply control unit, Front right headlight, Right headlight range control motor	540
11. Turn signal switch, Steering column combination switch, Onboard supply control unit	541
12. Rotary light switch, Onboard supply control unit	542
13. Rotary light switch, Onboard supply control unit	543
14. Rotary light switch, Onboard supply control unit	544
15. Onboard supply control unit	545

16. Control unit in dash panel insert, Dash panel insert	546
801 - -Fitting locations: Earth points - 3	547-550
1. Earth points	547-550
1.1 Earth points in the front part of the vehicle	547-548
1.2 Earth points in the middle part of the vehicle	549
1.3 Earth points in the rear part of the vehicle	550
802 - -Fitting locations: Fuses - 3	551-605
1. Fuses	551-605
1.1 Overview of fuse brackets	551
1.2 Fitting location Fuse holder A -SA-	552
1.3 Fuse assignment Fuse holder A -SA-	553
1.3.1 Fuse assignment Fuse holder A -SA-, from August 2011 onwards	553
1.3.2 Fuse assignment Fuse holder A -SA-, from May 2013 onwards	553
1.4 Fitting location Fuse holder B -SB-	554
1.5 Fuse assignment Fuse holder B -SB-	555-557
1.5.1 Fuse assignment Fuse holder B -SB-, from August 2011 onwards	555
1.5.2 Fuse assignment Fuse holder B -SB-, from May 2013 onwards	556
1.5.3 Fuse assignment Fuse holder B -SB-, from November 2015 onwards	556
1.5.4 Fuse assignment Fuse holder B -SB-, from August 2016 onwards	557
1.6 Fuse holder C -SC-	558-601
1.6.1 installation Fuse holder C -SC-, Left-hand drive, from August 2011	558-559
1.6.2 installation Fuse holder C -SC-, Left-hand drive, from November 2015	560
1.6.3 installation Fuse holder C -SC-, Right hand drive, from August 2011	560-561
1.6.4 installation Fuse holder C -SC-, Right hand drive, from November 2015	562
1.6.5 Fuse assignment Fuse holder C -SC-, from August 2011 onwards	563-565
1.6.6 Fuse assignment Fuse holder C -SC-, from May 2013 onwards	566-569
1.6.7 Fuse assignment Fuse holder C -SC-, from November 2014 onwards	570-573
1.6.8 Fuse assignment Fuse holder C -SC-, from May 2015 onwards	574-576
1.6.9 Fuse assignment Fuse holder C -SC-, from November 2015 onwards	577-582
1.6.10 Fuse assignment Fuse holder C -SC-, from August 2016 onwards	583-589
1.6.11 Fuse assignment Fuse holder C -SC-, from November 2016 onwards	590-595
1.6.12 Fuse assignment Fuse holder C -SC-, from November 2017 onwards	596-601
1.7 Fuse holder D -SD-	602-603
1.7.1 Installation Fuse holder D -SD-, Left-hand drive	602
1.7.2 fuse assignment Fuse holder D -SD-, from August 2011	603
1.8 fuse assignment Fuse holder D -SD-, from May 2013	604-605
803 - -Fitting locations: Relay - 3	606-613
1. Relay	606-613
1.1 Overview of the relay carrier	606
1.2 location and location of relays for Relay and fuse holder 1 -SR1-, under the dash panel on the left	607-609
1.2.1 Relay location Relay and fuse carrier 1 -SR1-, Left-hand drive, from August 2011	607
1.2.2 Relay location Relay and fuse carrier 1 -SR1-, Left-hand drive, from May 2015	608-609
1.3 Installation location and relay location assignment Relay and fuse carrier 1 -SR1-, under the dashboard on the right	610-613
1.3.1 Relay location Relay and fuse carrier 1 -SR1-, Right hand drive, from August 2011	610
1.3.2 Relay location Relay and fuse carrier 1 -SR1-, Right hand drive, from May 2015	611-613
804 - -Fitting locations: Control units in engine compartment - 3	614-631
1. Control units in engine compartment	614-631
1.1 Overview of the control units in the engine compartment	614-615
1.2 Electronic manual gearbox control unit -J514-	616
1.3 Radiator fan control unit -J293-	617-622
1.3.1 Radiator fan control unit -J293-, -T4g,T6g-	617-618
1.3.2 Radiator fan control unit -J293-, -T10g-	619-620
1.3.3 Radiator fan control unit -J293-, -T4ag-	621-622
1.4 Engine control unit -J623-	623-625
1.4.1 Engine control unit -J623-	623
1.4.2 Engine control unit -J623-, only for TSI engine	624-625
1.5 Wiper motor control unit J400-	626-628
1.6 ABS control unit -J104-	629-631
805 - -Fitting locations: Control units in passenger compartment - 3	632-672
1. Control units in passenger compartment	632-672
1.1 Overview of the control units	632-633
1.2 Airbag control unit -J234-	634
1.3 PID (Portable navigation and infotainment system) -J982-	635
1.4 Emeraencv brake sensor unit -J939-	636-637

1.5 Heater control unit -J162-	638-639
1.6 Air conditioning system control unit-J301-	640-641
1.7 Climatronic control unit -J255-	642-643
1.8 Sliding sunroof control unit -J245-	644-645
1.9 Rear window wiper motor -V12-	646-647
1.10 Parking aid control unit -J446-	648-649
1.11 Heated front seat control unit -J774-	650-652
1.12 Voltage transformer DCDC1 -A19-	653-654
1.13 Control unit in dash panel insert -J285-	655-656
1.14 Power steering control unit -J500-	657-659
1.15 Amplifier -R12-	660-661
1.16 Onboard control unit -J519-	662-667
1.17 Radio -R-	668-672
806 - -Fitting locations: Coupling stations and plug connections of wiring harnesses - 3	673-700
1. Coupling stations and plug connections of wiring harnesses	673-700
1.1 Overview of the coupling stations and plug connections	673-676
1.2 Coupling station of electronic manual gearbox	677
1.3 Coupling station at heating and air conditioning unit -T2bh-	678
1.4 Coupling station on the A-pillar, right, in the door, frontright	679
1.5 Coupling station in the centre of dash panel, -T2bm-, -T2bn-, -J983-, -T12b-	680
1.6 Dash panel switch modules, centre, -EX22-, -EX35-, -T16b-, -T16c-	681-682
1.7 Coupling station under the front seat, right, -T2ao-, -T3m-, -T2ap-, -T2x-	683
1.8 Coupling station of panoramic sliding roof, -T2p-, -T4p-	684
1.9 Coupling station at the aerial, -T2bl-	685
1.10 Coupling station in rear left bumper	686
1.11 Coupling station in the tailgate, -T5c-, -T5d-, -T5m-, -T5o-	687
1.12 Coupling station under the front seat, left, -T2an-, -T3c-, -T2v-	688
1.13 Centre console switch module, -EX23-, -T8c-	689
1.14 Diagnostic connection, -U31-, -T16f-	690-692
1.15 Coupling station on the A-pillar, left -T28a-, in the door, front left -T8f-	693
1.16 Coupling station in engine compartment, front left; -T4f-, -T14-	693
1.17 Coupling station of radiator fan, -T3o-	694
1.18 Coupling station of accelerator pedal, -T6p- 1	695
1.19 Coupling station on the B-pillar, left -T28b-	696
1.20 Coupling station on the B-pillar, right -T28c-	697
1.21 Coupling station for fuel delivery unit -T10i-	698
1.22 Coupling station for ambient lighting; -T2eh-, -T2eg-	699-700