



Contents

1	General points	1
1.1	Vehicle identification number	1
1.2	Type plate	3
1.3	Storage of ŠKODA new vehicles	3
1.4	Vehicle handover from stock	3
1.5	Additional customer information regarding inspection and maintenance	3
1.6	Determine the age of the vehicle	4
1.7	Checking the vehicle log book	4
2	Inspections	5
2.1	Pre-Delivery Inspection -PDI- (Export)	5
2.2	Pre-sales Inspection - domestic (Czech Republic)	7
2.3	Delivery Inspection (Export)	11
2.4	Inspection	15
2.5	service intervals	21
3	Engines	23
3.1	Engine overview - Electric motor	23
3.2	Electric motor identification	25
3.3	Visual inspection of engine and parts in the engine compartment for leaks and damage	25
3.4	Cooling system: check	26
3.5	General warnings for work on the high-voltage system	30
3.6	Check that the charging cable is present and in good condition	30
3.7	Check the charging state for the high-voltage battery, charge if required	30
3.8	Check the warning sticker	31
3.9	High-voltage charging socket in the tank flap: Visual inspection for dirt and damage	31
3.10	High-voltage components and high-voltage cables: Visual inspection for damage, correct cable routing and fastening	31
4	Gearbox	32
4.1	Check final drive and joint boots for leaks and damage	32
5	Chassis	33
5.1	Inspecting thickness of front and rear brake pads/linings	33
5.2	Inspecting brake system for leaks and damage	37
5.3	Change brake fluid	37
5.4	Brake fluid level: check.	43
5.5	Front and rear axles: check	44
5.6	Tyres: check	46
5.7	Tightening wheel bolts to specific torque	51
5.8	Tyre pressure monitoring indicator: calibration	51
5.9	Transport lock: remove the front axle locking components	52
5.10	Breakdown kit: check	53
6	Electrical System	55
6.1	Electric consumers: check they are functioning	55
6.2	Front and rear exterior lighting: check	56
6.3	Interior lights: check	56
6.4	Checking battery	56
6.5	Check the function of the Infotainment	56
6.6	Setting clock	57
6.7	Connect diagnostic unit	58
6.8	Check language version of driver's instructions	58
6.9	Climatology: set the temperature to 22 °C	58
6.10	Resetting service interval display (SID)	59
6.11	Inspecting the headlight beam setting	59
6.12	Check for proper operation of automatic light	71
6.13	Checking the function of the daylight driving light	71



6.14	Carrying out diagnostic step: delivery inspection, overall delivery inspection	71
6.15	Time-delayed locking mechanism after closing the tailgate - activate/deactivate	72
6.16	Replace OCU control unit (control unit for emergency call module and communication unit J949)	72
6.17	Check that the emergency call system is ready	73
6.18	Škoda Connect services	75
6.19	Update software in infotainment and check the digital instructions	76
7	Body	78
7.1	Airbag: check for proper operation	78
7.2	Front passenger airbag: check "ON/OFF" is working and switch to "ON"	78
7.3	Inspecting underbody protection for damage	80
7.4	Checking body paintwork and underbody protection for damage (before sale)	80
7.5	Check for corrosion	81
7.6	Inspecting plenum chamber and water drain openings for dirt, cleaning if necessary	81
7.7	Windscreen wash/wipe system: check	81
7.8	Door locks, locking buttons and child lock: check functioning correctly	84
7.9	Replacing the dust and odour filter	85
7.10	Stick the sticker Škoda Assistance	85
7.11	Front flap lock: lubricate	86
7.12	Air conditioning system with heat pump: Replace refrigerant R744 (CO ₂)	86
8	Exhaust-emission analysis	87
9	Miscellaneous	88
9.1	Towing the vehicle	88
9.2	Road test	89
9.3	Raise vehicle	90
10	PTI - Periodic Technical Inspection	92
10.1	PTI - Periodic Technical Inspection	92
10.2	General description of the electromechanical parking brake	102
10.3	Electronic vehicle interface	103
10.4	Check steering system	103