



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 Allocation of PR number - brakes	2
<b>3 Technical data</b>	<b>3</b>
3.1 Technical data for brakes	3
<b>4 Brake test</b>	<b>4</b>
4.1 Brake check on single-axle roller dynamometer	4
4.2 Checking electromechanical parking brake	4
<b>5 Electrical components</b>	<b>5</b>
5.1 Access to diagnoses	5
<b>45 - Anti-lock brake system</b>	<b>7</b>
<b>1 Safety information and repair notes</b>	<b>7</b>
1.1 Safety information	7
1.2 Repair instructions	7
<b>2 Overview of fitting locations</b>	<b>8</b>
2.1 Overview of fitting locations – ABS/ESP	8
<b>3 Control unit and hydraulic unit</b>	<b>11</b>
3.1 Assembly overview – control unit and hydraulic unit	11
3.2 Removing and installing ABS control unit [J104]/ABS hydraulic unit [N55]	16
3.3 Separating control unit from and connecting to hydraulic unit	24
3.4 Connecting brake lines to hydraulic unit	27
<b>4 Sensors</b>	<b>32</b>
4.1 Assembly overview – speed sensor on front axle	32
4.2 Assembly overview – speed sensors on rear axle	32
4.3 Removing and installing speed sensor on front axle [G45]/[G47]	33
4.4 Removing and installing speed sensor on rear axle [G44]/[G46]	34
4.5 Checking ABS sensor ring	35
<b>46 - Brakes - mechanism</b>	<b>37</b>
<b>1 Safety information and repair notes</b>	<b>37</b>
1.1 Safety information	37
1.2 Repair instructions	37
<b>2 Front brake</b>	<b>38</b>
2.1 Assembly overview – front brake	38
2.2 Removing and installing brake pads	40
2.3 Removing and installing brake caliper	45
2.4 Removing and installing brake disc	49
<b>3 Rear brake</b>	<b>51</b>
3.1 Assembly overview - rear brake, drum brake version	51
3.2 Assembly overview – brake shoes	53
3.3 Removing and installing brake backplate	55
3.4 Removing and installing gasket for brake backplate	57
3.5 Removing and installing brake shoes	59
3.6 Removing and installing brake drum	67
<b>4 Parking brake</b>	<b>69</b>
4.1 Assembly overview - parking brake	69
4.2 Removing and installing control unit for electromechanical parking brake [J540]	69



4.3	Removing and installing parking brake motor [V282]/[V283] .....	70
<b>5</b>	<b>Brake pedal</b> .....	<b>72</b>
5.1	Assembly overview – brake pedal .....	72
5.2	Separating brake pedal from and joining to brake servo .....	73
5.3	Removing and installing brake pedal .....	74
5.4	Removing and installing mounting of brake pedal on push rod .....	76
5.5	Removing and installing mounting bracket .....	77
<b>47</b>	<b>- Brakes - hydraulics</b> .....	<b>82</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>82</b>
1.1	Safety information .....	82
1.2	Repair instructions .....	82
<b>2</b>	<b>Brake servo and brake master cylinder</b> .....	<b>83</b>
2.1	Assembly overview – brake servo/brake master cylinder .....	83
2.2	Removing and installing brake master cylinder .....	87
2.3	Removing and installing brake servo .....	89
<b>3</b>	<b>Hydraulic system</b> .....	<b>100</b>
3.1	Bleeding hydraulic system .....	100
3.2	Bleeding hydraulic system (additional bleeding procedure) .....	101
3.3	Brake fluid change .....	102
3.4	Leak test .....	102
3.5	Checking wheel brake cylinder for leaks .....	103